

Raymarine®

Mounting template printing instructions

Important information

Caution: Ensure mounting template is printed true-to-scale

Before modifying mounting surface, ensure actual printed template matches the measurements provided in the template document.

Caution: Ensure correct printer settings

The default print settings provided by Adobe Acrobat and other applications are NOT suitable for printing this document correctly. Before printing document, ensure the recommended Raymarine print settings are used.

Configuring Adobe Acrobat to use Raymarine recommended print settings

Adobe Acrobat must be configured correctly to ensure mounting templates print true-to-scale.

With the mounting template document open in Acrobat Reader:

1. Select **File > Properties**.
2. Make a note of the Page Size.
3. Select **File > Print**.

The print dialog is displayed.

4. Select **Properties**.
5. Ensure the paper size is set to the same dimensions as the page size identified in Step 1.
6. Click OK to return to the print settings dialog.
7. Ensure "Size Options" and "Page Scaling" options (as appropriate) are set to "Actual Size" or "None".
8. Ensure the "Auto-Rotate and Center" or "Auto portrait / landscape" option (as appropriate) is NOT ticked.
9. Select the relevant orientation to match the template document orientation ("portrait" or "landscape"; most templates are landscape).

Dragonfly surface mount adaptor mounting template

