



AXIOM™ 2 XL

MFD / CHARTPLOTTER

INSTALLATION INSTRUCTIONS

English (en-US)
Date: 02-2023
Document number: 87445 (Rev 3)
© 2023 Raymarine UK Limited

Raymarine®

Legal notices

Trademark and patents notice

Raymarine, Tacktick, Clear Pulse, Truzoom, SeaTalk, SeaTalk^{hs}, SeaTalkng, and **Micronet**, are registered or claimed trademarks of Raymarine Belgium.

FLIR, YachtSense, DockSense, LightHouse, RangeFusion, DownVision, SideVision, RealVision, HyperVision, Dragonfly, Element, Quantum, Axiom, Instalert, Infrared Everywhere, The World's Sixth Sense and **ClearCruise** are registered or claimed trademarks of FLIR Systems, Inc.

All other trademarks, trade names, or company names referenced herein are used for identification only and are the property of their respective owners.

This product is protected by patents, design patents, patents pending, or design patents pending.

Fair Use Statement

You may print no more than three copies of this manual for your own use. You may not make any further copies or distribute or use the manual in any other way including without limitation exploiting the manual commercially or giving or selling copies to third parties.

CONTENTS

CHAPTER 1 IMPORTANT INFORMATION	9		
Safety warnings	9		
Product warnings	9		
Regulatory notices	9		
Regulatory e-Label	9		
Declaration of Conformity	9		
RF exposure	10		
Compliance Statement (Part 15.19)	10		
FCC Interference Statement (Part 15.105 (b))	10		
Innovation, Science and Economic Development Canada (ISED)	10		
Innovation, Sciences et Développement économique Canada (Français)	10		
Disclaimer	10		
Electronic chart data	10		
Warranty registration	11		
Product disposal	11		
IMO and SOLAS	11		
Technical accuracy	11		
Publication copyright	11		
CHAPTER 2 DOCUMENT INFORMATION	12		
2.1 Applicable products	13		
2.2 Document information	13		
2.3 Document conventions	13		
2.4 Document illustrations	13		
2.5 Product documentation	13		
User manuals Print Shop	14		
2.6 LightHouse™ 4 operation instructions	14		
Multifunction display software version	14		
CHAPTER 3 PRODUCT AND SYSTEM OVERVIEW	15		
3.1 Product overview	16		
3.2 Additional components	17		
3.3 Typical systems	17		
CHAPTER 4 PARTS SUPPLIED	20		
4.1 Parts supplied	21		
4.2 Additional parts supplied in MFD kit	21		
CHAPTER 5 PRODUCT DIMENSIONS	22		
5.1 Product dimensions	23		
CHAPTER 6 LOCATION REQUIREMENTS	24		
6.1 Warnings and cautions	25		
6.2 General location requirements	25		
Rear access requirements	25		
6.3 Axiom® 2 XL 24 above decks installation requirements	25		
6.4 GNSS (GPS) location requirements	26		
6.5 Touchscreen location requirements	26		
6.6 Wireless location requirements for optimum performance	26		
6.7 Viewing angle considerations	27		
6.8 EMC installation guidelines	28		

RF interference	28	Grounding — optional grounding point	43
Compass safe distance	28		
CHAPTER 7 INSTALLATION	29	CHAPTER 10 NETWORK CONNECTIONS	44
7.1 Tools required	30	10.1 NMEA 2000 / SeaTalkng connection.....	45
7.2 Mounting options	30	10.2 NMEA 0183 connection.....	45
7.3 Rear access requirements	30	10.3 Network connection	46
7.4 Preparing the mounting surface — surface mounting	31	Cable suppression ferrites	47
7.5 Preparing the mounting surface — flush mounting	31	10.4 Power over Ethernet (PoE)	47
7.6 Fitting the gasket tape	32	Power over Ethernet (PoE) connections.....	47
7.7 Mounting	33		
CHAPTER 8 CABLES AND CONNECTIONS — GENERAL INFORMATION	35	CHAPTER 11 VIDEO CONNECTIONS	49
8.1 General cabling guidance.....	36	11.1 Analog video (Video 1) connection	50
Cable types and length	36	11.2 Analog video (Video 2) connection	50
Cable routing	36	11.3 HDMI IN connection.....	50
Strain relief	36	11.4 HDMI OUT connection	51
Circuit isolation	36		
Cable shielding	36	CHAPTER 12 USB CONNECTIONS	53
8.2 Connections overview	37	12.1 Touch control input connection.....	54
8.3 Connecting cables	37	12.2 Touch out connection	54
8.4 Bare end wire connections	38	12.3 Accessory connection.....	55
CHAPTER 9 POWER CONNECTIONS	39	CHAPTER 13 AUDIO CONNECTIONS.....	56
9.1 Power connection	40	13.1 Audio (RCA) connections	57
Inline fuse and thermal breaker ratings.....	40		
Power distribution.....	40	CHAPTER 14 ALARM BUZZER AND GNSS ANTENNA CONNECTIONS	58
		14.1 External alarm connection.....	59
		14.2 GNSS (GPS) antenna connection	59
		CHAPTER 15 MAINTAINING YOUR DISPLAY	60
		15.1 Service and maintenance	61
		Routine equipment checks	61

15.2 Product cleaning	61	18.5 Connections specification	78
Cleaning the display case	61	18.6 Internal GNSS (GPS) receiver specification	78
Cleaning the display screen	61	18.7 Conformance/approvals	79
Cleaning the suncover	61	18.8 Product markings	79
CHAPTER 16 TROUBLESHOOTING	62	CHAPTER 19 AXIOM 2 XL 19 TECHNICAL SPECIFICATION	80
16.1 Troubleshooting	63	19.1 Power specification	81
16.2 LED Diagnostics	63	19.2 Environmental specification	81
16.3 Power up troubleshooting	64	19.3 LCD specification	81
Performing a power on reset on touch only displays	64	19.4 Physical specification	81
Saving crash logs	65	19.5 Connections specification	82
16.4 GNSS (GPS) troubleshooting	65	19.6 Internal GNSS (GPS) receiver specification	82
16.5 Sonar troubleshooting	66	19.7 Conformance/approvals	83
16.6 Wi-Fi troubleshooting	68	19.8 Product markings	83
16.7 Touchscreen troubleshooting	70	CHAPTER 20 AXIOM 2 XL 22 TECHNICAL SPECIFICATION	84
16.8 Miscellaneous troubleshooting	70	20.1 Power specification	85
CHAPTER 17 TECHNICAL SUPPORT	72	20.2 Environmental specification	85
17.1 Raymarine product support and servicing	73	20.3 LCD specification	85
Viewing product information	74	20.4 Physical specification	85
Remote Support via AnyDesk	74	20.5 Connections specification	86
17.2 Learning resources	74	20.6 Internal GNSS (GPS) receiver specification	86
CHAPTER 18 AXIOM 2 XL 16 TECHNICAL SPECIFICATION	76	20.7 Conformance/approvals	87
18.1 Power specification	77	20.8 Product markings	87
18.2 Environmental specification	77	CHAPTER 21 AXIOM 2 XL 24 TECHNICAL SPECIFICATION	88
18.3 LCD specification	77	21.1 Power specification	89
18.4 Physical specification	77	21.2 Environmental specification	89

21.3 LCD specification	89
21.4 Physical specification	89
21.5 Connections specification	90
21.6 Internal GNSS (GPS) receiver specification.....	90
21.7 Conformance/approvals.....	91
21.8 Product markings.....	91
CHAPTER 22 SPARES AND ACCESSORIES	92
22.1 Accessories.....	93
22.2 Spares	93
22.3 RayNet to RayNet cables and connectors.....	94
RayNet to RJ45, and RJ45 (SeaTalkhs)	
adapter cables	95
22.4 SeaTalkng [®] cables and accessories.....	97
APPENDIX A NMEA 2000 PGNS	101

CHAPTER 1: IMPORTANT INFORMATION

Safety warnings



Warning: Product installation and operation

- This product must be installed and operated in accordance with the instructions provided. Failure to do so could result in personal injury, damage to your vessel and/or poor product performance.
- Raymarine highly recommends certified installation by a Raymarine approved installer. A certified installation qualifies for enhanced product warranty benefits. Register your warranty on the Raymarine website: www.raymarine.com/warranty



Warning: High voltage

This product contains high voltage. Adjustments require specialized service procedures and tools only available to qualified service technicians. There are no user serviceable parts or adjustments. The operator should never remove the cover or attempt to service the product.



Warning: Switch off power supply

Ensure the vessel's power supply is switched OFF before starting to install this product. Do NOT connect or disconnect equipment with the power switched on, unless instructed in this document.



Warning: Potential ignition source

This product is NOT approved for use in hazardous/flammable atmospheres. Do NOT install in a hazardous/flammable atmosphere (such as in an engine room or near fuel tanks).

Product warnings

Caution: Product weight

- Refer to the technical specification for your product to ensure the intended mounting surface is suitable to bear its weight.
- 2 people may be required for installation of larger / heavier products.



Warning: Marine-grade sealant

Only use marine-grade neutral cure polyurethane sealants. Do NOT use sealants containing acetate or silicone, which can cause damage to plastic parts.

Regulatory notices

Regulatory e-Label

All the applicable regulatory and compliance standards for your product are listed in electronic format in a regulatory “e-label” document, which can be viewed on your product's display.

To access the Regulatory e-Label for your product:

From the Homescreen: [*Settings > Getting Started > Regulatory Approvals*]

Declaration of Conformity

FLIR Belgium BVBA declares that the products listed below are in compliance with the EMC Directive 2014/53/EU:

- Axiom® 2 XL 16 multifunction display, part number E70661
- Axiom® 2 XL 19 multifunction display, part number E70662
- Axiom® 2 XL 22 multifunction display, part number E70663
- Axiom® 2 XL 24 multifunction display, part number E70664

The original Declaration of Conformity certificate may be viewed on the relevant product page at www.raymarine.com/manuals.

RF exposure

This equipment complies with FCC / ISED RF exposure limits for general population / uncontrolled exposure. The wireless LAN / Bluetooth antenna is mounted behind the front facia of the display. This equipment should be installed and operated with a minimum distance of 1 cm (0.39 in) between the device and the body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter, except in accordance with FCC multi-transmitter product procedures.

Compliance Statement (Part 15.19)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

FCC Interference Statement (Part 15.105 (b))

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio / TV technician for help.

Innovation, Science and Economic Development Canada (ISED)

This device complies with License-exempt RSS standard(s).

Operation is subject to the following two conditions:

1. This device may not cause interference; and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

This Class B digital apparatus complies with Canadian ICES-003.

Innovation, Sciences et Développement économique Canada (Français)

Cet appareil est conforme aux normes d'exemption de licence RSS.

Son fonctionnement est soumis aux deux conditions suivantes:

1. cet appareil ne doit pas causer d'interférence, et
2. cet appareil doit accepter toute interférence, notamment les interférences qui peuvent affecter son fonctionnement.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Disclaimer

Raymarine does not warrant that this product is error-free or that it is compatible with products manufactured by any person or entity other than Raymarine.

Raymarine is not responsible for damages or injuries caused by your use or inability to use the product, by the interaction of the product with products manufactured by others, or by errors in information utilized by the product supplied by third parties.

Electronic chart data

Raymarine does not warrant the accuracy of such information, and is not responsible for damages or injuries caused by errors in chart data or information utilized by the product and supplied by third parties. Use of electronic charts provided by third parties is subject to the supplier's End-User License Agreement (EULA).

Warranty registration

To register your Raymarine product ownership, please visit www.raymarine.com and register online.

It is important that you register your product to receive full warranty benefits. Your unit package includes a bar code label indicating the serial number of the unit. You will need this serial number when registering your product online. You should retain the label for future reference.

Product disposal

Dispose of this product in accordance with the WEEE Directive.

The Waste Electrical and Electronic Equipment (WEEE) Directive requires the recycling of waste electrical and electronic equipment which contains materials, components and substances that may be hazardous and present a risk to human health and the environment when WEEE is not handled correctly.



Equipment marked with the crossed-out wheeled bin symbol indicates that the equipment should not be disposed of in unsorted household waste. Local authorities in many regions have established collection schemes under which residents can dispose of waste electrical and electronic equipment at a recycling center or other collection point. For more information about suitable collection points for waste electrical and electronic equipment in your region, refer to the Raymarine website: www.raymarine.eu/recycling.

IMO and SOLAS

The equipment described within this document is intended for use on leisure marine boats and workboats NOT covered by International Maritime Organization (IMO) and Safety of Life at Sea (SOLAS) Carriage Regulations.

Technical accuracy

To the best of our knowledge, the information in this document was correct at the time it was produced. However, Raymarine cannot accept liability for any inaccuracies or omissions it may contain. In addition, our policy of continuous product improvement may change specifications without notice.

As a result, Raymarine cannot accept liability for any differences between the product and this document. Please check the Raymarine website (www.raymarine.com) to ensure you have the most up-to-date version(s) of the documentation for your product.

Publication copyright

Copyright ©2023 Raymarine UK Ltd. All rights reserved. No parts of this material may be copied, translated, or transmitted (in any medium) without the prior written permission of Raymarine UK Ltd.

CHAPTER 2: DOCUMENT INFORMATION

CHAPTER CONTENTS

- [2.1 Applicable products — page 13](#)
- [2.2 Document information — page 13](#)
- [2.3 Document conventions — page 13](#)
- [2.4 Document illustrations — page 13](#)
- [2.5 Product documentation — page 13](#)
- [2.6 LightHouse™ 4 operation instructions — page 14](#)

2.1 Applicable products

This document is applicable to the following products:

- Axiom® 2 XL 16 multifunction display, part number E70661
- Axiom® 2 XL 16 multifunction display kit, part number T70545
- Axiom® 2 XL 19 multifunction display, part number E70662
- Axiom® 2 XL 19 multifunction display kit, part number T70546
- Axiom® 2 XL 22 multifunction display, part number E70663
- Axiom® 2 XL 22 multifunction display kit, part number T70547
- Axiom® 2 XL 24 multifunction display, part number E70664
- Axiom® 2 XL 24 multifunction display kit, part number T70548

2.2 Document information

This document contains important information related to the installation of your Raymarine® product.

The document includes information to help you:

- Plan your installation and ensure you have all the necessary equipment.
- Install and connect your product as part of a wider system of connected marine electronics.
- Troubleshoot problems and obtain technical support if required.

This and other Raymarine® product documents are available to download in PDF format from www.raymarine.com/manuals

2.3 Document conventions

The following conventions are used throughout this document.

Formatting of user interface menus and settings.

References to menus and setting options are formatted using square brackets [].

Examples:

- You can select your desired cartography from the *[Cartography selection]* menu.

- MFD apps are accessed from the *[Homescreen]*.

Procedures for performing specific tasks using the product's user interface.

The term “**Select**” is used to refer to the action of:

- Touchscreen control — using your finger to select a menu option or item on the screen.
- Physical buttons — Highlighting an item using the navigational controls and confirming the selection by pressing the *[OK]* button.

Examples:

- Select *[Ok]* to confirm your selection.
- Select *[Set-up]*

Procedures for navigating menu hierarchies.

Menu hierarchies are used in this document to provide a quick summary on how to access a particular function or menu option.

Examples:

- The internal sonar module is turned off from the Fishfinder app menu: *[Menu > Set-up > Sounder Set-up > Internal Sounder]*.
- The internal GPS can be switched off from the GPS settings menu: *[Homescreen > Status area > Satellites > Settings > Internal GPS]*

2.4 Document illustrations

Your product and if applicable, its user interface may differ slightly from that shown in the illustrations in this document, depending on product variant and date of manufacture.

All images are provided for illustration purposes only.

2.5 Product documentation

The following documentation is applicable to your product:

Applicable documents

- **87445** — Axiom® 2 XL Installation Instructions (This document)
- **81406** — LightHouse™ 4 Operation Instructions

- **81409** — LightHouse™ 4 Basic Operation Instructions
- **87438** — Axiom® 2 XL 16 Mounting Template
- **87439** — Axiom® 2 XL 19 Mounting Template
- **87440** — Axiom® 2 XL 22 Mounting Template
- **87441** — Axiom® 2 XL 24 Mounting Template

Related documents

- **81367** — RMK-10 Remote Keypad Installation and Operation Instructions
- **87317** — RCR-SD/USB card reader Installation Instructions

These and other Raymarine product documents are available to download in PDF format from www.raymarine.com/manuals

User manuals Print Shop

Raymarine® provides a Print Shop service, enabling you to purchase a high-quality, professionally-printed manual for your Raymarine® product.

Printed manuals are ideal for keeping onboard your vessel, as a useful source of reference whenever you need assistance with your Raymarine product.

To order a printed manual, delivered directly to your door, visit: <http://www.raymarine.co.uk/view/?id=5175>


For further information about the Print Shop, please visit the Print Shop FAQ pages: <http://www.raymarine.co.uk/view/?id=5751>

Note:

- Accepted methods of payment for printed manuals are credit cards and PayPal.
- Printed manuals can be shipped worldwide.
- Further manuals will be added to the Print Shop over the coming months for both new and legacy products.
- Raymarine user manuals are also available to download free-of-charge from the Raymarine® website, in the popular PDF format. These PDF files can be viewed on a PC / laptop, tablet, smartphone, or on the latest generation of Raymarine® multifunction displays.

2.6 LightHouse™ 4 operation instructions

Please refer to the LightHouse™ 4 operation instructions for information on how to operate your product.

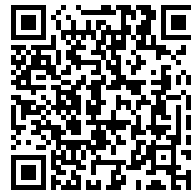

The LightHouse™ 4 operation Instructions (document number **81406**) can be downloaded from the Raymarine® website: www.raymarine.com/manuals. Please check the website to ensure you have the latest documentation.

Multifunction display software version

To ensure optimum performance and compatibility with external devices, your multifunction display must be using the latest software version.

Visit www.raymarine.com/software to download the latest software.

CHAPTER 3: PRODUCT AND SYSTEM OVERVIEW

CHAPTER CONTENTS

- [3.1 Product overview — page 16](#)
- [3.2 Additional components — page 17](#)
- [3.3 Typical systems — page 17](#)

3.1 Product overview

The Axiom® 2 XL is a range of large touchscreen glass bridge-style multifunction displays.



Axiom® 2 XL features include:

- Full range of navigation, sonar, radar, data, entertainment and other apps available, via the embedded LightHouse operating system.
- Available in 16, 19, 22 and 24 inch screen sizes.
- Hexacore (6-core) processor.
- Edge-to-edge glass construction.
- Multi-point touchscreen.
- Full HD IPS display.
- Hydrotough™ nano-coated, impact-resistant glass screen, which repels water, oil, and smudges for better viewing and accurate touch controls.
- Wide viewing angles.
- HDMI input and output.
- USB input and output for touch control:
 - View and control your Axiom® 2 XL display from a third-party compatible touchscreen monitor, using the HDMI output and USB input connections.

- View and control a PC or other device from your Axiom® 2 XL display touchscreen, using the HDMI input and USB output connections.
- Audio output (via RCA connectors on power/video/audio cable connected to amplifier/entertainment system).
- 2x Analog video inputs. (BNC connectors); one via supplied power/video/audio cable, and a second via optional alarm/video cable (A80235)*.
- GNSS (GPS) external passive antenna connection, via optional GNSS (GPS) antenna (A80288)**.
- External alarm connection for optional Alarm buzzer (E26033)*, via optional alarm / video cable (A80235)*.
- 3 x Gigabit Power over Ethernet (PoE) network (RayNet) connections, for powering up to 3 PoE devices using the RayNet network connections (shared 32 W maximum power output).
- NMEA 2000 DeviceNet connection (or SeaTalkng® , via the supplied adapter cable).
- NMEA 0183 connection available, via optional NMEA 0183 to NMEA 2000 convertor (A80721).
- External SD card reader connection, via optional RCR-SDUSB card reader (A80440)*.

Note:


- * items marked with a single asterisk are supplied with the following product variants: T70545, T70546, T70547, T70548, and the T70431 Axiom® XL Accessory pack.
- ** items marked with a double asterisk are supplied with the optional T70431 Axiom® 2 XL Accessory pack.
- For further information on accessories and cables, refer to:
[p.92 – Spares and accessories](#)

3.2 Additional components

Additional components are available for the Axiom® 2 XL range, which, depending on your system, may be essential for certain features.

Note:

- Items 1, 2, 3 and 4 are available as an accessory pack (part number T70431).
- Items 1, 2 and 3 are included with the display when ordering Axiom® 2 XL MFD kits (part numbers: T70545, T70546, T70547 and T70548).

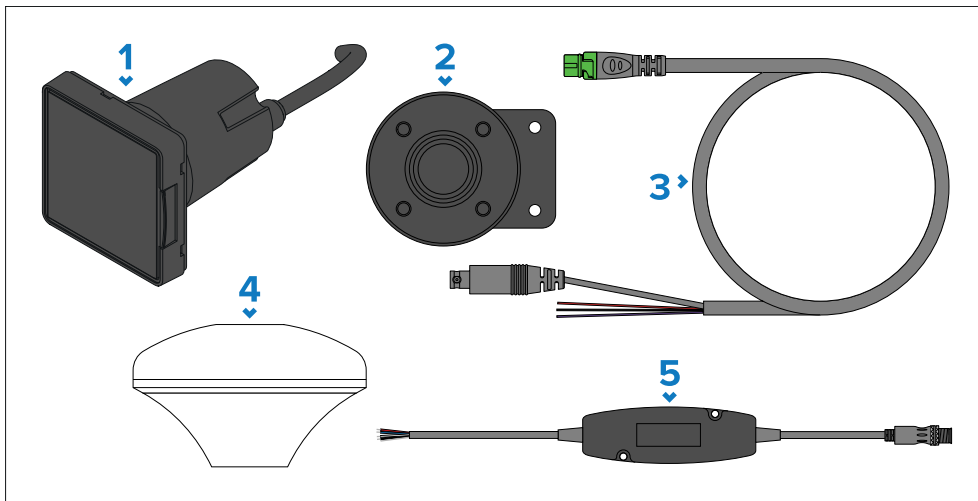

1. RCR-SD/USB external card reader (part number: A80440). Axiom® 2 XL displays do not have a built-in card reader. The following functions require an external remote card reader to be attached to the display:
 - Use of electronic cartography. Alternatively, cartography can be shared from a networked display that has electronic cartography saved to internal storage, or has a card reader attached.
 - Updating product software. Alternatively, if your display has a connection to the Internet, you can check online for software updates.
 - Import and export user data (waypoints, routes and tracks). Alternatively, user data can be imported and exported from a networked display that does have a card reader attached.

- Backup and restore settings. Alternatively, settings can be backed up and restored from a networked display that does have a card reader attached.
- Viewing PDF files.
- Capturing and viewing screenshots or images (.png, .jpg files).
- Recording and viewing video files (.mov files).
- Installation of third-party LightHouse app (.apk files) (for installation only; apps cannot be run directly from storage device).

In addition to the storage uses listed above, the USB slot on the RCR-SDUSB can also supply 0.5A of current to charge mobile devices.

2. Alarm buzzer (part number E26033) An external alarm buzzer is required to hear audible display alarms.
3. Alarm/analog video in (part number A80235) Cable is required to connect the external alarm buzzer to the display. The cable also allows input of an analog video signal, via a BNC connector.
4. GA150 GNSS antenna (part number A80288) If you intend to use the Axiom® 2 XL's internal GNSS receiver then an external antenna is required. Alternatively, you can use another networked display or external GNSS receiver to obtain a position fix.
5. DeviceNet to NMEA 0183 convertor (part number A80721) Data from NMEA 0183 devices can be viewed on the display when the NMEA 0183 device is connected to the same NMEA 2000 / SeaTalkng® CAN bus network as the convertor.


3.3 Typical systems

The illustrations show typical system examples.

Note:


Power supply connection are not shown in the examples. For details on how to connect power to your devices refer to the power connection details in the instructions that were supplied with your devices.

Example basic system

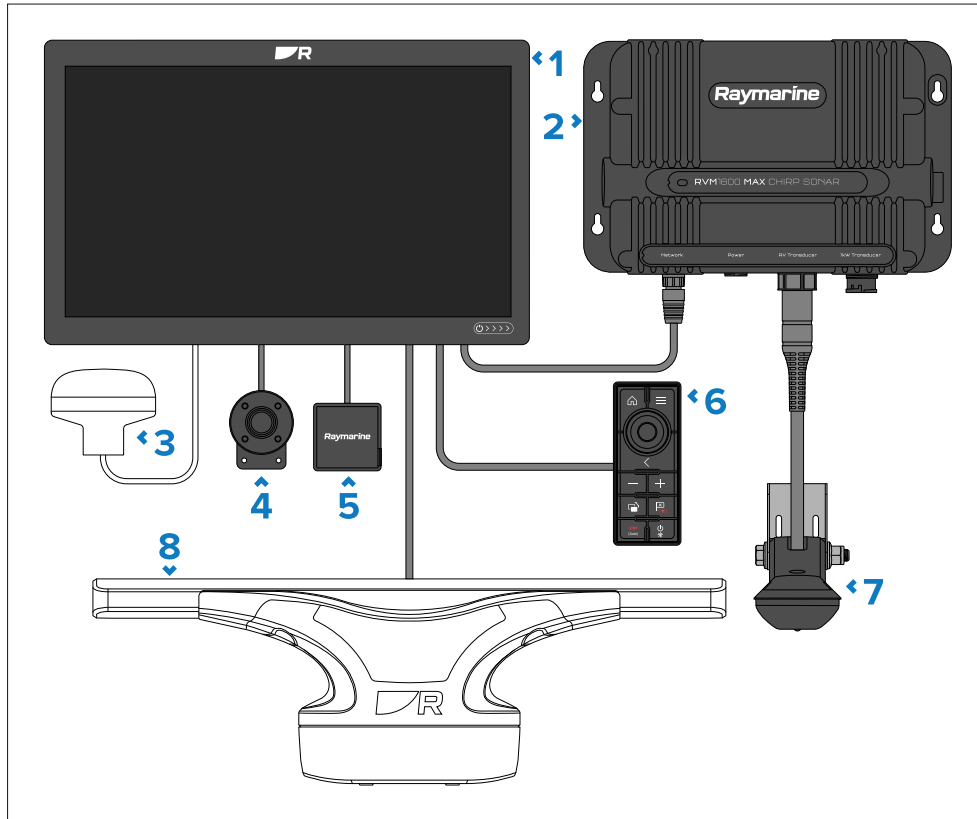

1. Axiom® 2 XL display
2. External Raymarine sonar module (RVM1600 illustrated)
3. External GNSS antenna (e.g.: GA200, part number A80589)
4. Alarm buzzer (part number E26033)
5. RCR-SD/USB external card reader (part number A80440)
6. RMK-10 display remote (part number A80438 / T70293)
7. Raymarine sonar transducer (RVM-100 illustrated)
8. Raymarine radar scanner (Cyclone™ illustrated)

Example expanded system

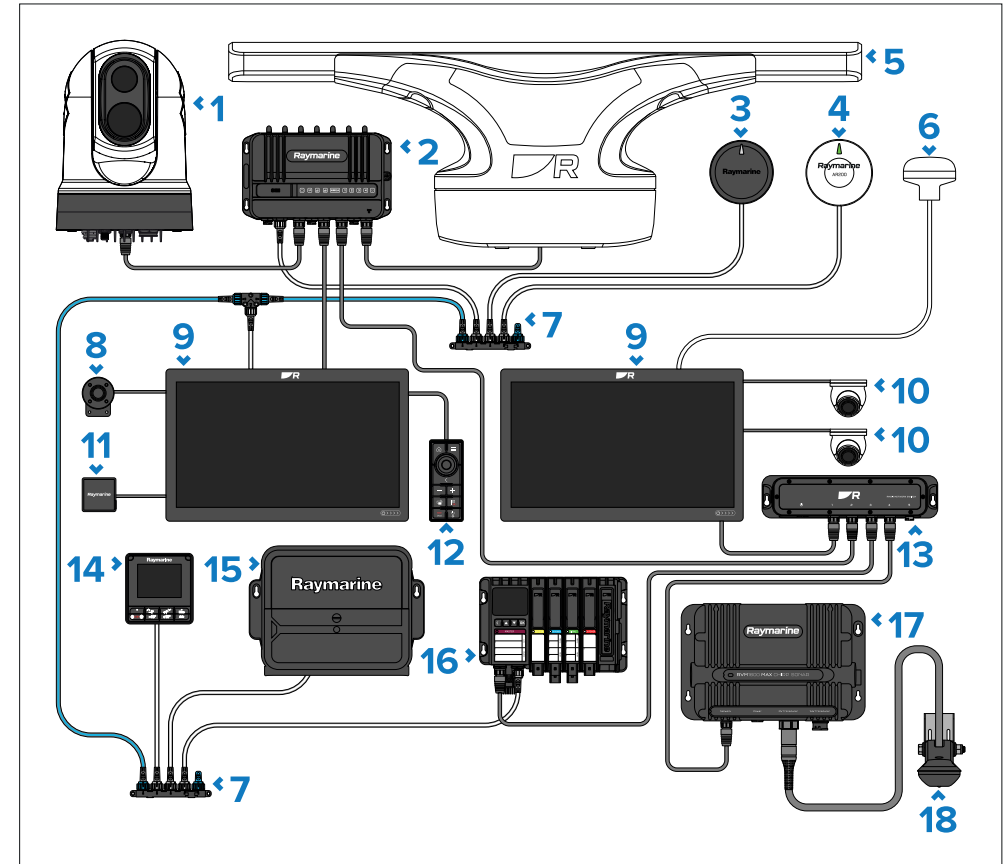

1. Raymarine thermal camera (M300 illustrated)
2. YachtSense™ Link Marine Router
3. EV-1 Evolution™ autopilot (AHRS)
4. AR200 (augmented reality sensor)
5. Raymarine radar scanner (Cyclone™ illustrated)
6. External GNSS antenna (e.g.: GA200, part number A80589)
7. SeaTalkng® 5–way blocks (terminated SeaTalkng® CAN bus network)
8. Alarm buzzer (part number E26033)
9. Axiom® 2 XL displays
10. PoE IP cameras (CAM300 illustrated)

11. RCR-SD/USB external card reader (part number A80440)
12. RMK-10 display remote (part number A80438 / T70293)
13. Raymarine network switch (RNS-5 illustrated)
14. Autopilot controller (P70s illustrated)
15. ACU Evolution autopilot (drive not shown)
16. YachtSense™ Digital Control System (Master module assembly illustrated)
17. External Raymarine sonar module (RVM1600 illustrated)
18. Raymarine sonar transducer (RVM-100 illustrated)

CHAPTER 4: PARTS SUPPLIED


CHAPTER CONTENTS

- [4.1 Parts supplied — page 21](#)
- [4.2 Additional parts supplied in MFD kit — page 21](#)

4.1 Parts supplied

The following parts are supplied in the box.


Unpack your product carefully to prevent damage or loss of parts. Check the box contents against the list below. Retain the packaging and documentation for future reference.

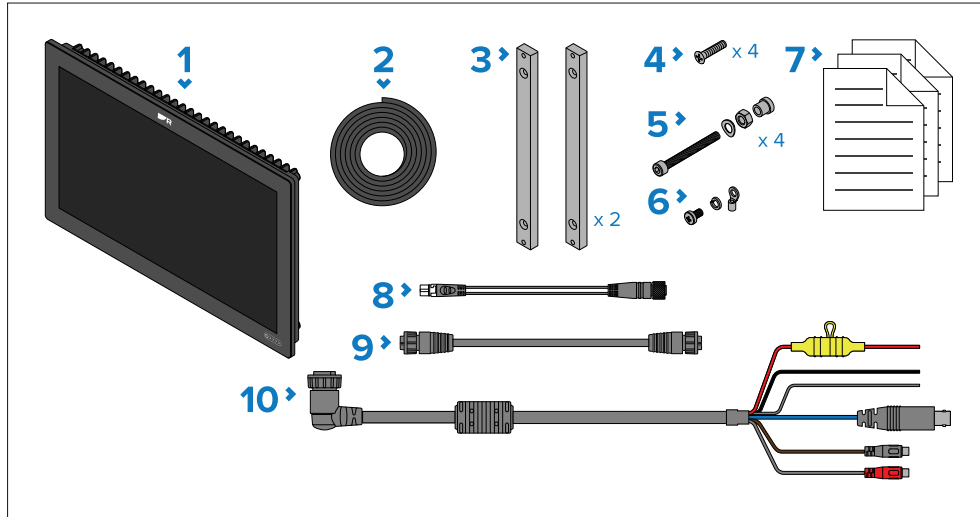

Item	Description
1	Axiom® 2 XL display
2	Mounting gasket tape
3	Rear mount brackets
4	Mounting bar fixings x4 (M5 x 20 pozi countersunk)
5	Mounting fixings x 4 (Including M5 x 35 Bolts, M5 wavy washers, M5 nuts and mounting feet).
6	M3 x 5 screw, M3 spring washer and M3 crimp terminal (for optional grounding connection)
7	Documentation
8	SeaTalkng™ to DeviceNet adaptor cable, 1 m (3.3 ft)
9	RayNet network cable, 2 m (6.6 ft)
10	Right angled power / video / audio cable, 1.5 m (4.92 ft)

4.2 Additional parts supplied in MFD kit

The following additional parts are supplied in the box only when ordering the Axiom® 2 XL MFD kits (part numbers: T70545, T70546, T70547 and T70548:

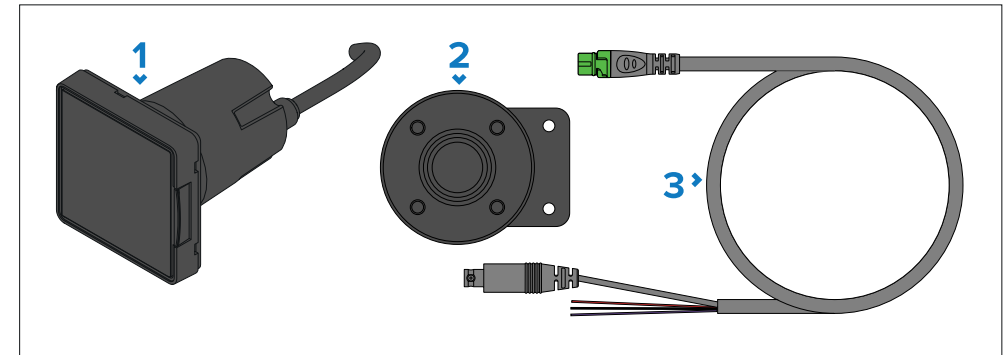


Item	Description
1	RCR-SD/USB external card reader (part number A80440)
2	Alarm buzzer (part number E26033)
3	Alarm / analog video in cable (part number A80235)

CHAPTER 5: PRODUCT DIMENSIONS

CHAPTER CONTENTS

- [5.1 Product dimensions — page 23](#)

5.1 Product dimensions

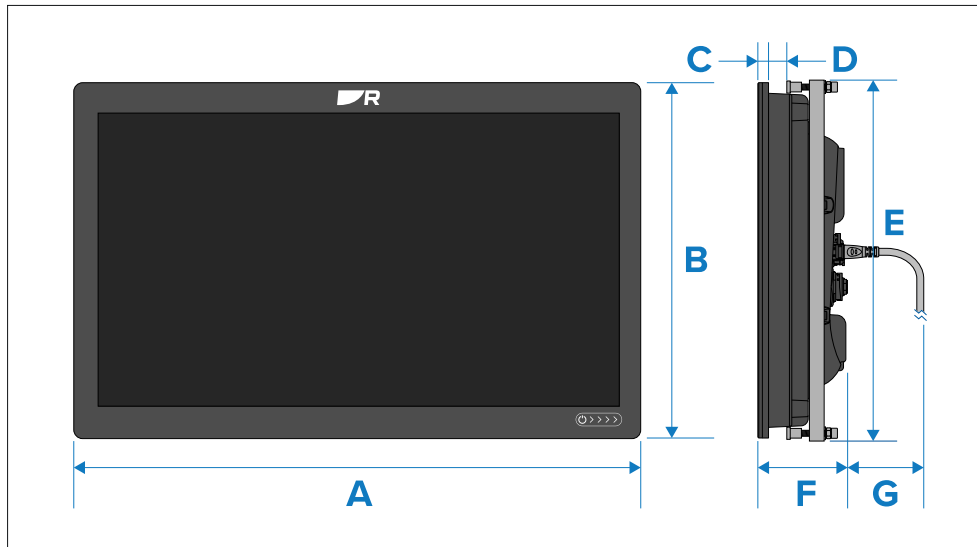

Note:

- Dimension D above shows the minimum and maximum thickness of the mounting surface when surface mounting the display.
- Dimensions C+D shows the minimum and maximum mounting surface thickness when flush mounting the display.

	Axiom® 2 XL 16	Axiom® 2 XL 19	Axiom® 2 XL 22	Axiom® 2 XL 24
A	394.9 mm (15.55 in)	461.78 mm (18.18 in)	533.56 mm (21.00 in)	578.40 mm (22.77 in)
B	248.22 mm (9.77 in)	289.44 mm (11.40 in)	326.33 mm (12.85 in)	386.84 mm (15.23 in)
C	9 mm (0.35 in)	9 mm (0.35 in)	9 mm (0.35 in)	9 mm (0.35 in)
D	Min: 6 mm (0.24 in) Max 19 mm (0.75 in)	Min: 6 mm (0.24 in) Max 19 mm (0.75 in)	Min: 6 mm (0.24 in) Max 19 mm (0.75 in)	Min: 6 mm (0.24 in) Max 19 mm (0.75 in)
E	253 mm (9.96 in)	294 mm (11.57 in)	331 mm (13.03 in)	392 mm (15.43 in)
F	73.96 mm (2.91 in)	73.95 mm (2.91 in)	79.75 mm (3.14 in)	76.36 mm (3.01 in)
G	101 mm (3.98 in)	101 mm (3.98 in)	101 mm (3.98 in)	101 mm (3.98 in)

CHAPTER 6: LOCATION REQUIREMENTS

CHAPTER CONTENTS

- 6.1 Warnings and cautions — page 25
- 6.2 General location requirements — page 25
- 6.3 Axiom® 2 XL 24 above decks installation requirements — page 25
- 6.4 GNSS (GPS) location requirements — page 26
- 6.5 Touchscreen location requirements — page 26
- 6.6 Wireless location requirements for optimum performance — page 26
- 6.7 Viewing angle considerations — page 27
- 6.8 EMC installation guidelines — page 28

6.1 Warnings and cautions

Important:

Before proceeding, ensure that you have read and understood the warnings and cautions provided in the following section of this document:

[p.9 – Important information](#)



Warning: Potential ignition source

This product is NOT approved for use in hazardous/flammable atmospheres. Do NOT install in a hazardous/flammable atmosphere (such as in an engine room or near fuel tanks).

6.2 General location requirements

When selecting a location for your product it is important to consider a number of factors.

Key factors which can affect product performance are:

- **Ventilation** — To ensure adequate airflow:
 - Ensure that product is mounted in a compartment of suitable size.
 - Ensure that ventilation holes are not obstructed. Allow adequate separation of all equipment.
- Any specific requirements for each system component are provided later in this chapter.
- **Mounting surface** — Ensure product is adequately supported on a secure surface. Do not mount units or cut holes in places which may damage the structure of the vessel.
- **Cabling** — Ensure the product is mounted in a location which allows proper routing, support and connection of cables:
 - Minimum bend radius of 100 mm (3.94 in) unless otherwise stated.
 - Use cable clips to prevent stress on connectors.
 - If your installation requires multiple ferrites to be added to a cable then additional cable clips should be used to ensure the extra weight of the cable is supported.
- **Water ingress** — The product is suitable for mounting both above and below decks. Although the unit is waterproof, it is good practice to locate

it in a protected area away from prolonged and direct exposure to rain and salt spray.

- **Electrical interference** — Select a location that is far enough away from devices that may cause interference, such as motors, generators and radio transmitters / receivers.
- **Power supply** — Select a location that is as close as possible to the vessel's DC power source. This will help to keep cable runs to a minimum.

Caution: Product weight

- Refer to the technical specification for your product to ensure the intended mounting surface is suitable to bear its weight.
- 2 people may be required for installation of larger / heavier products.

Rear access requirements


Access to the rear of the display and mounting surface is required to surface and flush mount the display.

Ensure there is sufficient access and space behind the mounting surface to attach and tighten the fixings and also to connect the cables.

6.3 Axiom® 2 XL 24 above decks installation requirements

Note:

The installation requirements below only apply to the Axiom® 2 XL 24 when being installed in an above decks environment.

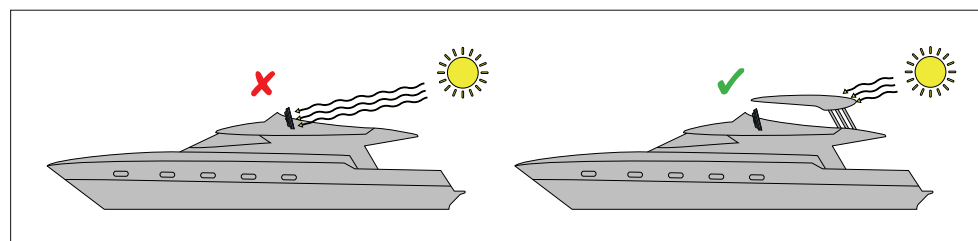

The Axiom® 2 XL 24 is designed to operate in ambient temperatures of up to 55°C / 131°F and with display surface temperatures of up to 65°C / 149°F. However, when the display is exposed to prolonged, direct sunlight the surface of the Axiom® 2 XL 24 may exceed these temperatures. This may cause the LCD to blackout temporarily, until the surface temperature falls to within normal limits. To help mitigate this occurrence it is recommended that when installing in an above decks environment the Axiom XL 24 is mounted in a location protected from direct sunlight e.g.: underneath a hardtop or Bimini (canvas).

Other factors that can help to reduce the surface temperature of your display include ensuring sufficient airflow around the display and reducing the LCD's brightness level.

6.4 GNSS (GPS) location requirements

Your product includes a built-in GNSS (GPS) receiver that, in order to obtain a position fix, requires connection of an external passive antenna, such as the GA150 antenna.

Ensure you follow the location requirements specified in your external antenna's installation instructions.

6.5 Touchscreen location requirements

Note:

Touchscreen performance can be affected by the installation environment, specifically Touchscreen displays installed above decks, where it will be open to the elements may exhibit the following:

- Hot Touchscreen temperature — If the display is mounted where it will be exposed to prolonged periods of direct sunlight, the touchscreen may become hot.
- Erroneous Touchscreen performance — Exposure to prolonged rain and / or water wash over may cause the display to respond to 'false touches', caused by the rain/water hitting the screen.

If, due to the required installation location, exposure to these elements is anticipated then it is recommended that you consider:

- Installing a remote keypad such as the RMK-10 and operating the display remotely — Touch-only displays.
- Locking the Touchscreen and using the physical buttons instead — HybridTouch displays.
- Attaching a third-party 'display hood accessory' to reduce direct sunlight exposure and the volume of water that the display is exposed to.

6.6 Wireless location requirements for optimum performance

All wireless devices in your system must be located in such a way that they can reliably receive and/or transmit wireless signals.

A number of factors can influence wireless performance. For example, physical obstacles and certain vessel structures and materials can all negatively impact wireless performance. Therefore, **it's important to check a product's wireless performance at the desired installation location before drilling any mounting holes.**

Vessel construction and materials

Wherever possible, mount products on surfaces constructed from GRP (e.g. fiberglass resin, or foam), or on dry wooden bulkheads.

Conductive materials in the signal path can have a significant impact on wireless signal performance. Reflective surfaces such as metal surfaces, some types of glass and even mirrors can drastically affect performance or even block the wireless signal. Installation locations that are in close proximity to these materials should be avoided. **Do NOT mount wireless products directly to conductive materials.** This includes any mounting surface or enclosure/pod.

Examples of conductive materials include, but are not limited to:

- carbon fibre, kevlar, or aramid (including sails made from these materials)
- aluminium
- steel

In installations with conductive materials, if available, mount the wireless product using an accessory pole mount or deck mounting kit. A clearance of at least 10 cm (3.9 in) is required to minimize the ground effect from conductive materials. This applies to transmitters as well as displays. If moving the product fixes the problem, consider cutting an antenna clearance hole behind the unit (once the product position and mounting have been finalized).

Wireless performance can also be degraded in locations where the wireless signal passes through a bulkhead containing power cables.

Crew members (especially when wet) can also be obstructive to wireless signals, if their bodies pass through the signal area between wireless sensor and any associated displays.

Checking and optimizing signal strength

It may be necessary to experiment with the location of your wireless products to achieve optimal wireless performance and a clear signal path.

The distance between wireless products should always be kept to a minimum. Do not exceed the maximum stated range of your wireless product (maximum range will vary for each device).

Wireless performance degrades over distance, so products farther away will receive less network bandwidth. Products installed close to their maximum wireless range may experience slow connection speeds, signal dropouts, or not being able to connect at all.

For best results, the wireless product should have a clear, direct line-of-sight to the product it will be connected to. Any physical obstructions can degrade or even block the wireless signal.

Some wireless products feature a signal strength indicator to assist in the process of determining the location with the best wireless performance. Choose the location with the highest and most consistently strong direct signal reading, during a 5 minute monitoring period. Try alternative locations for the transmitter to maximise the signal strength to the displays; e.g. try locations below a hatch or skylight or near to a window. A small change in product position can result in a significant change in the signal strength.

Note:

Some wireless products (e.g. a Hull Transmitter) will not transmit data unless a transducer is connected. Also consider that an NMEA or SeaTalkng product (e.g. an interface) will not transmit data unless an appropriate data source is connected.

Interference and other equipment

Interference from other people's wireless devices can cause interference with your products. You can use a third-party wireless analyzer tool / smartphone app to assess the best wireless channel to use (e.g. a channel not in use or one used by the least number of devices).

Wireless products should be installed at least 1 m (3 ft) away from:

- Other wireless-enabled products
- Transmitting products that send wireless signals in the same frequency range
- Other electrical, electronic or electromagnetic equipment that may generate interference.

Software updates

It's also important to ensure all your wireless products are running the latest software versions, as improvements are made over time to wireless performance.

6.7 Viewing angle considerations

As display contrast and color are affected by the viewing angle, It is recommended that you temporarily power up the display, prior to installation, to enable you to best judge which location provides the optimum viewing angle.

For viewing angles for your product refer to the *Technical specification*.

6.8 EMC installation guidelines

Raymarine® equipment and accessories conform to the appropriate Electromagnetic Compatibility (EMC) regulations, to minimize electromagnetic interference between equipment and minimize the effect such interference could have on the performance of your system.

Correct installation is required to ensure that EMC performance is not compromised.

Note:

In areas of extreme EMC interference, some slight interference may be noticed on the product. Where this occurs the product and the source of the interference should be separated by a greater distance.

For **optimum** EMC performance we recommend that wherever possible:

- Raymarine® equipment and cables connected to it are:
 - At least 1 m (3.3 ft) from any equipment transmitting or cables carrying radio signals e.g. VHF radios, cables and antennas. In the case of SSB radios, the distance should be increased to 2 m (6.6 ft).
 - More than 2 m (6.6 ft) from the path of a radar beam. A radar beam can normally be assumed to spread 20 degrees above and below the radiating element.
- The product is supplied from a separate battery from that used for engine start. This is important to prevent erratic behavior and data loss which can occur if the engine start does not have a separate battery.
- Raymarine® specified cables are used.
- Cables are not cut or extended, unless doing so is detailed in the installation manual.

Note:

Where constraints on the installation prevent any of the above recommendations, always ensure the maximum possible separation between different items of electrical equipment, to provide the best conditions for EMC performance throughout the installation.

RF interference

Certain third-party external electrical equipment can cause Radio Frequency (RF) interference with GNSS (GPS), AIS or VHF devices, if the external equipment is not adequately insulated and emits excessive levels of electromagnetic interference (EMI).

Some common examples of such external equipment include LED lighting (e.g.: navigation lights, searchlights and floodlights, interior and exterior lights) and terrestrial TV tuners.

To minimize interference from such equipment:

- Keep it as far away from GNSS (GPS), AIS or VHF products and their antennas as possible.
- Ensure that any power cables for external equipment are not entangled with the power or data cables for these devices.
- Consider fitting one or more high frequency suppression ferrites to the EMI-emitting device. The ferrite(s) should be rated to be effective in the range 100 MHz to 2.5 GHz, and should be fitted to the power cable and any other cables exiting the EMI-emitting device, as close as possible to the position where the cable exits the device.

Compass safe distance

To prevent potential interference with the vessel's magnetic compasses, ensure an adequate distance is maintained from the product.

When choosing a suitable location for the product you should aim to maintain the maximum possible distance from any compasses. Typically this distance should be at least 1 m (3.3 ft) in all directions. However for some smaller vessels it may not be possible to locate the product this far away from a compass. In this situation, when choosing the installation location for your product, ensure that the compass is not affected by the product when it is in a powered state.


CHAPTER 7: INSTALLATION

CHAPTER CONTENTS

- 7.1 Tools required — page 30
- 7.2 Mounting options — page 30
- 7.3 Rear access requirements — page 30
- 7.4 Preparing the mounting surface — surface mounting — page 31
- 7.5 Preparing the mounting surface — flush mounting — page 31
- 7.6 Fitting the gasket tape — page 32
- 7.7 Mounting — page 33

7.1 Tools required

The following tools are recommended for installation:

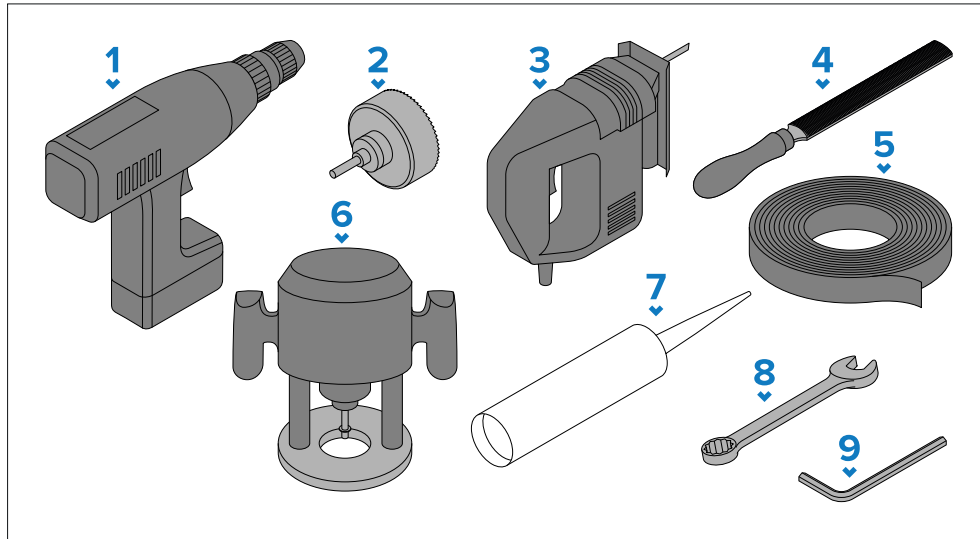


1. Power drill.
2. Hole cutter (appropriate size for corner diameters of the **Cut out** line identified on the supplied mounting template):
 - 15.40 mm (0.61 in) — Axiom® 2 XL 16, 19 and 24.
 - 13.5 mm (0.53 in) — Axiom® 2 XL 22.
3. Jigsaw.
4. Half round file (or sandpaper).
5. Masking/self adhesive tape.
6. Hand router with a router bit an appropriate size for the 14.00 mm (0.55 in) corner diameter required for the flush mount rebate.
7. Marine grade sealant.
8. 8 mm ($\frac{5}{16}$ ") wrench or small adjustable wrench.
9. 4 mm Hex wrench (Allen key).

Note:

* Items are only required when flush mounting the display.

7.2 Mounting options

Axiom® 2 XL displays can be mounted flush with the mounting surface (flush mount) or with the glass protruding from the mounting surface (surface mount).

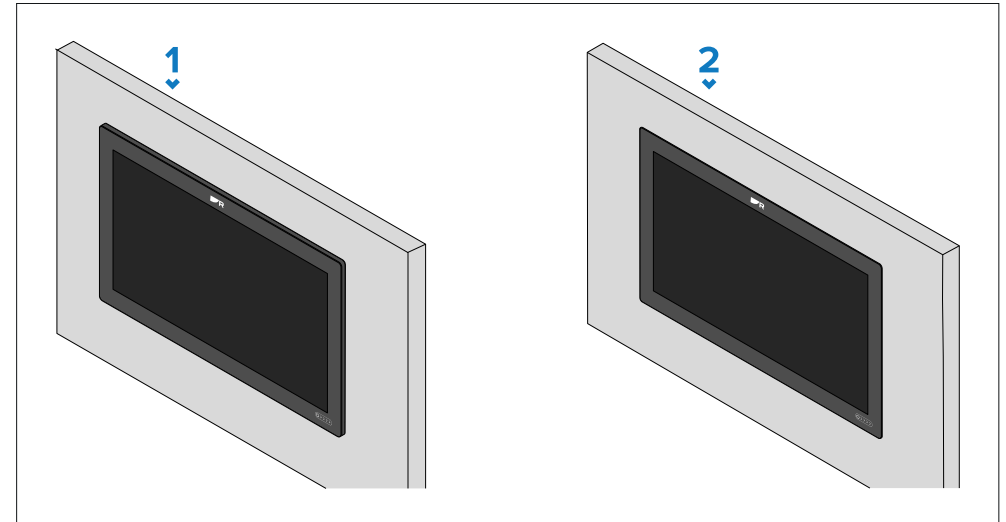

1. Surface mount
2. Flush mount



Warning: 2 person installation required

To prevent potential product damage, vessel damage and personal injury 2-person installation is recommended.

7.3 Rear access requirements

Access to the rear of the display and mounting surface is required to surface and flush mount the display.

Ensure there is sufficient access and space behind the mounting surface to attach and tighten the fixings and also to connect the cables.

7.4 Preparing the mounting surface — surface mounting

Surface mounting requires one cut out hole. When the display is surface mounted the glass/bezel will protrude from the mounting surface.


Note:

The following procedure is for preparing the mounting surface for surface mount installations. For flush mounting details refer to: [p.31 — Preparing the mounting surface — flush mounting](#)

Important:

Before preparing the mounting surface ensure that:

- your selected location meets the location requirements. For details refer to: [p.24 — Location requirements](#)
- you have identified cable connections and the route that the cables will take.

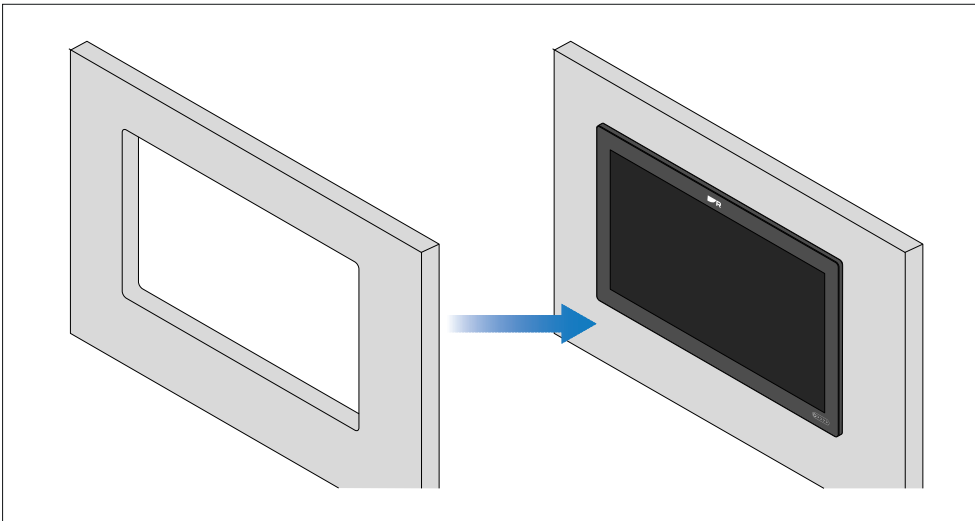

1. Mark the **cut out** line identified on the supplied mounting template on the mounting surface.
2. Use a drill and an appropriate size drill bit or hole cutter to cut out the corners of the **Cut out** line.

The corner diameter for the displays are:

- 15.40 mm (0.61 in) — Axiom® 2 XL 16, 19 and 24.
- 13.5 mm (0.53 in) — Axiom® 2 XL 22.

3. Use a jigsaw or similar cutting tool to cut out the remainder of the cut out area.
4. Use a half round file and/or sandpaper to smooth and rough edges or burs on the cut out hole.

7.5 Preparing the mounting surface — flush mounting

Flush mounting requires the same cut out hole as surface mounting and an additional rebate around the edge of the cut out. When the display is flush mounted the glass/will be flush with the mounting surface.


Note:

The following procedure is for preparing the mounting surface for flush mount installations. For surface mounting details refer to: [p.31 — Preparing the mounting surface — surface mounting](#)

Important:

Before preparing the mounting surface ensure that:

- your selected location meets the location requirements. For details refer to: [p.24 — Location requirements](#)
- you have identified cable connections and the route that the cables will take.

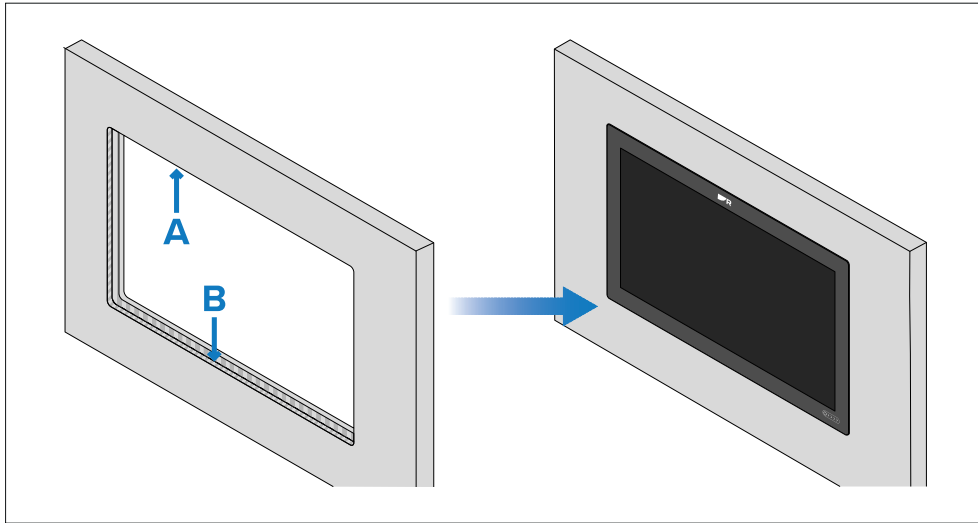

- **A** — Cut out (when flush mounting the cut out will be the same size as for surface mounting).
- **B** — Flush mounting requires an extra rebate to recess the display fully in the mounting surface.

1. Mark the **cut out** line identified on the supplied mounting template on the mounting surface.
2. Mark the **Rebate for flush mount** line identified on the supplied mounting template on the mounting surface.
3. Use a drill and an appropriate size drill bit or hole cutter to cut out the corners of the **Cut out** line.


The corner diameter for the displays are:

- 15.40 mm (0.61 in) — Axiom® 2 XL 16, 19 and 24.
- 13.5 mm (0.53 in) — Axiom® 2 XL 22.

4. Use a jigsaw or similar cutting tool to cut out the remainder of the cut out area.
5. Use a router hand tool to recess the marked rebate area to a depth of 9.00 mm (0.35 in).
6. Use a half round file and/or sandpaper to smooth and rough edges or burs on the cut out hole.

7.6 Fitting the gasket tape

Before fitting the display you must fit the mounting gasket tape to the rear of the display, as shown below.

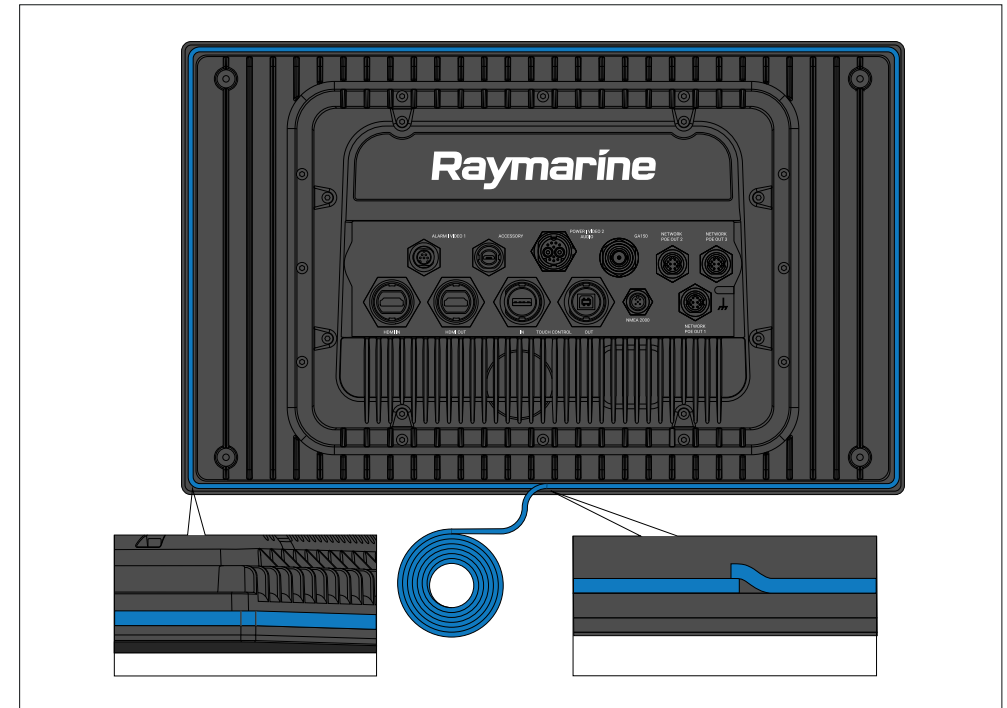

1. Starting at the bottom center, affix the gasket tape to the display.
2. Remove the paper backing from the tape before going around the corners, ensuring that the tape remains tight all around the display, and no air gap exists between display and tape.
3. When you reach the end, leave a small overlap to ensure that no gap exists between the ends of the gasket when it is compressed.

Note:


The supplied gasket tape provides a seal between the unit and a suitably flat and stiff mounting surface or binnacle. **The gasket should be used in all installations.** It may also be necessary to use a marine-grade sealant if the mounting surface or binnacle is not entirely flat and stiff or has a rough surface finish.

7.7 Mounting

Axiom® 2 XL displays are mounted from the rear.

Important:

In above decks installations, marine-grade sealant should be used to seal the gap between the edge of the mounting surface and the edge of the display.

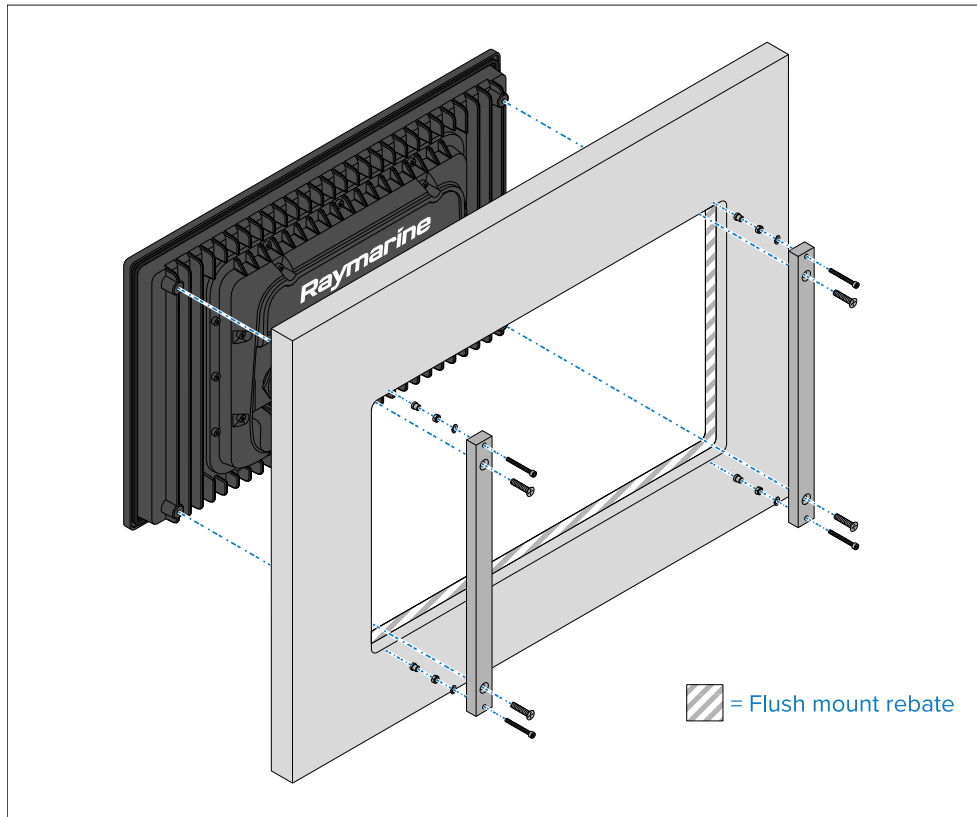


1. Ensure you have followed the relevant instructions for preparing the mounting surface for either surface mounting or flush mounting.
2. Route the relevant cables to behind the mounting surface cut out.

This may be difficult or not possible once the display has been mounted.

3. With one person holding the display in place, the second person should attach the mounting bars to the back of the display using the supplied countersunk screws, in the 4 locations shown.
4. Secure the display using the provided mounting fixings (M5 bolt, wavy washer, nut and foot, in the 4 locations shown).

Depending on the thickness of the mounting surface, the washer and nut may be located:

- between the mounting bracket and mounting feet, as shown in (1) and (2) below, or:
- after the mounting bracket, as shown in (3) and (4) below.

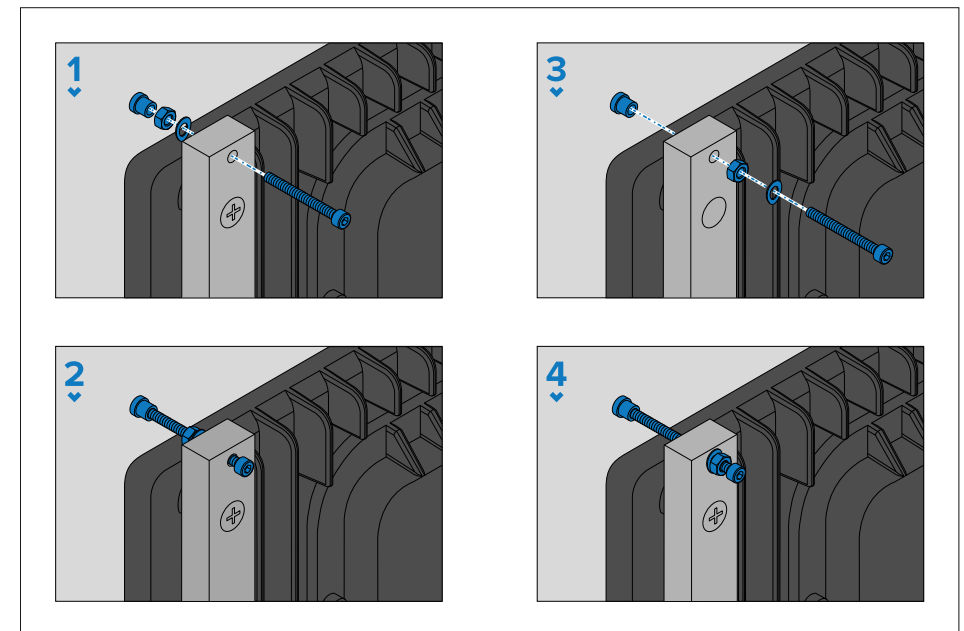

5. Using a 4 mm Hex (Allen) wrench, tighten the mounting bar bolts, ensuring that the feet are tight against the rear of the mounting surface.
6. Using a 8 mm wrench or adjustable wrench, tighten the nut against the washer and the mounting bar to lock in position. The nut should be tightened sufficiently to securely hold the display in position.



Warning: Marine-grade sealant

Only use marine-grade neutral cure polyurethane sealants.
Do NOT use sealants containing acetate or silicone, which can cause damage to plastic parts.

CHAPTER 8: CABLES AND CONNECTIONS — GENERAL INFORMATION

CHAPTER CONTENTS

- 8.1 General cabling guidance — page 36
- 8.2 Connections overview — page 37
- 8.3 Connecting cables — page 37
- 8.4 Bare end wire connections — page 38

8.1 General cabling guidance

Cable types and length


It is important to use cables of the appropriate type and length.

- Unless otherwise stated only use cables supplied by Raymarine.
- Where it is necessary to use non-Raymarine cables, ensure that they are of correct quality and gauge for their intended purpose. (e.g.: longer power cable runs may require larger wire gauges to minimize voltage drop along the run).

Cable routing

Cables must be routed correctly, to maximize performance and prolong cable life.

- Do NOT bend cables excessively. Wherever possible, ensure a minimum bend diameter (\emptyset) of 200 mm (7.87 in) / minimum bend radius (R) of 100 mm (3.94 in).

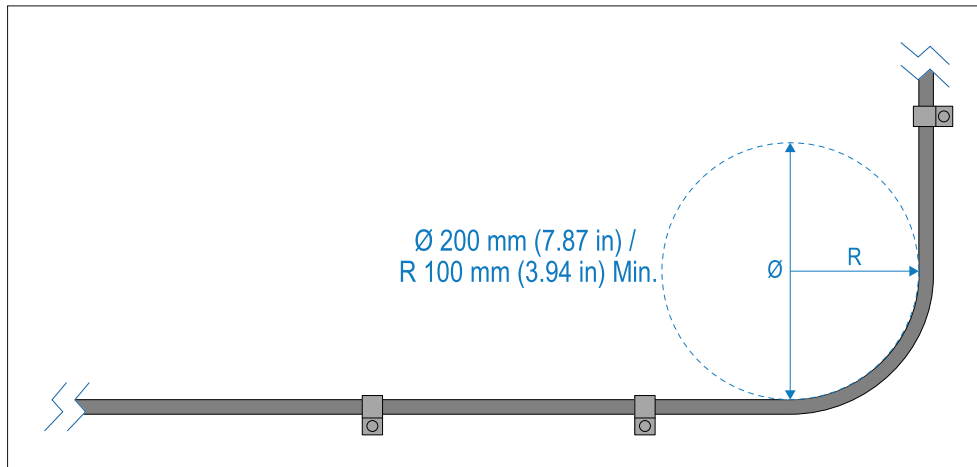

- Protect all cables from physical damage and exposure to heat. Use trunking or conduit where possible. Do NOT run cables through bilges or doorways, or close to moving or hot objects.
- Secure cables in place using cable clips or cable ties. Coil any excess cable and tie it out of the way.
- Where a cable passes through an exposed bulkhead or deckhead, use a suitable watertight feed-through.

- Do NOT run cables near to engines or fluorescent lights.
- Always route data cables as far away as possible from:
 - Other equipment and cables.
 - High current carrying AC and DC power lines.
 - Antennas.

Strain relief

Use adequate strain relief for cabling to ensure that connectors are protected from strain and will not pull out under extreme sea conditions.

Circuit isolation


Appropriate circuit isolation is required for installations using both AC and DC current:

- Always use isolating transformers or a separate power-inverter to run PC's, processors, displays and other sensitive electronic instruments or devices.
- Always use an isolating transformer with Weather FAX audio cables.
- Always use an isolated power supply when using a 3rd party audio amplifier.
- Always use an RS232/NMEA converter with optical isolation on the signal lines.
- Always make sure that PC's or other sensitive electronic devices have a dedicated power circuit.

Cable shielding

Ensure that cable shielding is not damaged during installation and that all cables are properly shielded.

8.2 Connections overview

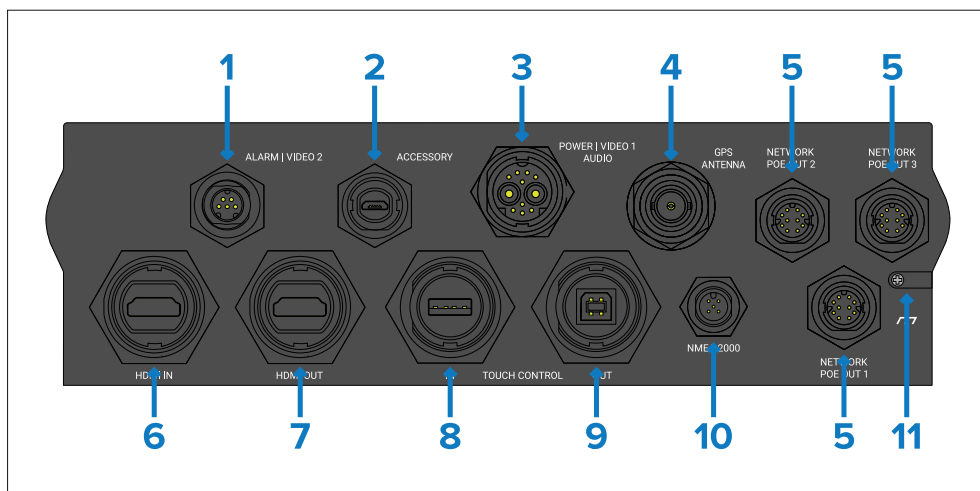

1. **ALARM | VIDEO 2** — The alarm / video 2 connector enables connections of the external alarm buzzer accessory (E26033) and an analog video input via BNC connector, using the alarm / video cable (part number A80235).
2. **ACCESSORY** — The accessory connector enables connection of the external card reader RCR-SD/USB (part number A80440).
3. **POWER | VIDEO 1 | AUDIO** — The power / video / audio connector provides a connection to a 12 / 24 V dc power supply, an analog video input via BNC connector, and analog audio output via RCA connectors.
4. **GPS ANTENNA** — The GPS antenna connector enables connection of an external GNSS (GPS) antenna (e.g.: GA200 part number A80589), which allows the display's internal GNSS (GPS) receiver to obtain a position fix.
5. **NETWORK POE OUT** — The 3 x network connectors enable connection of RayNet devices. The Network connectors also provide power to PoE devices.
6. **HDMI IN** — The HDMI in connector enables connection of an external HDMI video source using the HDMI cable (part number A80219). The video source can be displayed in the display's Video app.
7. **HDMI OUT** — The HDMI out connector enables connection of an external HDMI monitor or HDTV using the HDMI accessory cable (part number A80219). The monitor mirrors the display's screen.

8. **TOUCH CONTROL IN** — The touch in connector enables you to control the display with a compatible touchscreen monitor, using the USB A to USB B cable (part number A80578).
9. **TOUCH CONTROL OUT** — The touch out connector enables you to control a compatible device with the display's touchscreen, using the USB B to USB A cable (part number A80579).
10. **NMEA 2000** — The NMEA 2000 connector enables connection to a SeaTalkng[®] or NMEA 2000 network using the supplied SeaTalkng[®] to DeviceNet adaptor cable or a suitable DeviceNet cable.
11. **GROUND** — The optional grounding point should only be used when the display experiences touchscreen interference from nearby equipment. The grounding point should be connected to the same RF ground point as the interfering equipment, or the vessel's negative battery terminal.

Note:

- The **HDMI IN** and **VIDEO 2** connections share internal hardware and cannot be used at the same time. If devices are connected to both connections, the **HDMI IN** connection takes priority.
- The video feeds connected to the **HDMI IN** and **VIDEO 2** connections are NOT streamed on the RayNet network.

8.3 Connecting cables

Follow the steps below to connect the cable(s) to your product.

1. Ensure that the vessel's power supply is switched off.
2. Ensure that the device being connected has been installed in accordance with the installation instructions supplied with that device.
3. Ensuring correct orientation, push cable connectors fully onto the corresponding connectors.
4. Engage any locking mechanism to ensure a secure connection (e.g.: turn locking collars clockwise until tight, or in the locked position).
5. Ensure any bare ended wire connections are suitably insulated to prevent shorting and corrosion due to water ingress.

8.4 Bare end wire connections

You must ensure that any bare end wires are adequately protected from short circuit and water ingress.

Bare ended wire connections

It is recommended that bare ended wire connections are made by soldering or using crimp connectors and then protected by wrapping the connection in insulation tape.

Unused bare ended wires

Any unused bare ended wires should be folded back and wrapped in insulation tape.


CHAPTER 9: POWER CONNECTIONS

CHAPTER CONTENTS

- 9.1 Power connection — page 40

9.1 Power connection

The supplied power cable is connected to the **POWER | VIDEO 1 | AUDIO** connector located on the rear of the display. The power cable must then be connected to a 12 V dc or 24 V dc power supply; this can be achieved by connecting to a distribution panel, or directly to a battery. The product is protected against reverse polarity.

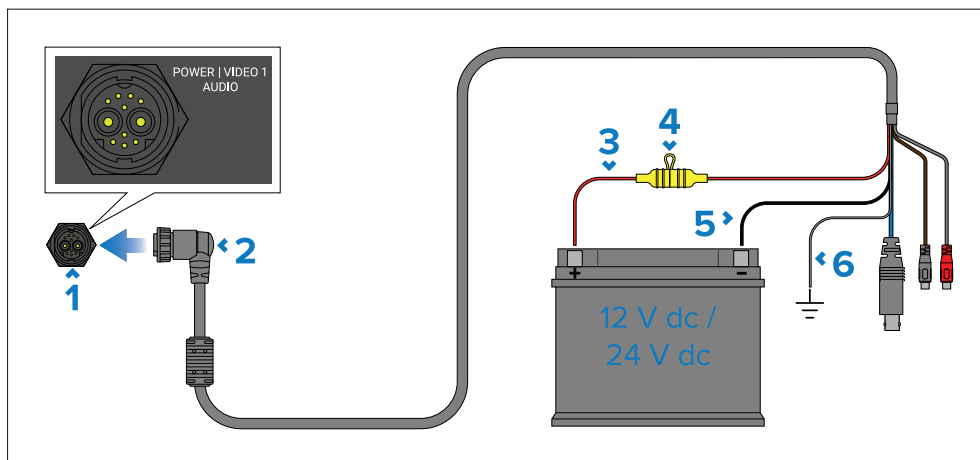

1. Display's **POWER | VIDEO 1 | AUDIO** connector.
2. Power/video/audio cable, 1.5 m (4.9 ft).
3. Positive (Red) wire: connect to the power supply's positive (+) terminal.
4. Fuse.
5. Negative wire: connect to the power supply's negative (-) terminal.
6. Drain wire: connect to RF ground point. If no ground point is available, connect to the battery's negative (-) terminal.

Note:

- Axiom® 2 XL displays are supplied with a Power/video/audio cable that has a right-angled connector. A straight connector cable is also available (A80744).
- The original Axiom® Power/Video/NMEA 0183 cables cannot be used with Axiom® 2 XL displays.

Inline fuse and thermal breaker ratings

The following inline fuse and thermal breaker ratings apply to your product:

Inline fuse rating	Thermal breaker rating
15 A	15 A (if only connecting one device)

Note:

- The suitable fuse rating for the thermal breaker is dependent on the number of devices you are connecting. If in doubt consult an authorized Raymarine dealer.
- Your product's power cable may have a fitted inline fuse. If not, you must fit an inline fuse to the positive wire of your product's power connection.

Caution: Power supply protection

When installing this product ensure the power source is adequately protected by means of a suitably-rated fuse or thermal circuit breaker.

Power distribution


Recommendations and best practice for the power connection of products supplied with a drain wire as part of the supplied power cable.

- The product is supplied with a power cable, either as a separate item or a captive cable permanently attached to the product. Only use the power cable supplied with the product. Do NOT use a power cable designed for, or supplied with, a different product.
- Refer to the *Power connection* section for more information on how to identify the wires in your product's power cable, and where to connect them.
- See below for more information on implementation for some common power distribution scenarios:

Important:

- When planning and wiring, take into consideration other products in your system, some of which (e.g. sonar modules) may place large power demand peaks on the vessel's electrical system, which may impact the voltage available to other products during the peaks.
- The information provided below is for guidance only, to help protect your product. It covers common vessel power arrangements, but does NOT cover every scenario. If you are unsure how to provide the correct level of protection, please consult an authorized dealer or a suitably qualified professional marine electrician.

Implementation — connection to distribution panel (Recommended)

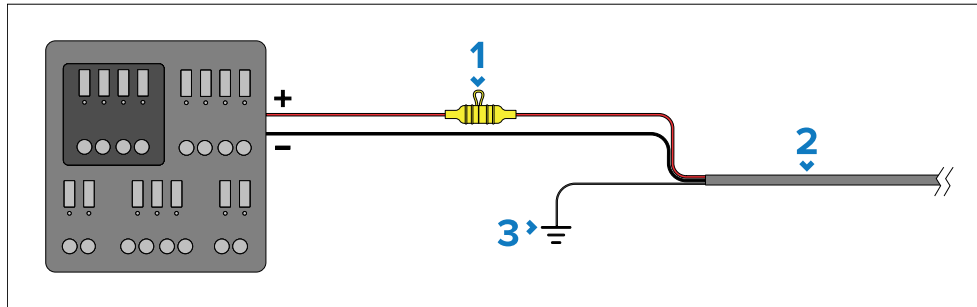


Item	Description
1	Waterproof fuse holder containing a suitably-rated inline fuse must be fitted. For suitable fuse rating, refer to: <i>Inline fuse and thermal breaker ratings</i> .
2	Product power cable.
3	Drain wire connection point.

- It is recommended that the supplied power cable is connected to a suitable breaker or switch on the vessel's distribution panel or factory-fitted power distribution point.
- The distribution point should be fed from the vessel's primary power source by 8 AWG (8.36 mm²) cable.
- Ideally, all equipment should be wired to individual suitably-rated thermal breakers or fuses, with appropriate circuit protection. Where this is not possible and more than 1 item of equipment shares a breaker, use

individual inline fuses for each power circuit to provide the necessary protection.

- The power cable supplied with your product includes a drain wire, which must be connected to the vessel's common RF ground.

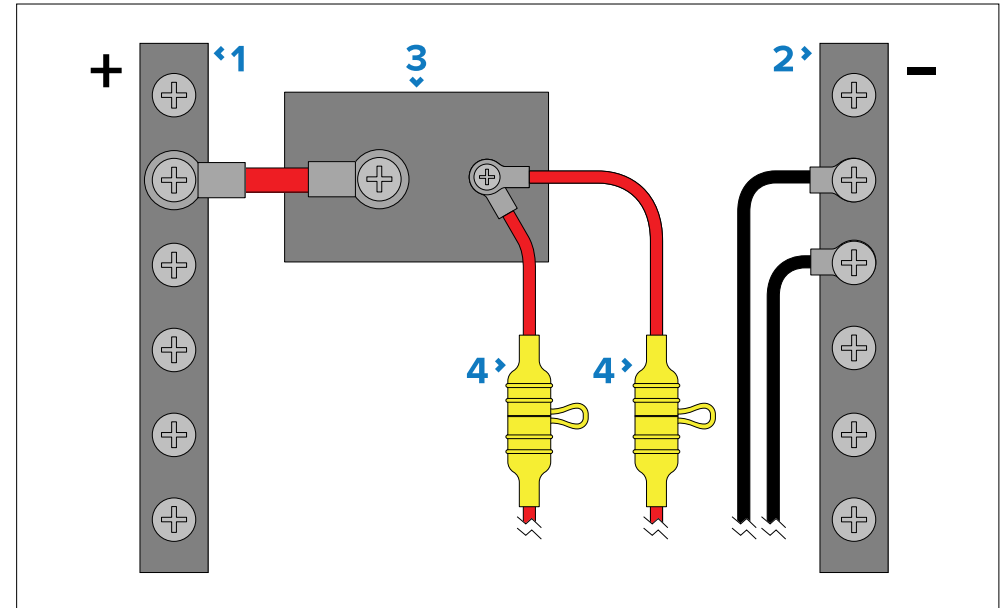


Item	Description
1	Positive (+) bar
2	Negative (-) bar
3	Circuit breaker
4	Waterproof fuse holder containing a suitably-rated inline fuse must be fitted. For suitable fuse rating, refer to: <i>Inline fuse and thermal breaker ratings</i> .

Important:

Observe the recommended fuse / breaker ratings provided in the product's documentation, however be aware that the suitable fuse / breaker rating is dependent on the number of devices being connected.

Implementation — direct connection to battery

- Where connection to a power distribution panel is not possible, the power cable supplied with your product may be connected directly to the vessel's battery, via a suitably rated fuse or breaker.
- If the power cable is NOT supplied with a fitted inline fuse, you MUST fit a suitably rated fuse or breaker between the red wire and the battery's positive terminal.
- Refer to the inline fuse ratings provided in the product's documentation.
- If you need to extend the length of the power cable supplied with your product, ensure you observe the dedicated *Power cable extensions* advice provided in the product's documentation.

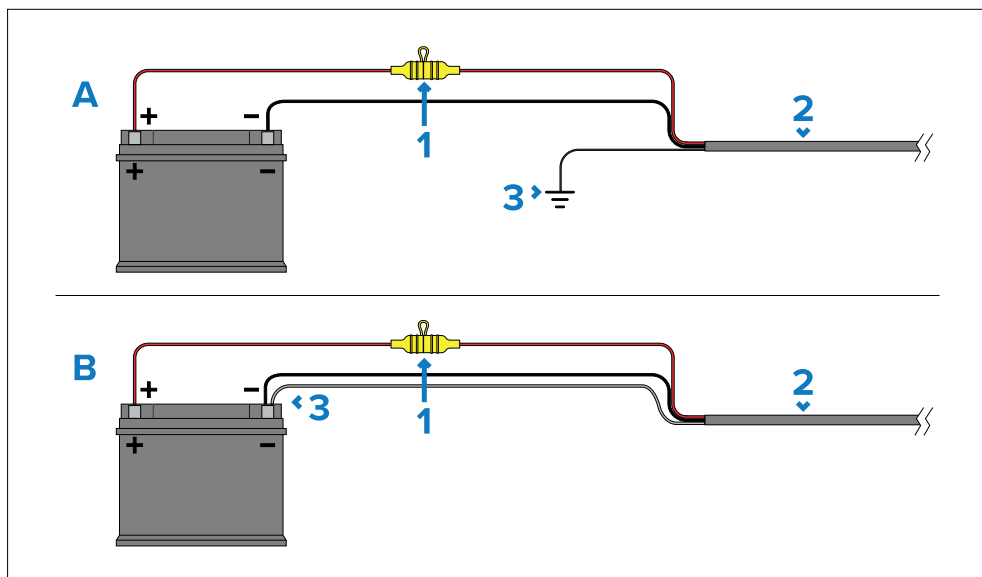

Item	Description
1	Waterproof fuse holder containing a suitably-rated inline fuse must be fitted. For suitable fuse rating, refer to: <i>Inline fuse and thermal breaker ratings</i> .
2	Product power cable.
3	Drain wire connection point.

Battery connection scenario A:

Suitable for a vessel with a common RF ground point. In this scenario, the power cable's drain wire should be connected to the vessel's common ground point.

Battery connection scenario B:

Suitable for a vessel without a common grounding point. In this case, the power cable's drain wire should be connected directly to the battery's negative terminal.

Grounding

Ensure that you observe any additional grounding advice provided in the product's documentation.

More information

It is recommended that best practice is observed in all vessel electrical installations, as detailed in the following standards:

- BMEA Code of Practice for Electrical and Electronic Installations in Boats
- NMEA 0400 Installation Standard
- ABYC E-11 AC & DC Electrical Systems on Boats
- ABYC A-31 Battery chargers and Inverters
- ABYC TE-4 Lightning Protection



Warning: Product grounding

Before applying power to this product, ensure it has been correctly grounded, in accordance with the instructions provided.



Warning: Positive ground systems


Do not connect this unit to a system which has positive grounding.

Grounding — optional grounding point

Frequencies emitted from equipment such as switch mode power supplies or MF/HF transmitters etc. can cause interference with your display's touchscreen. If you experience issues with touchscreen performance, fitting an additional dedicated ground connection can resolve the issue.

Important:

The ground point should **ONLY** be connected when touchscreen interference is observed.

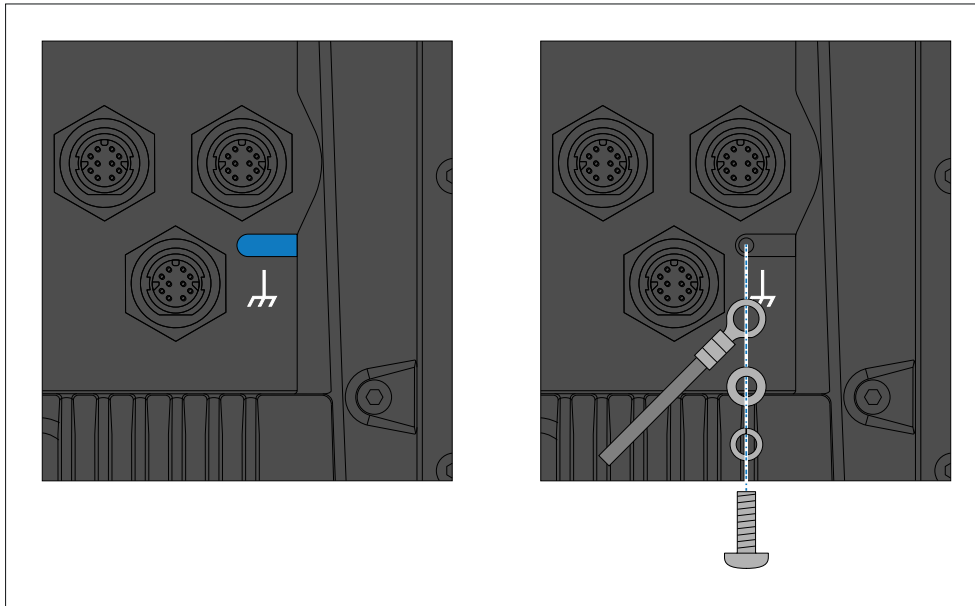

Use a small flat blade screw driver to remove the cover over the grounding screw hole.

Connect one end of the ground wire (not supplied) to your display using the supplied crimp, washer and screw.

Connect the other end of the ground wire to either the vessel's RF ground point, or on vessels without an RF ground system, the negative battery terminal.

The dc power system should be either:

- Negative grounded, with the negative battery terminal connected to the vessel's ground; or

- Floating, with neither battery terminal connected to the vessel's ground.

If several items require grounding, they may first be connected to a single local point (e.g. within a switch panel), with this point connected via a single, appropriately-rated conductor, to the vessel's common RF ground point.

Implementation

The preferred minimum requirement for the path to ground is via a flat tinned copper braid, with a 30 A rating (1/4 inch) or greater. If this is not possible, an equivalent stranded wire conductor may be used, rated as follows:

- for runs of <1 m (3 ft), use 6 mm² (#10 AWG) or greater.
- for runs of >1 m (3 ft), use 8 mm² (#8 AWG) or greater.

In any grounding system, always keep the length of connecting braid or wires as short as possible.

References

- ISO10133/13297
- BMEA code of practice
- NMEA 0400


CHAPTER 10: NETWORK CONNECTIONS

CHAPTER CONTENTS

- 10.1 NMEA 2000 / SeaTalkng connection — page 45
- 10.2 NMEA 0183 connection — page 45
- 10.3 Network connection — page 46
- 10.4 Power over Ethernet (PoE) — page 47

10.1 NMEA 2000 / SeaTalkng connection

The display can be connected to a NMEA 2000 / SeaTalkng® network by connecting a spur cable to the **NMEA 2000** (DeviceNet) connector located on the rear of the display.

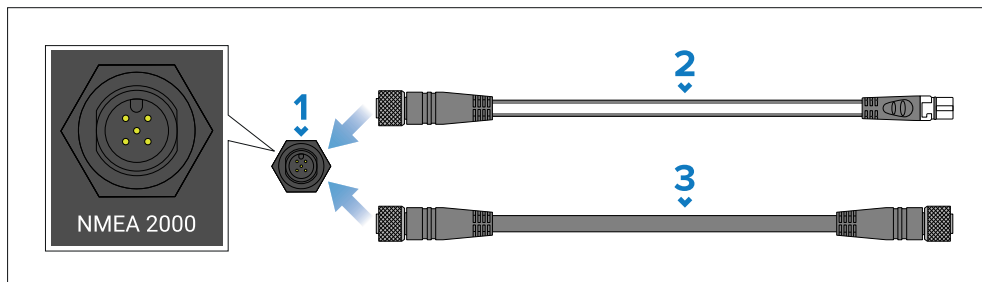

1. Display's **NMEA 2000** (DeviceNet) connector.
2. Use the supplied DeviceNet to SeaTalkng® adaptor cable to connect to a SeaTalkng® network backbone.
3. Alternatively you can connect to a NMEA 2000 backbone using a standard DeviceNet cable (not supplied).

Note:

1. SeaTalkng® and NMEA 2000 devices must be connected to a correctly terminated backbone.
2. SeaTalkng® and NMEA 2000 devices can not be connected directly to the display.
3. Refer to the instructions supplied with your SeaTalkng® or NMEA 2000 device for details on creating a backbone.

Refer to [Chapter 22 Spares and accessories](#) for a list of available SeaTalkng® cables.

10.2 NMEA 0183 connection

The display can transmit and receive NMEA 0183 data when using a compatible NMEA 2000 to NMEA 0183 converter, such as the Actisense® NGW-1 converter (part number: A80721), connected to the same [NMEA 2000] / SeaTalkng® network as the display.

Important:


Ensure all devices are powered off before making connections.

Connect the converter to your NMEA 2000 or SeaTalkng® network, using either a DeviceNet to SeaTalkng® adaptor cable, or a DeviceNet cable as appropriate. Then, connect the converter's NMEA 0183 bare wires to the relevant wires on your NMEA 0183 device, and crimp and insulate the wires.

Note:

The details below are provided as an example of how to connect a device using the Actisense® NGW-1 converter (A80721). Depending on your NMEA 0183 device, you may require a different converter. The converter and device wire colors may also vary from those shown. Refer to the instructions supplied with your NMEA 0183 device and your converter to identify correct signal connections.

Example NMEA 0183 device connection using the Actisense® NGW-1 converter

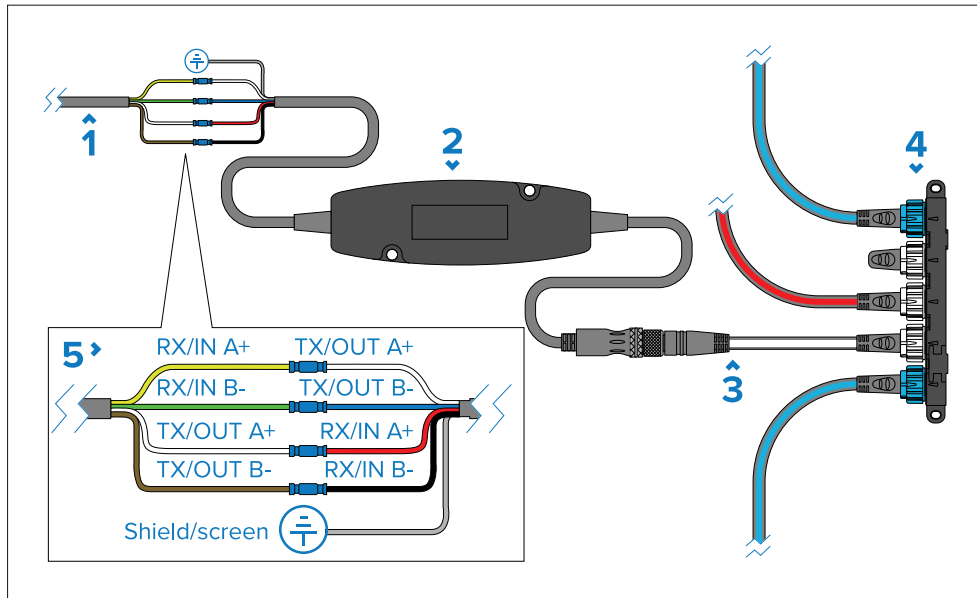

1. Device NMEA 0183 wires.
2. NMEA 2000 to NMEA 0183 converter (e.g. Actisense® NGW-1 converter, A80721).
3. SeaTalkng™ (female) to DeviceNet (female) adaptor cable (e.g. A06045 or A06075).
4. SeaTalkng™ network (requires dedicated 12 V dc power supply).
5. NMEA 0183 wire connections. It is recommended that wire connections are made using crimps and then insulated using insulation tape.

Converter signal (wire color)	NMEA 0183 device signal
TX/OUT A+ (White)	RX/IN A+
TX/OUT B- (Blue)	RX/IN B-
RX/IN A+ (Red)	TX/OUT A+
RX/IN B- (Black)	TX/OUT B-
Shield/Screen	Vessel Ground

If your NMEA 0183 device has only 3 NMEA 0183 wires, the connection will differ from that described above. Please see below for alternative wiring:

Connect to receiving device


Converter signal (wire color)	Receiving NMEA 0183 device signal
TX/OUT A+ (White)	RX/IN
TX/OUT B- (Blue)	NOT CONNECTED
Shield/Screen	Vessel Ground

Connect to transmitting device

Converter signal (wire color)	Transmitting NMEA 0183 device signal
RX/IN A+ (Red)	TX/OUT
RX/IN B- (Black)	Vessel Ground
Shield/Screen	Vessel Ground

10.3 Network connection

The display can be connected to compatible network products by connecting a network cable between the product and one of the **NETWORK** connectors located on the rear of the display. Alternatively, the display can be connected to a network switch, e.g.: RNS-5, or the YachtSense™ Link marine router.

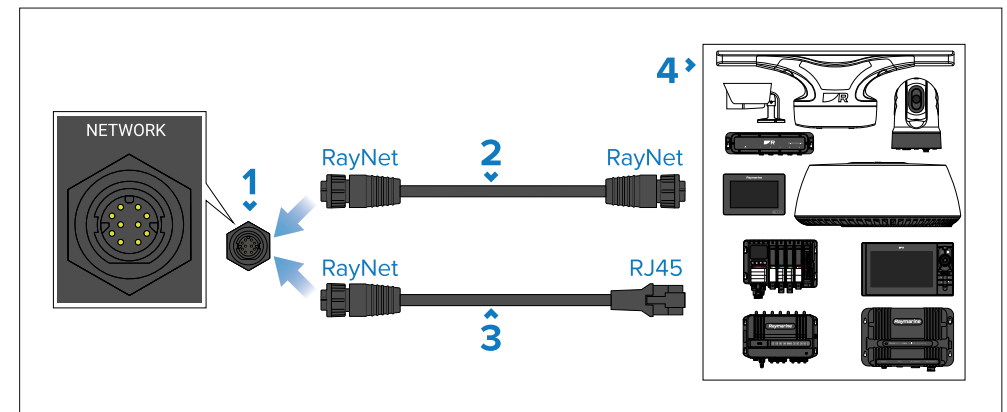

1. Display's **NETWORK** connector.

2. RayNet to RayNet cable — Connect one end of the RayNet cable to your display, and the opposite end to a RayNet device or RayNet network switch.
3. RayNet to RJ45 adapter cable — Connect the RayNet end of the cable to your display, and the opposite end to a network device with an RJ45 connector, or an RJ45 coupler.
4. Example compatible network devices with RayNet or RJ45 connectors (e.g.: Radar scanners, Sonar modules, Displays, Network switches, Cameras etc).


For a list of available network cables refer to [Chapter 22 Spares and accessories](#)

Cable suppression ferrites

To ensure optimum EMC performance and to comply with applicable EMC regulations all RayNet cables connected to this product must have a suppression ferrite fitted.

Three suppression ferrites are included with your display, one for each RayNet connection.

Fit a ferrite to each RayNet cable as shown below:

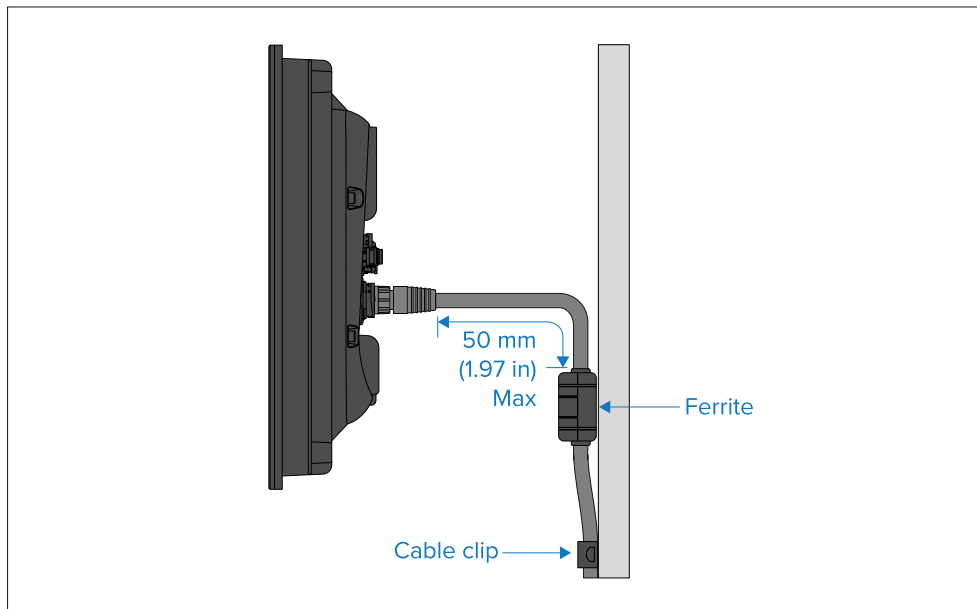

- Cable clips (not supplied) should be used to support the cable and ferrite.

- If you need to remove a ferrite for any reason, ensure it is replaced in its original location before using the product.
- If the ferrite moves freely once fitted use cable ties (not supplied) above and below the ferrite to secure it in place.

10.4 Power over Ethernet (PoE)

Your display is a PSE (Power Sourcing Equipment) which supplies power over the network connections to connected PoE powered device (PD). The display can output a maximum of 32 Watts (26 W @ PD) for consumption by up to 3 PoE powered devices.

The following PoE device classes are supported:

PoE device class	PSE (power sourcing equipment) — display	PD (Power required by device)
Class 1 (Very low power)	4 W	3.84 W
Class 2 (Low power)	7 W	6.49 W
Class 3 (Mid power)	15.4 W	12.95 W
Class 4 (High power)	30 W	25.5 W
Class 0 (Classification unimplemented)	15.4 W	12.95 W

When a device is connected to the network connection it is interrogated to establish if the device is a PoE powered device and if so what class of device it is. The maximum power for that device class (shown in the PSE column above) is then assigned to that network connection and deducted from the remaining power output (e.g. class 2 device = 7 W allocated, 25 W remaining).


If a PoE powered device is connected that will take the total assigned power over 32 W (26 W @ PD) then the device will not be allocated PoE power.

Power over Ethernet (PoE) connections

The display can power PoE devices by connecting them using a network cable to one of the display's **NETWORK POE OUT** connectors, located on the rear of the display.

In the example below, the combined power requirements of the 3 PoE devices does not exceed the 32 watts the display has available. All 3 devices can therefore be powered by the display, via PoE.

Example PoE connections

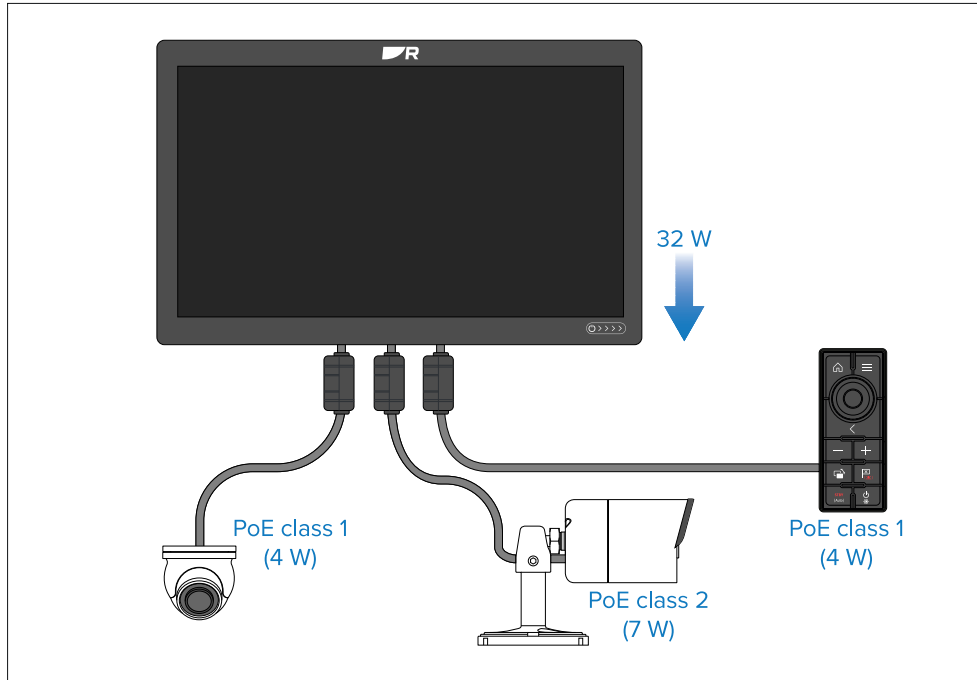

Note:

- The PoE devices should be connected using RayNet cables.
- The ferrites supplied with your display must be used on all RayNet network connections.
- In order to sufficiently power PoE devices, the display's power supply must exceed 9.5 V dc.


CHAPTER 11: VIDEO CONNECTIONS

CHAPTER CONTENTS

- 11.1 Analog video (Video 1) connection — page 50
- 11.2 Analog video (Video 2) connection — page 50
- 11.3 HDMI IN connection — page 50
- 11.4 HDMI OUT connection — page 51

11.1 Analog video (Video 1) connection

Analog video feeds from sources such as a Thermal camera or Security camera can be connected to your display by connecting the device to the BNC connector included on the display's power/video/audio cable. The video feed can be viewed using the Video app.

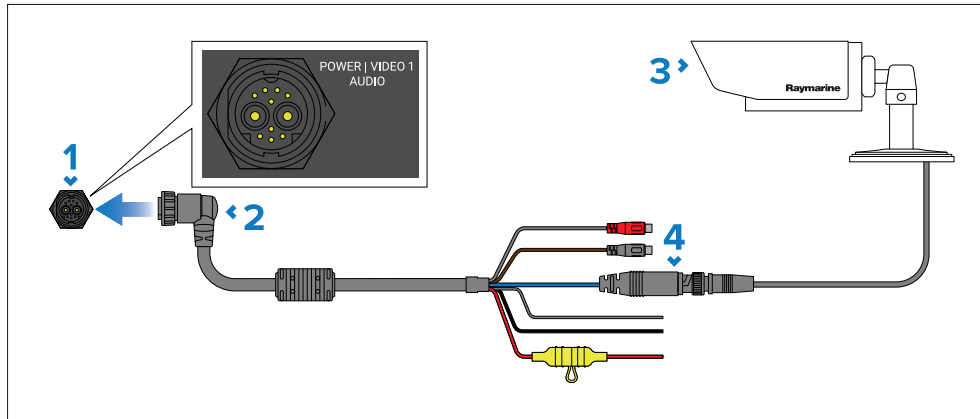


1. Display's **POWER | VIDEO 1 | AUDIO** connector.
2. Power/Video/Audio cable supplied with your display.
3. Analog video device.
4. (Video 1) Analog video BNC connector.

For installation details, refer to the documentation provided with your analog video device.

11.2 Analog video (Video 2) connection

Analog video feeds from sources such as a Thermal camera or Security camera can be connected to your display by connecting the device to the BNC connector on the Video in/Alarm out cable accessory (part number: A80235), which is connected to the **ALARM | VIDEO 2** connector located on the rear of the display. The video feed can be viewed using the Video app.

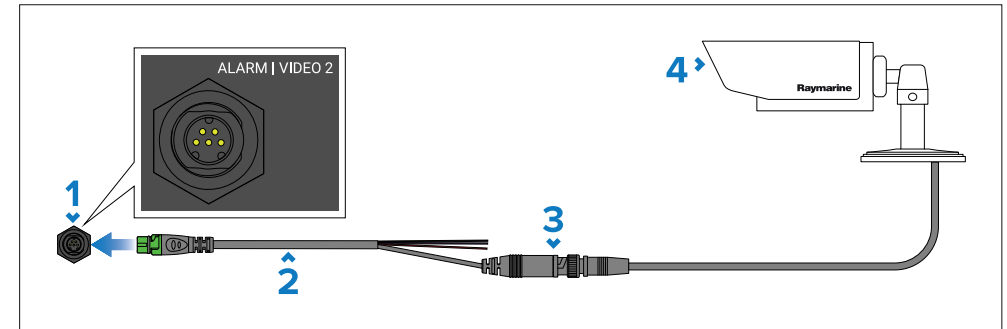

1. Display's **ALARM | VIDEO 2** connector.
2. Video in/Alarm out cable (part number: A80235) — not supplied.
3. (Video 2) Analog video BNC connector.
4. Analog video device.

For installation details, refer to the documentation provided with your analog video device.

Note:

- The **HDMI IN** and **VIDEO 2** connections share internal hardware and cannot be used at the same time. If devices are connected to both connections then the **HDMI IN** connection will take priority.
- The video feed connected to the **HDMI IN** and **VIDEO 2** connections are NOT streamed on the ethernet network to other displays..

11.3 HDMI IN connection

Digital video can be viewed by connecting a digital video device to the **HDMI IN** connector located on the rear of the display using the HDMI cable accessory (part number: A80219). The video feed can be viewed using the Video app.


The supported screen resolutions for the HDMI input are:

- 640 x 480p @ 60 Hz
- 720 x 480p @ 60 Hz
- 720 x 576p @ 50 Hz
- 1280 x 720p @ 50 Hz / 60 Hz
- 1920 x 1080p @ 50 Hz / 60 Hz

The standard HDMI connector is connected to the digital video device and the other end is connected to the **HDMI IN** connector.

Note:

- The maximum supported cable length is 20 m (65.6 ft).
- Ensure that the locking collar is used to secure the connection to the display.

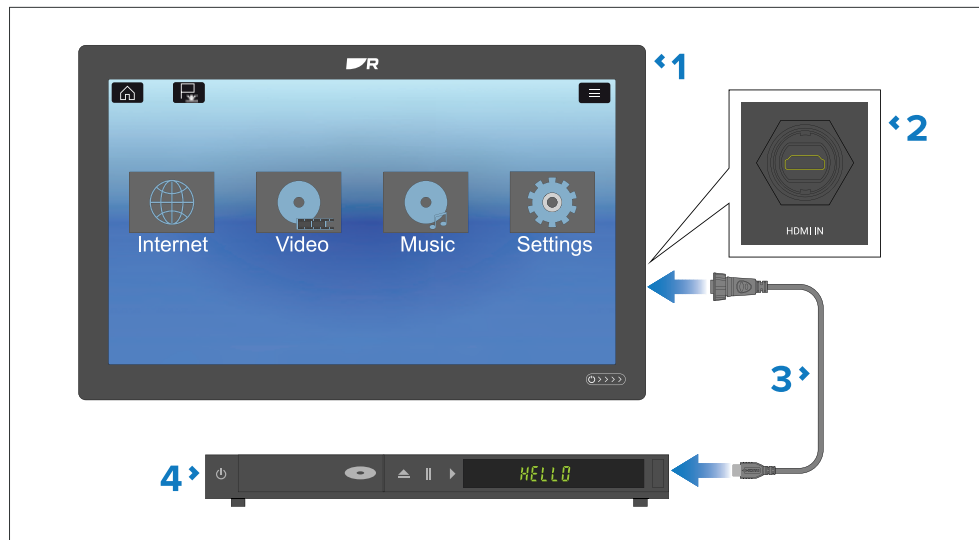

1. Display.
2. Display's **HDMI IN** connector.
3. HDMI cable (part number: A80219) — Not supplied.
4. Video playback device (e.g.: Blu-ray player).

Note:

- The **HDMI IN** and **VIDEO 2** connections share internal hardware and cannot be used at the same time. If devices are connected to both connections then the **HDMI IN** connection will take priority.
- The video feed connected to the **HDMI IN** and **VIDEO 2** connections are NOT streamed on the ethernet network to other displays..

Audio

To listen to the video feed's audio track you require an audio output device this can be:

- Speakers connected to the audio connection on the display's Power/Video/Audio cable.
- A Bluetooth speaker paired with the display.
- Speaker or sound system connected directly to your video playback device.
- Sound system connected to the display's HDMI out connection.

11.4 HDMI OUT connection

You can view the display's screen and output audio to an external High Definition display such as a HDTV or HD monitor by connecting it to the **HDMI OUT** connector located on the rear of the display using the HDMI cable accessory (part number: A80219). The display screen can then be viewed by switching the HDTV's or HD monitor's source to the HDMI connection you connected your display to. You could also connect the HDMI out connection to a sound system that has a HDMI input connection.


The supported screen resolutions for the HDMI output are:

- 720 x 480p @ 60 Hz
- 720 x 576p @ 50 Hz
- 1280 x 720p @ 50 Hz / 60 Hz
- 1920 x 1080p @ 50 Hz / 60 Hz

The standard HDMI connector is connected to the HDTV or HD monitor and the other end is connected to the **HDMI OUT** connector.

Note:

- The maximum supported cable length is 20 m (65.6 ft).
- Ensure that the locking collar is used to secure the connection to the display.

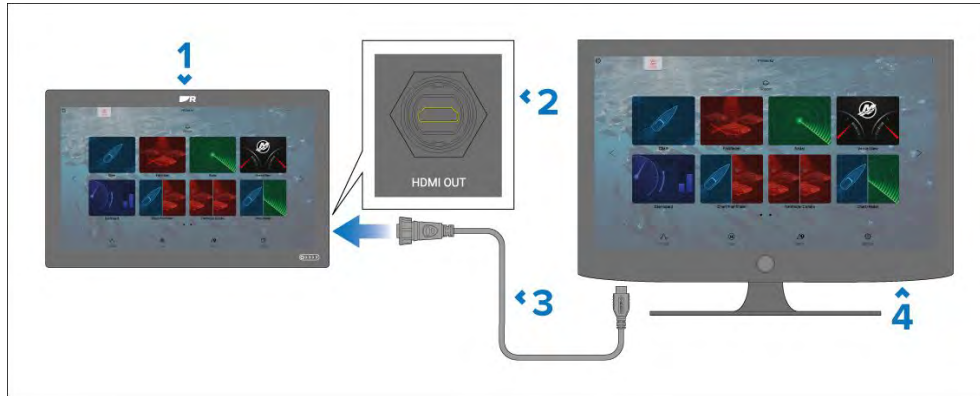

1. Display.
2. Display's **HDMI OUT** connector.
3. HDMI cable (part number: A80219) — Not supplied.
4. HDTV or HD monitor.

CHAPTER 12: USB CONNECTIONS

CHAPTER CONTENTS

- [12.1 Touch control input connection — page 54](#)
- [12.2 Touch out connection — page 54](#)
- [12.3 Accessory connection — page 55](#)


12.1 Touch control input connection

You can view and control the display from a connected high definition touchscreen monitor by connecting the monitor to the **HDMI OUT** and **TOUCH CONTROL IN** connectors located on the rear of the display using the .HDMI cable accessory (part number: A80219) and the USB A to USB B cable accessory (part number: A80578). The display screen can then be viewed by switching the monitor's source to the HDMI connection you connected the cable to and controlled by using the monitor's touchscreen.

The standard HDMI connector and standard USB connector on the accessory cables are connected to the monitor and the other end of the cables are connected **HDMI OUT** and **TOUCH CONTROL IN** connectors.

Note:

Ensure that the locking collars are used to secure the connections to the display.

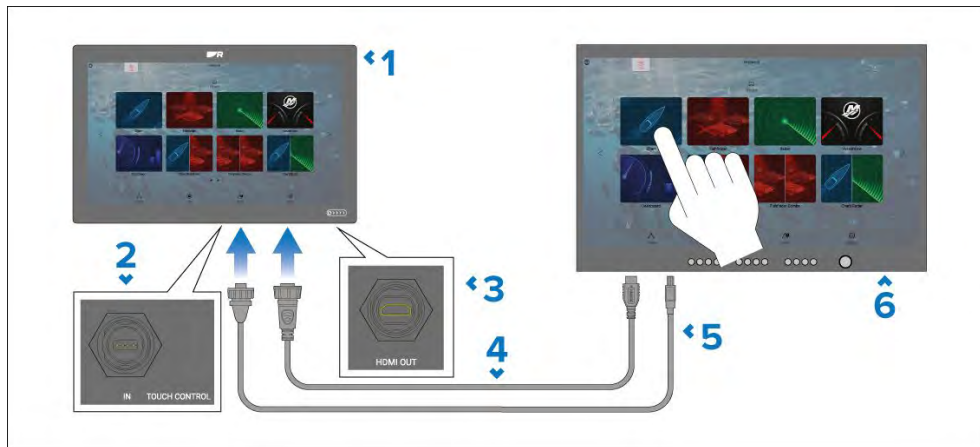

1. Display.
2. Display's **TOUCH CONTROL IN** connector.
3. Display's **HDMI OUT** connector.
4. HDMI cable (part number: A80219) — Not supplied.
5. USB A to USB B cable (part number: A80578) — Not supplied.
6. HD touchscreen display.


12.2 Touch out connection

You can view and control a personal computer or similar device from the display by connecting the device to the **HDMI IN** and **TOUCH CONTROL OUT** connectors located on the rear of the display using the .HDMI cable accessory (part number: A80219) and the USB B to USB A cable accessory (part number: A80579). The device can then be viewed and controlled from the display using Video app and the display's touchscreen.

The standard HDMI connector and standard USB connector on the accessory cables are connected to the monitor and the other end of the cables are connected **HDMI IN** and **TOUCH CONTROL OUT** connectors.

Note:

Ensure that the locking collars are used to secure the connections to the display.

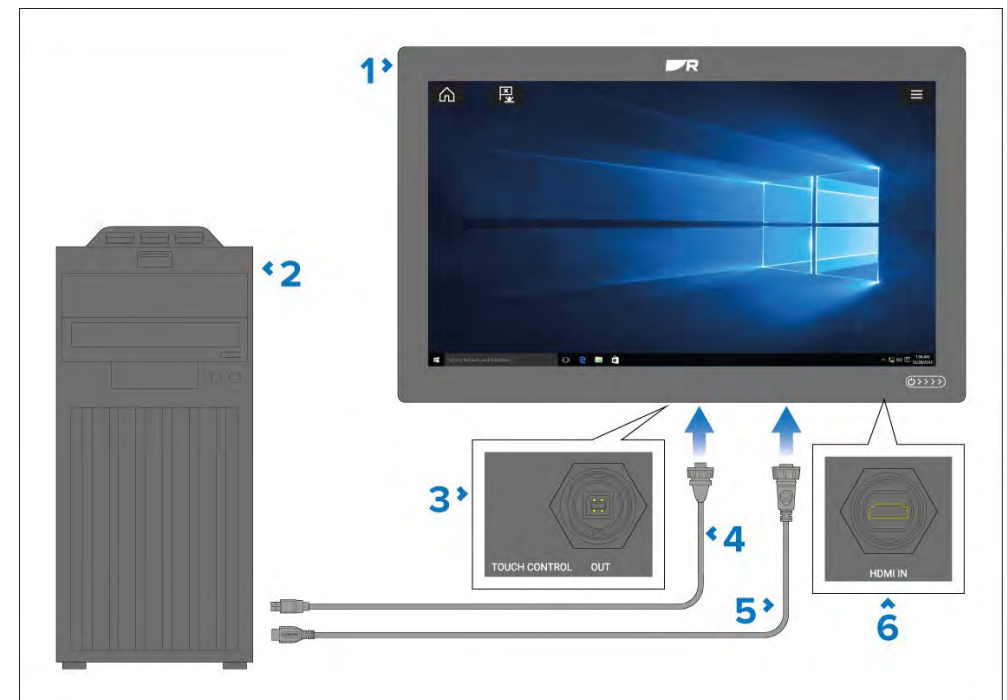

1. Display.
2. Personal computer.
3. Display's **TOUCH CONTROL OUT** connector.

4. USB B to USB A cable (part number: A80579) — Not supplied.
5. HDMI cable (part number: A80219) — Not supplied.
6. Display's **HDMI IN** connector.

Note:

- The **HDMI IN** and **VIDEO 2** connections share internal hardware and cannot be used at the same time. If devices are connected to both connections then the **HDMI IN** connection will take priority.
- The video feed connected to the **HDMI IN** and **VIDEO 2** connections are NOT streamed on the ethernet network to other displays..


12.3 Accessory connection

The **ACCESSORY** connector can be used to connect an external memory card reader or external storage device to the display.

The following functions require a card reader attached to the display:

- use of electronic cartography — alternatively cartography can be shared from a networked display that does have a card reader attached.
- updating product software — alternatively if your display has a connection to the internet you can check online for software updates.
- import and export user data (waypoints, routes and tracks) — alternatively user data can be imported and exported from a networked display that does have a card reader attached.
- backup and restore settings — alternatively settings can be backed up and restored from a networked display that does have a card reader attached.
- viewing pdf files
- (1) capturing and viewing screenshots or images (.png, .jpg files)
- (2) recording and viewing video files (.mov files)
- installation of third-party LightHouse app (.apk files) (for installation only; apps cannot be run directly from storage device).
- connection of a compatible UAV (drone), for use with display's UAV app, requires Bulkhead Mount Micro USB Socket (A80630).

In addition to the storage uses listed above, the USB slot on the RCR-SDUSB can also supply 0.5A of current to charge mobile devices.

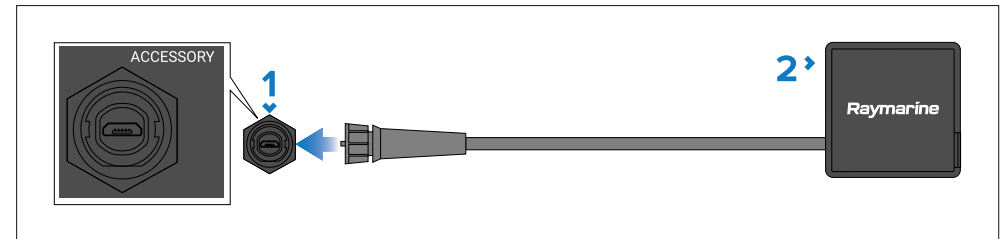

1. Display's **ACCESSORY** connector.
2. Accessory device:
 - **RCR-SDUSB** (part number: A80440) — Includes 1x SD card slot (or MicroSD card when using an SD card adaptor) and 1x USB (Type A connector) (e.g. for connection of an external USB hard drive or pen / flash drive).
 - **RCR-1** (part number A80585) — Includes 1x MicroSD card slot.
 - **Bulkhead Mount Micro USB Socket** (part number: A80630) — Includes 1x Micro USB (Type Micro A connector) (e.g. for connection of an external USB hard drive or pen / flash drive; an additional adaptor may be required for the connection of some USB devices).
- To store images (.png, .jpg files), *[External SD]* or *[External USB]* must be selected as the *[Screenshot File]* location on the *[This display]* tab in the main display settings menu (accessible from Homescreen).
- To store video (.mov files), *[External SD]* or *[External USB]* must be selected as the *[Save Files]* location on the *[Photo & Video recording]* tab in the Video app settings menu.

For installation details for these devices, please refer to the instructions provided with your accessory.



Warning: USB device power

Do NOT connect any device to the product's USB connection that requires an external power source.

CHAPTER 13: AUDIO CONNECTIONS

CHAPTER CONTENTS


- [13.1 Audio \(RCA\) connections — page 57](#)

13.1 Audio (RCA) connections

The display can output audio received from an entertainment device connected to the **HDMI IN** connection, or from an installed third-party APK app (such as Netflix), by connecting the **RCA AUDIO** connectors on the display's Power/audio/video cable to an audio input on an amplifier or entertainment system.

Note:

Audio output requires an external amplifier or entertainment system.

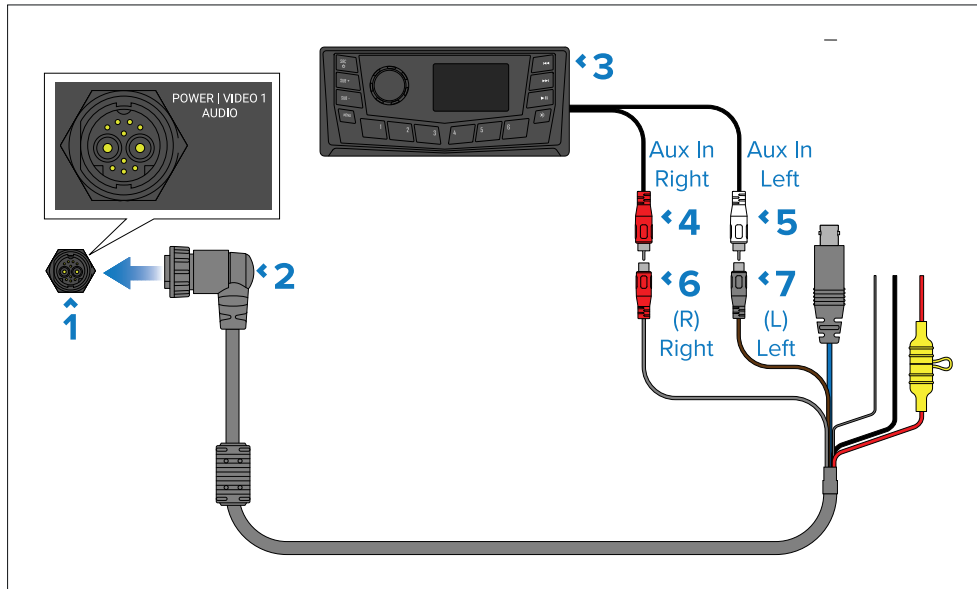

1. **POWER | VIDEO 1 | AUDIO** connector.
2. Power/video/audio cable, 1.5 m (4.9 ft).
3. Entertainment system with built-in amplifier.
4. Right auxiliary input RCA (usually red male connector).
5. Left auxiliary input RCA (usually white or black male connector).
6. Right RCA output (red female connector).
7. Left RCA output black female connector)

Note:

Audio can also be output wirelessly, by connecting a Bluetooth speaker to the display. For instructions on pairing a Bluetooth speaker, refer to the LightHouse Operation instructions for your display (Document number: 81406).

A Bluetooth speaker will take priority over RCA audio and HDMI out (i.e.: if all are connected audio will only be output from the Bluetooth speaker, if only RCA and HDMI out are connected the audio will play from both. In this scenario to output from RCA audio / HDMI out instead switch the Bluetooth speaker off).

CHAPTER 14: ALARM BUZZER AND GNSS ANTENNA CONNECTIONS

CHAPTER CONTENTS


- 14.1 External alarm connection — page 59
- 14.2 GNSS (GPS) antenna connection — page 59

14.1 External alarm connection

An external alarm can be connected to the **ALARM | VIDEO 2** connector located on the rear of the display, using the Video In/Alarm out cable accessory (part number: A80235). The alarm buzzer sounds an audible alert tone when an alarm is triggered on the display.

Note:

- To ensure a secure connection to the display, twist the locking collar on the **ALARM | VIDEO 2** connector so that it is in the locked position.
- The alarm to cable connection should be made using suitable connectors (e.g. crimps), and then covered in insulation tape or similar to ensure the connection is secure and watertight.

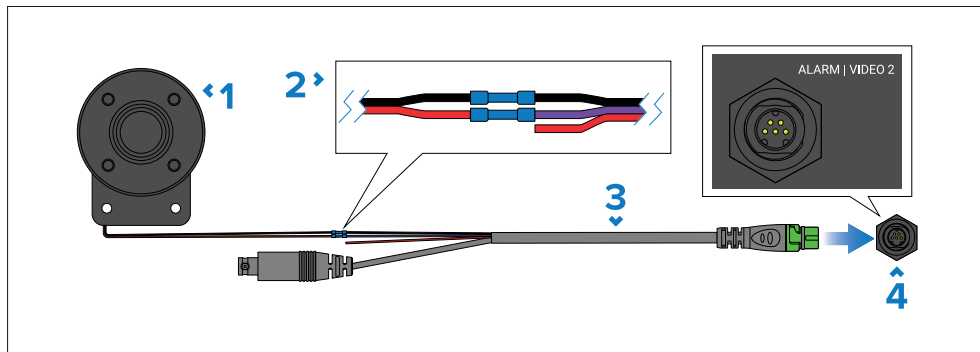

1. External alarm buzzer (part number: E26033) — Not supplied.
2. Connection — Wires must be connected **Black to Black** and **Red to Purple**.
3. Video in/Alarm out cable (part number: A80235) — Not supplied.
4. Display's **ALARM | VIDEO 2** connector.

14.2 GNSS (GPS) antenna connection

A passive antenna, such as the GA200 (part number A80589) is required to obtain a position fix using the display's built-in GNSS (GPS) receiver. The antenna is connected to the **GPS ANTENNA** connector located on the rear of the display.



1. Passive GNSS (GPS) antenna:
 - **GA200** (part number: A80589), or
 - **GA150** (part number: A80288)
2. Display's **GPS Antenna** connector.

For installation details, refer to the documentation provided with your GNSS (GPS) antenna.

CHAPTER 15: MAINTAINING YOUR DISPLAY

CHAPTER CONTENTS

- 15.1 Service and maintenance — page 61
- 15.2 Product cleaning — page 61

15.1 Service and maintenance

This product contains no user serviceable components. Please refer all maintenance and repair to authorized Raymarine dealers. Unauthorized repair may affect your warranty.



Warning: High voltage

This product contains high voltage. Do NOT remove covers or attempt to access internal components, unless specifically instructed in the documentation provided.



Warning: FCC Warning (Part 15.21)

Changes or modifications to this equipment not expressly approved in writing by Raymarine Incorporated could violate compliance with FCC rules and void the user's authority to operate the equipment.

Caution: Sun covers

- If your product is supplied with a sun cover, to protect against the damaging effects of ultraviolet (UV) light, always fit the sun cover when the product is not in use.
- To avoid potential loss, sun covers must be removed when travelling at high speed, whether in water or when the vessel is being towed.

Routine equipment checks

It is recommended that you perform the following routine checks, on a regular basis, to ensure the correct and reliable operation of your equipment:

- Examine all cables for signs of damage or wear and tear.
- Check that all cables are securely connected.

15.2 Product cleaning

Best cleaning practices.

When cleaning products:

- Switch off power supply.
- Use a clean damp cloth to wipe clean.
- Do NOT use: abrasive, acidic, ammonia, solvent or other chemical based cleaning products.
- Do NOT use a jet wash.

Cleaning the display case

The display is a sealed unit and does not require regular cleaning. If it is necessary to clean the display, follow this basic procedure:

1. Switch off the power to the display.
2. Wipe the case with a clean, lint-free cloth.
3. If necessary, use a mild detergent to remove grease marks.

Cleaning the display screen

A coating is applied to the display screen. This makes it water repellent, and prevents glare. To avoid damaging this coating, follow this procedure:

1. Switch off the power to the display.
2. Rinse the screen with fresh water to remove all dirt particles and salt deposits.
3. Allow the screen to dry naturally.
4. If any smears remain, very gently wipe the screen with a clean microfibre cleaning cloth.

Cleaning the suncover

If you use a suncover for your display clean it regularly following the procedure below to avoid causing damage to your display's screen.

1. Carefully remove the suncover from the display.
2. Rinse the suncover with fresh water to remove all dirt particles and salt deposits.
3. Allow the suncover to dry naturally.

CHAPTER 16: TROUBLESHOOTING

CHAPTER CONTENTS

- 16.1 Troubleshooting — page 63
- 16.2 LED Diagnostics — page 63
- 16.3 Power up troubleshooting — page 64
- 16.4 GNSS (GPS) troubleshooting — page 65
- 16.5 Sonar troubleshooting — page 66
- 16.6 Wi-Fi troubleshooting — page 68
- 16.7 Touchscreen troubleshooting — page 70
- 16.8 Miscellaneous troubleshooting — page 70

16.1 Troubleshooting

The troubleshooting section provides possible causes and the corrective action required for common problems that are associated with the installation and operation of your product.

Before packing and shipping, all Raymarine® products are subjected to comprehensive testing and quality assurance programs. If you do experience problems with your product, this section will help you to diagnose and correct problems to restore normal operation.

If after referring to this section you are still having problems with your product, please refer to the *Technical support* section of this manual for useful links and Raymarine® Product Support contact details.

16.2 LED Diagnostics

The Display's "Power swipe" key is illuminated using LEDs. The LED color and flash sequence identifies the status of the display, along with any error codes.

LED indication	Status and required action
	(White) Powered up . Ok Normal operation — no user action is required.
	(Red) Standby Swipe to power up display.
	(Blue) Recovery mode Follow the power on reset instructions: p.64 — Performing a power on reset
	(Red flash: 1 a second) Low voltage <ul style="list-style-type: none"> • Increase supply voltage to within operating temperature range. • Check power cabling and connections for damage and corrosion; replace if required.

LED indication	Status and required action
	(Red flash: 2 a second) High voltage <ul style="list-style-type: none"> • Reduce supply voltage to within operating temperature range.
	(Red / Blue alternating flash) High temperature <ul style="list-style-type: none"> • Check display installation for adequate ventilation and 'free' space around rear of display. • Check ambient temperature; if high, consider powering down the display until ambient temperature reduces.

16.3 Power up troubleshooting

Product does not turn on or keeps turning off

Possible causes	Possible solutions
Blown fuse / tripped breaker.	<ol style="list-style-type: none"> 1. Check condition of relevant fuses and breakers and connections, replace if necessary. (Refer to the <i>Technical Specification</i> section of your product's installation instructions for fuse ratings.) 2. If fuse keeps blowing check for cable damage, broken connector pins or incorrect wiring.
Poor / damaged / insecure power supply cable / connections	<ol style="list-style-type: none"> 1. Check that the power cable connector is correctly orientated and fully inserted into the display connector and locked in position. 2. Check the power supply cable and connectors for signs of damage or corrosion, and replace if necessary. 3. With the display turned on, try flexing the power cable near to the display connector to see if this causes the unit to restart or lose power. Replace if necessary. 4. Check the vessel's battery voltage and the condition of the battery terminals and power supply cables, ensuring connections are secure, clean and free from corrosion. Replace if necessary. 5. With the product under load, using a multi-meter, check for high voltage drop across all connectors / fuses etc, and replace if necessary.
Incorrect power connection	The power supply may be wired incorrectly, ensure the installation instructions have been followed.

Product will not start up (restart loop)

Possible causes	Possible solutions
Power supply and connection	See possible solutions from the table above, entitled 'Product does not turn on or keeps turning off'.
Software corruption	<ol style="list-style-type: none"> 1. In the unlikely event that the product's software has become corrupted, try downloading and installing the latest software from the Raymarine website. 2. On display products, as a last resort, attempt to perform a 'Power on Reset'. Be aware that this will delete all settings / presets and user data (such as waypoints and tracks), and revert the unit back to factory defaults.

Performing a power on reset on touch only displays

Important:

- Before performing a power on reset ensure you have backed up your settings and user data (waypoints, routes and tracks) to a memory card.
 - You may also want to save any crash logs that are stored on your display to memory card for future reference..
1. Switch off power at the breaker to ensure that the display is completely powered off, and not in Standby mode. Alternatively, remove the power cable from the display.
 2. Power on your display, and within approximately 10 seconds, swipe your finger from right to left (opposite direction to powering on) across the *[Power]* button swipe area 5 times. Recovery options are displayed.
 3. Swipe your finger from right to left twice to highlight *[Wipe data/factory reset]*.
 4. Swipe your finger from left to right once to accept.
 5. Swipe your finger from right to left once to highlight *[Yes]*.
 6. Swipe your finger from left to right once to restore your display to factory default settings.
 7. When *[Data wipe complete]* is displayed, swipe your finger from left to right to restart your display.

Saving crash logs

If you experience problems with your display it is recommended that you save display crash logs to memory card for future reference.

You may be requested to save crash logs when contacting technical support it is advisable that you save crash logs before performing a reset of your display.

1. Insert a memory card into your card reader.
2. Select *[Settings]* from the Homescreen..
3. Select the *[Network]* tab.
4. Select *[Diagnostics]*.
5. Select *[Save logs (#)]* to save logs from the current display, or
6. Select *[Save crash logs from all displays]* to save logs from all displays on the network.
7. Select *[OK]*.

16.4 GNSS (GPS) troubleshooting

Problems with the GNSS (GPS) and their possible causes and solutions are described here. Your position fix coordinates are displayed in the status area located in the top left corner of the Homescreen.

Note:

Your product includes an internal GNSS (GPS) receiver that requires and external antenna to operate correctly.

No position fix

Possible causes	Possible solutions
No external GNSS (GPS) antenna connected.	When using your product's internal GNSS (GPS) receiver an external antenna such as the GA150 must be connected to enable a position fix to be obtained.
Internal GNSS (GPS) receiver disabled.	When using your product's internal GNSS (GPS) receiver, ensure that it is enabled in the relevant settings menu. To access the relevant menu, select the status area located in the top left corner of the Homescreen and select <i>[Satellites]</i> and then select the <i>[Settings]</i> tab, locate the Internal GPS option and ensure it is enabled.
External GNSS (GPS) antenna connection fault.	When using your product's internal GNSS (GPS) receiver, ensure that the connection to its external antenna is secure and that the cabling is free from damage.
External GNSS (GPS) receiver connection fault.	When using an external GNSS (GPS) receiver, ensure that connections are secure and that the cabling is free from damage.
External GNSS (GPS) receiver or antenna location (e.g.: installed below decks or in close proximity to equipment which may cause interference).	Ensure the GNSS (GPS) receiver or antenna has a clear unobstructed view of the sky. Refer to the documentation supplied with your external receiver / antenna and ensure location requirements have been adhered to.
Geographic location or prevailing conditions preventing satellite fix.	Check periodically to see if a fix is obtained in better conditions or another geographic location.

16.5 Sonar troubleshooting

Problems that can be encountered with your sonar module and possible causes and solutions are described here.

Note:

Your product requires an external sonar module to be connected to enable use of the Fishfinder app.

This troubleshooting guide assumes that you have a compatible transducer connected to your external sonar module, which is correctly networked to your display.

Scrolling image is not being displayed:

Possible causes	Possible solutions
Sonar disabled	Select [<i>Ping Enable</i>] from the Sonar app's Sounder menu.
Incorrect transducer selected	Check that the correct transducer is selected in the Sonar app's Transducer menu.
Damaged cables	<ol style="list-style-type: none"> 1. Check that the transducer cable connector is fully inserted and locked in position. 2. Check the power supply cable and connectors for signs of damage or corrosion, replace if necessary. 3. With the unit turned on, try flexing the cable near to the display connector to see if this causes the unit to re-boot/lose power, replace if necessary. 4. Check the vessel's battery voltage, the condition of the battery terminals and power supply cables, ensuring connections are secure, clean and free from corrosion, replace if necessary. 5. With the product under load, using a multi-meter, check for high voltage drop across all connectors/fuses etc (this can cause the Sonar applications to stop scrolling or the unit to reset/turn off), replace if necessary.

Possible causes	Possible solutions
Damaged or fouled transducer	Check the condition of the transducer ensuring it is not damaged and is free from debris/fouling, clean or replace as necessary.
Wrong transducer fitted	Ensure the transducer is compatible with your system.
External sonar module: / RayNet network problem.	<ul style="list-style-type: none"> • Check that the unit is correctly connected to the multifunction display or Raymarine network switch. If a crossover coupler or other coupler cable / adapter is used, check all connections ensuring connections are secure, clean and free from corrosion, replace if necessary.
External sonar module: Software mismatch between equipment may prevent communication.	Ensure all Raymarine products contain the latest available software, check the Raymarine website: www.raymarine.com/software for software compatibility.

No depth reading / lost bottom lock:

Possible causes	Possible solutions
Transducer location	Check that the transducer has been installed in accordance with the instructions provided with the transducer.
Transducer angle	If the transducer angle is too great the beam can miss the bottom, adjust transducer angle and recheck.
Transducer kicked-up	If the transducer has a kick-up mechanism, check that it has not kicked up due to hitting an object.
Power source insufficient	With the product under load, using a multi-meter, check the power supply voltage as close to the unit as possible to establish actual voltage when the current is flowing. (Check your product's Technical specification for power supply requirements.)
Damaged or fouled transducer	Check the condition of the transducer ensuring it is not damaged and is free from debris / fouling.

Possible causes	Possible solutions
Damaged cables	<ol style="list-style-type: none"> 1. Check the unit's connector for broken or bent pins. 2. Check that the cable connector is fully inserted into the unit and that the locking collar is in the locked position. 3. Check the cable and connectors for signs of damage or corrosion, replace if necessary. 4. With the unit turned on, try flexing the power cable near to the display connector to see if this causes the unit to re-boot/loose power, replace if necessary. 5. Check the vessel's battery voltage, the condition of the battery terminals and power supply cables, ensuring connections are secure, clean and free from corrosion, replace if necessary. 6. With the product under load, using a multi-meter, check for high voltage drop across all connectors/fuses etc (this can cause the Sonar applications to stop scrolling or the unit to reset/turn off), replace if necessary.
Vessel speed too high	Slow vessel speed and recheck.
Bottom too shallow or too deep	The bottom depth may be outside of the transducers depth range, move vessel to shallower or deeper waters as relevant and recheck.

Poor / problematic image

Possible causes	Possible solutions
Vessel stationary	Fish arches are not displayed if the vessel is stationary; fish will appear on the display as straight lines.
Scrolling paused or speed set too low	Unpause or increase sonar scrolling speed.

Possible causes	Possible solutions
Sensitivity settings may be inappropriate for present conditions.	Check and adjust sensitivity settings or perform a Sonar reset.
Damaged cables	<ol style="list-style-type: none"> 1. Check the unit's connector for broken or bent pins. 2. Check that the cable connector is fully inserted into the unit and that the locking collar is in the locked position. 3. Check the cable and connectors for signs of damage or corrosion, replace if necessary. 4. With the unit turned on, try flexing the power cable near to the display connector to see if this causes the unit to re-boot/loose power, replace if necessary. 5. Check the vessel's battery voltage, the condition of the battery terminals and power supply cables, ensuring connections are secure, clean and free from corrosion, replace if necessary. 6. With the product under load, using a multi-meter, check for high voltage drop across all connectors/fuses etc (this can cause the Sonar applications to stop scrolling or the unit to reset/turn off), replace if necessary.
Transducer location	<ul style="list-style-type: none"> • Check that the transducer has been installed in accordance with the instructions provided with the transducer. • If a transom mount transducer is mounted too high on the transom it may be lifting out of the water, check that the transducer face is fully submerged when planing and turning.
Transducer kicked-up	If the transducer has a kick-up mechanism, check that it has not kicked up due to hitting an object.

Possible causes	Possible solutions
Damaged or fouled transducer	Check the condition of the transducer ensuring it is not damaged and is free from debris / fouling.
Damaged transducer cable	Check that the transducer cable and connection is free from damage and that the connections are secure and free from corrosion.
Turbulence around the transducer at higher speeds may affect transducer performance	Slow vessel speed and recheck.
Interference from another transducer	<ol style="list-style-type: none"> 1. Turn off the transducer causing the interference. 2. Reposition the transducers so they are further apart.
Unit power supply fault	Check the voltage from the power supply, if this is too low it can affect the transmitting power of the unit.

16.6 Wi-Fi troubleshooting

Before troubleshooting problems with your Wi-Fi connection, ensure that you have followed the Wi-Fi location requirements guidance provided in the relevant installation instructions and performed a power cycle/reboot of the devices you are experiencing problems with.

Cannot find network

Possible cause	Possible solutions
Wi-Fi not currently enabled on devices.	Ensure Wi-Fi is enabled on both Wi-Fi devices and rescan available networks.
Some devices may automatically turn off Wi-Fi when not in use to save power.	Power cycle / reboot devices and rescan available networks.

Possible cause	Possible solutions
Device not broadcasting.	<ol style="list-style-type: none"> 1. Try to enable broadcasting of the device's network using the Wi-Fi settings on the device you are trying to connect to. 2. You may still be able to connect to the device, when it is not broadcasting, by manually entering the device's Wi-Fi Name / SSID and passphrase in the connection settings of the device you are trying to connect.
Devices out of range or signal being blocked.	Move devices closer together or, if possible remove the obstructions and then rescan available network.

Cannot connect to network

Possible cause	Possible solutions
Some devices may automatically turn off Wi-Fi when not in use to save power.	Power cycle/reboot devices and retry the connection.
Trying to connect to the wrong Wi-Fi network	Ensure you are trying to connect to the correct Wi-Fi network, the Wi-Fi network's name can be found in the Wi-Fi settings on the broadcasting device (the device that you are trying to connect to).
Incorrect network credentials	Ensure you are using the correct passphrase, the Wi-Fi network's passphrase can be found in the Wi-Fi settings on the broadcasting device (the device that you are trying to connect to).

Possible cause	Possible solutions
Bulkheads, decks and other heavy structure can degrade and even block the Wi-Fi signal. Depending on the thickness and material used it may not always be possible to pass a Wi-Fi signal through certain structures	<ol style="list-style-type: none"> 1. Try repositioning the devices so the structure is removed from the direct line of sight between the devices, or 2. If possible use a wired connection instead.

Interference being caused by other Wi-Fi enabled or older Bluetooth enabled devices (Bluetooth and Wi-Fi both operate in the 2.4 GHz frequency range, some older bluetooth devices may interfere with Wi-Fi signals.)	<ol style="list-style-type: none"> 1. Change the Wi-Fi Channel of the device you are trying to connect to and retry the connection. You can use free Wi-Fi analyzer apps on your smart device to help you choose a better channel (channel with least traffic). 2. Temporarily disable each wireless device in turn until you have identified the device causing the interference.
---	--

<p>Interference caused by other devices that use the 2.4GHz frequency See list below of some common devices that use the 2.4GHz frequency:</p> <ul style="list-style-type: none"> • Microwave ovens • Fluorescent lighting • Cordless phones / baby monitors 	Temporarily switch off each device in turn until you have identified the device causing the interference, then remove or reposition the offending device(s).
---	--

Possible cause	Possible solutions
<ul style="list-style-type: none"> • Motion sensors <p>Interference caused by electrical and electronic devices and associated cabling could generate an electromagnetic field which may interfere with the Wi-Fi signal.</p>	Temporarily switch off each item in turn until you have identified the device causing the interference, then remove or reposition the offending device(s).

Connection extremely slow and or keeps dropping out

Possible cause	Possible solutions
Wi-Fi performance degrades over distance so products farther away will receive less network bandwidth. Products installed close to their maximum Wi-Fi range will experience slow connection speeds, signal drop outs or not being able to connect at all.	<ul style="list-style-type: none"> • Move devices closer together. • For fixed installations such as a Quantum Radar, enable the Wi-Fi connection on an display installed closer to the device.
Interference being caused by other Wi-Fi enabled or older Bluetooth enabled devices (Bluetooth and Wi-Fi both operate in the 2.4 GHz frequency range, some older	<ol style="list-style-type: none"> 1. Change the Wi-Fi Channel of the device you are trying to connect to and retry the connection. You can use free Wi-Fi analyzer apps on your smart device to help you choose a better channel (channel with least traffic). 2. Temporarily switch off each device in turn until you have identified the device causing the

Possible cause	Possible solutions
bluetooth devices may interfere with Wi-Fi signals.)	interference, then remove or reposition the offending device(s).
Interference from devices on other vessels. When in close proximity to other vessels, for example, when moored up in a marina, many other Wi-Fi signals may be present.	<ol style="list-style-type: none"> 1. Change the Wi-Fi Channel of the device you are trying to connect to and retry the connection. You can use free Wi-Fi analyzer apps on your smart device to help you choose a better channel (channel with least traffic). 2. If possible, move your vessel to a location with less Wi-Fi traffic.

Network connection established but no data

Possible cause	Possible solutions
Connected to the wrong network.	Ensure that your devices is connected to the correct network.
Device software incompatibility.	Ensure both devices are running the latest available software.
It may be possible that the device has become defective.	<ol style="list-style-type: none"> 1. Try updating software to a later version, or 2. try reinstalling the software. 3. Obtain new replacement device.

Mobile application running slowly or not at all

Possible cause	Possible solutions
Raymarine® app not installed	Install mobile app from relevant app store.
Raymarine® app version not compatible with display software	Ensure mobile app and display software are latest available versions.
Mobile apps not enabled on display	Enable “Viewing only” or “Remote Control” as required in the Mobile Apps setting on your display.

16.7 Touchscreen troubleshooting

Problems with the touchscreen and their possible causes and solutions are described here.

Touchscreen does not operate as expected:

Possible causes	Possible solutions
TouchLock is enabled.	Swipe your finger from left to right across the [Power] button swipe area to de-activate the TouchLock.
Screen is not being operated with bare fingers, for example gloves are being worn.	Bare fingers must make contact with the screen for correct operation. Alternatively you may use conductive gloves.
Water deposits on the screen.	Carefully clean and dry the screen in accordance with the instructions provided.

16.8 Miscellaneous troubleshooting

Miscellaneous problems and their possible causes and solutions are described here.

Display behaves erratically (Frequent unexpected resets/System crashes or other erratic behavior):

Possible causes	Possible solutions
Intermittent problem with power to the display.	<ul style="list-style-type: none">• Check relevant fuses and breakers.• Check that the power supply cable is sound and that all connections are tight and free from corrosion.• Check that the power source is of the correct voltage and sufficient current.
Software mismatch on system (upgrade required).	Go to www.raymarine.com and click on support for the latest software downloads.
Corrupt data / other unknown issue.	Perform a factory reset. <div style="border: 2px solid red; padding: 5px;"><p>Important: This will result in the loss of any settings and data (such as waypoints) stored on the product. Save any important data to a memory card before resetting.</p></div>

CHAPTER 17: TECHNICAL SUPPORT

CHAPTER CONTENTS

- 17.1 Raymarine product support and servicing — page 73
- 17.2 Learning resources — page 74

17.1 Raymarine product support and servicing

Raymarine provides a comprehensive product support service, as well as warranty, service, and repairs. You can access these services through the Raymarine website, telephone, and e-mail.

Product information

If you need to request service or support, please have the following information to hand:

- Product name.
- Product identity.
- Serial number.
- Software application version.
- System diagrams.

You can obtain this product information using diagnostic pages of the connected display.

Servicing and warranty

Raymarine offers dedicated service departments for warranty, service, and repairs.

Don't forget to visit the Raymarine website to register your product for extended warranty benefits: <https://www.raymarine.com/en-us/support/product-registration>

United Kingdom (UK), EMEA, and Asia Pacific:

- E-Mail: emea.service@raymarine.com
- Tel: +44 (0)1329 246 932

United States (US):

- E-Mail: rm-usrepair@flir.com
- Tel: +1 (603) 324 7900

Web support

Please visit the "Support" area of the Raymarine website for:

- **Manuals and Documents** — <http://www.raymarine.com/manuals>
- **Technical support forum** — <https://raymarine.custhelp.com/app/home>
- **Software updates** — <http://www.raymarine.com/software>

Worldwide support

United Kingdom (UK), EMEA, and Asia Pacific:

[Technical support](#)

- Help desk: <https://raymarine.custhelp.com/app/home>
- Tel: +44 (0)1329 246 777

United States (US):

- Help desk: <https://raymarine.custhelp.com/app/home>
- Tel: +1 (603) 324 7900 (Toll-free: +800 539 5539)

Australia and New Zealand (Raymarine subsidiary):

- E-Mail: aus.support@raymarine.com
- Tel: +61 2 8977 0300

France (Raymarine subsidiary):

- E-Mail: support.fr@raymarine.com
- Tel: +33 (0)1 46 49 72 30

Germany (Raymarine subsidiary):

- E-Mail: support.de@raymarine.com
- Tel: +49 40 237 808 0

Italy (Raymarine subsidiary):

- E-Mail: support.it@raymarine.com
- Tel: +39 02 9945 1001

Spain (Authorized Raymarine distributor):

- E-Mail: sat@azimut.es
- Tel: +34 96 2965 102

Netherlands (Raymarine subsidiary):

- E-Mail: support.nl@raymarine.com
- Tel: +31 (0)26 3614 905

Sweden (Raymarine subsidiary):

- E-Mail: support.se@raymarine.com
- Tel: +46 (0)317 633 670

Finland (Raymarine subsidiary):

- E-Mail: support.fi@raymarine.com
- Tel: +358 (0)207 619 937

Norway (Raymarine subsidiary):

- E-Mail: support.no@raymarine.com

- Tel: +47 692 64 600

Denmark (Raymarine subsidiary):


- E-Mail: support.dk@raymarine.com
- Tel: +45 437 164 64

Russia (Authorized Raymarine distributor):

- E-Mail: info@mikstmarine.ru
- Tel: +7 495 788 0508

Viewing product information

Use the *[Settings]* menu to view hardware and software information about your display, and connected products.

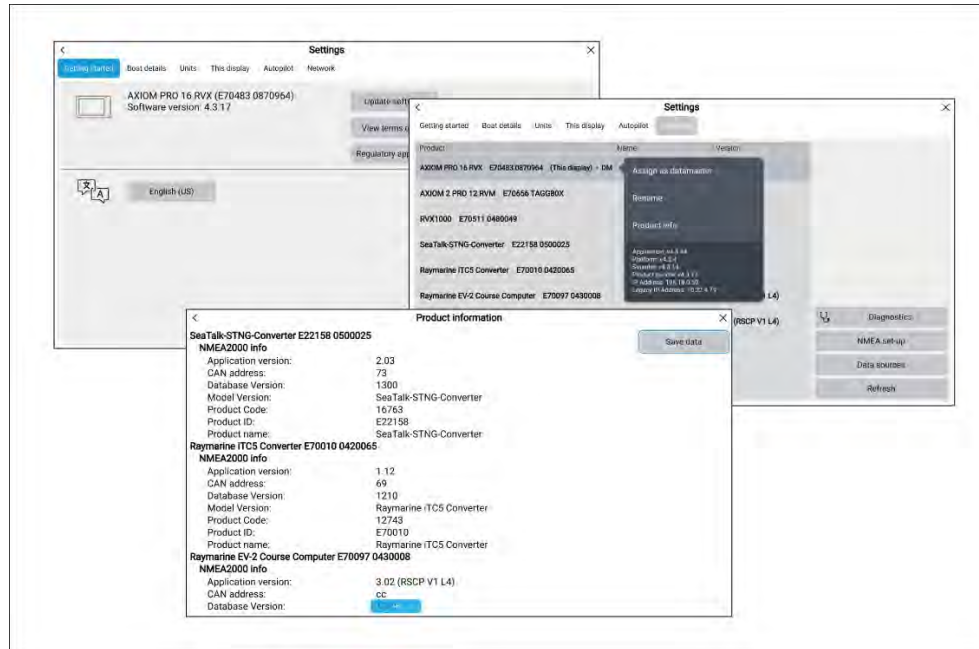

1. Select *[Settings]*, from the Homescreen.
The *[Getting started]* menu contains hardware and software information for your display.
2. You can view further information about your display, or view information about products networked using SeaTalkhs[®] and SeaTalkng[®] / NMEA 2000, by selecting the *[Network]* tab, then:

- i. to display detailed software information and your display's network IP address, select your display from the list.
- ii. to display detailed diagnostics information for all products, select *[Product info]* from the *[Diagnostics]* pop over menu.

Remote Support via AnyDesk

LightHouse 3 software versions v3.13 or later support remote support functions via the preloaded AnyDesk app.

The AnyDesk app enables a Raymarine Product Support representative to remotely connect to and control your display over an Internet connection, for the purposes of technical support and troubleshooting.

To get started, you will first need to contact Raymarine Product Support. If the representative considers that your support case would benefit from a remote session, you need to first ensure that your display has an active Internet connection via Wi-Fi. Next, launch the AnyDesk app from your display's homescreen, and then provide the displayed unique ID to the Raymarine Product Support representative. Then follow any further instructions provided to you by the representative.

Attention

- **AnyDesk is provided for troubleshooting and support purposes only, and is NOT intended to perform remote functions on your vessel. Raymarine will NOT be held liable for damage or injury to equipment or persons caused by the use of a remote connection to your display.**
- **Do not disclose your AnyDesk ID to anyone other than authorised Raymarine Product Support personnel.**
- **Do not use the AnyDesk app to remotely activate connected devices such as Autopilot, Radar or Sonar hardware.**

17.2 Learning resources

Raymarine has produced a range of learning resources to help you get the most out of your products.

Video tutorials

Raymarine official channel on YouTube

- <http://www.youtube.com/user/RaymarineInc>

Training courses

Raymarine regularly runs a range of in-depth training courses to help you make the most of your products. Visit the Training section of the Raymarine website for more information:

- <http://www.raymarine.co.uk/view/?id=2372>

Technical support forum

You can use the Technical support forum to ask a technical question about a Raymarine product or to find out how other customers are using their Raymarine equipment. The resource is regularly updated with contributions from Raymarine customers and staff:

- <https://raymarine.custhelp.com/app/home>

CHAPTER 18: AXIOM 2 XL 16 TECHNICAL SPECIFICATION

CHAPTER CONTENTS

- 18.1 Power specification — page 77
- 18.2 Environmental specification — page 77
- 18.3 LCD specification — page 77
- 18.4 Physical specification — page 77
- 18.5 Connections specification — page 78
- 18.6 Internal GNSS (GPS) receiver specification — page 78
- 18.7 Conformance/approvals — page 79
- 18.8 Product markings — page 79

18.1 Power specification

Specification	
Nominal supply voltage:	12 V / 24 V dc
Operating voltage range:	8 V dc to 32 V dc
Current (Maximum):	8.56 A
Off-current (Maximum @ 12 V dc)	<ul style="list-style-type: none">PoE — 2,135 mA (25.62 Watts)No PoE — 352 mA (4.32 Watts)
Off-current (Maximum @ 24V dc)	<ul style="list-style-type: none">PoE — 1,161 mA (27.86 Watts)No PoE — 352 mA (5.54 Watts)
PoE operating voltage range:	9.5 V dc to 32 V dc
Fuse requirements:	<ul style="list-style-type: none">Inline fuse = 15 Amp, orThermal breaker = 15 Amp
Power consumption: (Maximum @ 12 V dc)	76.56 Watts
Power consumption: (Maximum @ 24V dc)	71.35 Watts

18.2 Environmental specification

Specification	
Operating temperature range:	-25°C (-13°F) to + 55°C (131°F)
Storage temperature range:	-30°C (-22°F) to + 70°C (158°F)
Humidity:	up to 93% @ 40°C (104°F)
Water ingress protection:	IPx6 and IPx7
Installation location:	<ul style="list-style-type: none">Above decksBelow decks

18.3 LCD specification

Specification	
Size (diagonal):	15.6"
Type:	IPS (In-Plane Switching)
Color depth:	24 bit
Resolution:	1920 x 1080 FHD
Ratio:	16:9
Illumination:	1300 nits / 1300 cd/m ²
Viewing angle:	Top 88° / Bottom 88° / Left 88° / Right 88°
Number of simultaneous touches:	2

18.4 Physical specification

Specification	
Gross (boxed) product weight:	8.32 kg (18.34 lbs)
Net (unboxed) product weight:	5.84 kg (12.88 lbs)
Dimensions:	Height: 248.22 mm (9.77 in), Width, 394.9 mm (15.55 in), Depth (including cables): 174.95 mm (6.89 in).
Internal storage:	64 GB solid state.
External storage:	Remote card reader required.

18.5 Connections specification

Specification	
Accessory connection:	USB Micro B (for external card reader connection).
Analog video connections:	Composite BNC connectors x 2 (Video 1 via Power/Video/Audio cable, Video 2 via alarm/video cable accessory cable).
Audio connections:	Left and Right RCA connectors via Power/Video/Audio cable.
Ethernet connections:	PoE RayNet (10/100/1,000 Mbits/s) x 3.
External alarm connection:	Bare-ended wires x 2 (via Alarm/Video cable).
GPS antenna connection:	TNC type connector.
HDMI connections:	HDMI V1.4b input and output connectors.
NMEA 0183 connection:	NMEA 0183 TO NMEA 2000 convertor required (part number: A80721).
NMEA 2000 connection:	DeviceNet connector (Load Equivalency Number = 1).
USB connections:	USB-A: Touch input, USB-B: Touch output.
Bluetooth connection:	Bluetooth: V4.0 combined with Wi-Fi module.
Wi-Fi connection:	<p>Multi band - 2.4GHz, and 5Ghz 802.11b/g/n</p> <ul style="list-style-type: none"> • Dual MIMO (Multiple In, Multiple Out) @ 2.4 GHz <ul style="list-style-type: none"> – 1x Antenna is used for Wi-Fi only – 1x Antenna is used for both Wi-Fi and Bluetooth <p>2.4GHz only (can simultaneously operate as an access point and as a host)</p> <ul style="list-style-type: none"> • SISO (Single In, Single Out) @ 5 GHz <ul style="list-style-type: none"> – 1x Antenna is used for Wi-Fi only – 1x Antenna is used for Bluetooth only

18.6 Internal GNSS (GPS) receiver specification

Specification	
Almanac Update:	Automatic
Antenna:	An external passive antenna is required.
Channels:	Track up to 28 satellites simultaneously.
Cold start (Time To First Fix):	<2 minutes.
Geodetic Datum:	WGS-84 (alternatives can be selected on the display)
GNSS compatibility:	<ul style="list-style-type: none"> • GPS • GLONASS • Beidou • Galileo
Operating frequency:	1574 MHz to 1605 MHz.
Position Accuracy:	<ul style="list-style-type: none"> • Without SBAS: <= 15 metres 95% of the time. • With SBAS: <= 5 metres 95% of the time.
Receiver IC Sensitivity:	<ul style="list-style-type: none"> • 165 dBm (Tracking) • 160 dBm (Re-acquisition) • 148 dBm (Cold start)
Refresh Rate:	10 Hz (10 times per second)
SBAS compatibility:	<ul style="list-style-type: none"> • EGNOS • GAGAN • MSAS • QZSS • WAAS
Signal Acquisition:	Automatic

18.7 Conformance/approvals

This product is compliant or approved to the following standards or by the listed entities.

- Radio Equipment Directive 2014/53/EU
- EN 60945:2002 (Europe, Australia New Zealand)
- FCC Part 15C and Part 15E
- ISED ICES-003
- NMEA 2000 certified

18.8 Product markings

The product includes the following approval / compliance markings and/or IDs.

- UKCA
- CE
- FCC
- ISED
- Japan
- Australian Tick
- Brazil Anatel
- WEEE Directive

CHAPTER 19: AXIOM 2 XL 19 TECHNICAL SPECIFICATION

CHAPTER CONTENTS

- 19.1 Power specification — page 81
- 19.2 Environmental specification — page 81
- 19.3 LCD specification — page 81
- 19.4 Physical specification — page 81
- 19.5 Connections specification — page 82
- 19.6 Internal GNSS (GPS) receiver specification — page 82
- 19.7 Conformance/approvals — page 83
- 19.8 Product markings — page 83

19.1 Power specification

Specification	
Nominal supply voltage:	12 V / 24 V dc
Operating voltage range:	8 V dc to 32 V dc
Current (Maximum):	8.98 A
Off-current (Maximum @ 12 V dc)	<ul style="list-style-type: none">PoE — 2,135 mA (25.62 Watts)No PoE — 352 mA (4.32 Watts)
Off-current (Maximum @ 24V dc)	<ul style="list-style-type: none">PoE — 1,161 mA (27.86 Watts)No PoE — 352 mA (5.54 Watts)
PoE operating voltage range:	9.5 V dc to 32 V dc
Fuse requirements:	<ul style="list-style-type: none">Inline fuse = 15 Amp, orThermal breaker = 15 Amp
Power consumption: (Maximum @ 12 V dc)	85.42 Watts
Power consumption: (Maximum @ 24V dc)	73.98 Watts

19.2 Environmental specification

Specification	
Operating temperature range:	-25°C (-13°F) to + 55°C (131°F)
Storage temperature range:	-30°C (-22°F) to + 70°C (158°F)
Humidity:	up to 93% @ 40°C (104°F)
Water ingress protection:	IPx6 and IPx7
Installation location:	<ul style="list-style-type: none">Above decksBelow decks

19.3 LCD specification

Specification	
Size (diagonal):	18.5"
Type:	IPS (In-Plane Switching)
Color depth:	24 bit
Resolution:	1920 x 1080 FHD
Ratio:	16:9
Illumination:	1200 nits / 1200 cd/m ²
Viewing angle:	Top 88° / Bottom 88° / Left 88° / Right 88°
Number of simultaneous touches:	2

19.4 Physical specification

Specification	
Gross (boxed) product weight:	10.10 kg (22.27 lbs)
Net (unboxed) product weight:	7.62 kg (16.80 lbs)
Dimensions:	Height: 289.44 mm (11.40 in), Width, 461.78 mm (18.18 in), Depth (including cables): 174.95 mm (6.89 in).
Internal storage:	64 GB solid state.
External storage:	Remote card reader required.

19.5 Connections specification

Specification	
Accessory connection:	USB Micro B (for external card reader connection).
Analog video connections:	Composite BNC connectors x 2 (Video 1 via Power/Video/Audio cable, Video 2 via alarm/video cable accessory cable).
Audio connections:	Left and Right RCA connectors via Power/Video/Audio cable.
Ethernet connections:	PoE RayNet (10/100/1,000 Mbits/s) x 3.
External alarm connection:	Bare-ended wires x 2 (via Alarm/Video cable).
GPS antenna connection:	TNC type connector.
HDMI connections:	HDMI V1.4b input and output connectors.
NMEA 0183 connection:	NMEA 0183 TO NMEA 2000 convertor required (part number: A80721).
NMEA 2000 connection:	DeviceNet connector (Load Equivalency Number = 1).
USB connections:	USB-A: Touch input, USB-B: Touch output.
Bluetooth connection:	Bluetooth: V4.0 combined with Wi-Fi module.
Wi-Fi connection:	<p>Multi band - 2.4GHz, and 5Ghz 802.11b/g/n</p> <ul style="list-style-type: none"> • Dual MIMO (Multiple In, Multiple Out) @ 2.4 GHz <ul style="list-style-type: none"> – 1x Antenna is used for Wi-Fi only – 1x Antenna is used for both Wi-Fi and Bluetooth <p>2.4GHz only (can simultaneously operate as an access point and as a host)</p> <ul style="list-style-type: none"> • SISO (Single In, Single Out) @ 5 GHz <ul style="list-style-type: none"> – 1x Antenna is used for Wi-Fi only – 1x Antenna is used for Bluetooth only

19.6 Internal GNSS (GPS) receiver specification

Specification	
Almanac Update:	Automatic
Antenna:	An external passive antenna is required.
Channels:	Track up to 28 satellites simultaneously.
Cold start (Time To First Fix):	<2 minutes.
Geodetic Datum:	WGS-84 (alternatives can be selected on the display)
GNSS compatibility:	<ul style="list-style-type: none"> • GPS • GLONASS • Beidou • Galileo
Operating frequency:	1574 MHz to 1605 MHz.
Position Accuracy:	<ul style="list-style-type: none"> • Without SBAS: <= 15 metres 95% of the time. • With SBAS: <= 5 metres 95% of the time.
Receiver IC Sensitivity:	<ul style="list-style-type: none"> • 165 dBm (Tracking) • 160 dBm (Re-acquisition) • 148 dBm (Cold start)
Refresh Rate:	10 Hz (10 times per second)
SBAS compatibility:	<ul style="list-style-type: none"> • EGNOS • GAGAN • MSAS • QZSS • WAAS
Signal Acquisition:	Automatic

19.7 Conformance/approvals

This product is compliant or approved to the following standards or by the listed entities.

- Radio Equipment Directive 2014/53/EU
- EN 60945:2002 (Europe, Australia New Zealand)
- FCC Part 15C and Part 15E
- ISED ICES-003
- NMEA 2000 certified

19.8 Product markings

The product includes the following approval / compliance markings and/or IDs.

- UKCA
- CE
- FCC
- ISED
- Japan
- Australian Tick
- Brazil Anatel
- WEEE Directive

CHAPTER 20: AXIOM 2 XL 22 TECHNICAL SPECIFICATION

CHAPTER CONTENTS

- 20.1 Power specification — page 85
- 20.2 Environmental specification — page 85
- 20.3 LCD specification — page 85
- 20.4 Physical specification — page 85
- 20.5 Connections specification — page 86
- 20.6 Internal GNSS (GPS) receiver specification — page 86
- 20.7 Conformance/approvals — page 87
- 20.8 Product markings — page 87

20.1 Power specification

Specification	
Nominal supply voltage:	12 V / 24 V dc
Operating voltage range:	8 V dc to 32 V dc
Current (Maximum):	10.12 A
Off-current (Maximum @ 12 V dc)	<ul style="list-style-type: none">PoE — 2,135 mA (25.62 Watts)No PoE — 352 mA (4.32 Watts)
Off-current (Maximum @ 24V dc)	<ul style="list-style-type: none">PoE — 1,161 mA (27.86 Watts)No PoE — 352 mA (5.54 Watts)
PoE operating voltage range:	9.5 V dc to 32 V dc
Fuse requirements:	<ul style="list-style-type: none">Inline fuse = 15 Amp, orThermal breaker = 15 Amp
Power consumption: (Maximum @ 12 V dc)	94.25 Watts
Power consumption: (Maximum @ 24V dc)	79.46 Watts

20.2 Environmental specification

Specification	
Operating temperature range:	-25°C (-13°F) to + 55°C (131°F)
Storage temperature range:	-30°C (-22°F) to + 70°C (158°F)
Humidity:	up to 93% @ 40°C (104°F)
Water ingress protection:	IPx6 and IPx7
Installation location:	<ul style="list-style-type: none">Above decksBelow decks

20.3 LCD specification

Specification	
Size (diagonal):	21.5"
Type:	IPS (In-Plane Switching)
Color depth:	24 bit
Resolution:	1920 x 1080 FHD
Ratio:	16:9
Illumination:	1275 nits / 1275 cd/m ²
Viewing angle:	Top 89° / Bottom 89° / Left 89° / Right 89°
Number of simultaneous touches:	2

20.4 Physical specification

Specification	
Gross (boxed) product weight:	12.98 kg (28.62 lbs)
Net (unboxed) product weight:	9.72 kg (21.43 lbs)
Dimensions:	Height: 326.33 mm (12.85 in), Width, 533.56 mm (21.00 in), Depth (including cables): 180.75 mm (7.12 in).
Internal storage:	64 GB solid state.
External storage:	Remote card reader required.

20.5 Connections specification

Specification	
Accessory connection:	USB Micro B (for external card reader connection).
Analog video connections:	Composite BNC connectors x 2 (Video 1 via Power/Video/Audio cable, Video 2 via alarm/video cable accessory cable).
Audio connections:	Left and Right RCA connectors via Power/Video/Audio cable.
Ethernet connections:	PoE RayNet (10/100/1,000 Mbits/s) x 3.
External alarm connection:	Bare-ended wires x 2 (via Alarm/Video cable).
GPS antenna connection:	TNC type connector.
HDMI connections:	HDMI V1.4b input and output connectors.
NMEA 0183 connection:	NMEA 0183 TO NMEA 2000 convertor required (part number: A80721).
NMEA 2000 connection:	DeviceNet connector (Load Equivalency Number = 1).
USB connections:	USB-A: Touch input, USB-B: Touch output.
Bluetooth connection:	Bluetooth: V4.0 combined with Wi-Fi module.
Wi-Fi connection:	<p>Multi band - 2.4GHz, and 5Ghz 802.11b/g/n</p> <ul style="list-style-type: none"> • Dual MIMO (Multiple In, Multiple Out) @ 2.4 GHz <ul style="list-style-type: none"> – 1x Antenna is used for Wi-Fi only – 1x Antenna is used for both Wi-Fi and Bluetooth <p>2.4GHz only (can simultaneously operate as an access point and as a host)</p> <ul style="list-style-type: none"> • SISO (Single In, Single Out) @ 5 GHz <ul style="list-style-type: none"> – 1x Antenna is used for Wi-Fi only – 1x Antenna is used for Bluetooth only

20.6 Internal GNSS (GPS) receiver specification

Specification	
Almanac Update:	Automatic
Antenna:	An external passive antenna is required.
Channels:	Track up to 28 satellites simultaneously.
Cold start (Time To First Fix):	<2 minutes.
Geodetic Datum:	WGS-84 (alternatives can be selected on the display)
GNSS compatibility:	<ul style="list-style-type: none"> • GPS • GLONASS • Beidou • Galileo
Operating frequency:	1574 MHz to 1605 MHz.
Position Accuracy:	<ul style="list-style-type: none"> • Without SBAS: <= 15 metres 95% of the time. • With SBAS: <= 5 metres 95% of the time.
Receiver IC Sensitivity:	<ul style="list-style-type: none"> • 165 dBm (Tracking) • 160 dBm (Re-acquisition) • 148 dBm (Cold start)
Refresh Rate:	10 Hz (10 times per second)
SBAS compatibility:	<ul style="list-style-type: none"> • EGNOS • GAGAN • MSAS • QZSS • WAAS
Signal Acquisition:	Automatic

20.7 Conformance/approvals

This product is compliant or approved to the following standards or by the listed entities.

- Radio Equipment Directive 2014/53/EU
- EN 60945:2002 (Europe, Australia New Zealand)
- FCC Part 15C and Part 15E
- ISED ICES-003
- NMEA 2000 certified

20.8 Product markings

The product includes the following approval / compliance markings and/or IDs.

- UKCA
- CE
- FCC
- ISED
- Japan
- Australian Tick
- Brazil Anatel
- WEEE Directive

CHAPTER 21: AXIOM 2 XL 24 TECHNICAL SPECIFICATION

CHAPTER CONTENTS

- 21.1 Power specification — page 89
- 21.2 Environmental specification — page 89
- 21.3 LCD specification — page 89
- 21.4 Physical specification — page 89
- 21.5 Connections specification — page 90
- 21.6 Internal GNSS (GPS) receiver specification — page 90
- 21.7 Conformance/approvals — page 91
- 21.8 Product markings — page 91

21.1 Power specification

Specification	
Nominal supply voltage:	12 V / 24 V dc
Operating voltage range:	8 V dc to 32 V dc
Current (Maximum):	10.03 A
Off-current (Maximum @ 12 V dc)	<ul style="list-style-type: none">• PoE — 2,135 mA (25.62 Watts)• No PoE — 352 mA (4.32 Watts)
Off-current (Maximum @ 24V dc)	<ul style="list-style-type: none">• PoE — 1,161 mA (27.86 Watts)• No PoE — 352 mA (5.54 Watts)
PoE operating voltage range:	9.5 V dc to 32 V dc
Fuse requirements:	<ul style="list-style-type: none">• Inline fuse = 15 Amp, or• Thermal breaker = 15 Amp
Power consumption: (Maximum @ 12 V dc)	92.50 Watts
Power consumption: (Maximum @ 24V dc)	77.96 Watts

21.2 Environmental specification

Specification	
Operating temperature range:	-25°C (-13°F) to + 55°C (131°F)
Storage temperature range:	-30°C (-22°F) to + 70°C (158°F)
Humidity:	up to 93% @ 40°C (104°F)
Water ingress protection:	IPx6 and IPx7
Installation location:	<ul style="list-style-type: none">• Above decks (protected from direct sunlight)• Below decks

21.3 LCD specification

Specification	
Size (diagonal):	24"
Type:	IPS (In-Plane Switching)
Color depth:	24 bit
Resolution:	1920 x 1200 (WUXGA)
Ratio:	16:10
Illumination:	1300 nits / 1300 cd/m ²
Viewing angle:	Top 89° / Bottom 89° / Left 89° / Right 89°
Number of simultaneous touches:	2

21.4 Physical specification

Specification	
Gross (boxed) product weight:	15.06 kg (33.20 lbs)
Net (unboxed) product weight:	11.78 kg (25.97 lbs)
Dimensions:	Height: 386.84 mm (15.23 in), Width, 578.40 mm (22.77 in), Depth (including cables): 177.39 mm (6.98 in) .
Internal storage:	64 GB solid state.
External storage:	Remote card reader required.

21.5 Connections specification

Specification	
Accessory connection:	USB Micro B (for external card reader connection).
Analog video connections:	Composite BNC connectors x 2 (Video 1 via Power/Video/Audio cable, Video 2 via alarm/video cable accessory cable).
Audio connections:	Left and Right RCA connectors via Power/Video/Audio cable.
Ethernet connections:	PoE RayNet (10/100/1,000 Mbits/s) x 3.
External alarm connection:	Bare-ended wires x 2 (via Alarm/Video cable).
GPS antenna connection:	TNC type connector.
HDMI connections:	HDMI V1.4b input and output connectors.
NMEA 0183 connection:	NMEA 0183 TO NMEA 2000 convertor required (part number: A80721).
NMEA 2000 connection:	DeviceNet connector (Load Equivalency Number = 1).
USB connections:	USB-A: Touch input, USB-B: Touch output.
Bluetooth connection:	Bluetooth: V4.0 combined with Wi-Fi module.
Wi-Fi connection:	<p>Multi band - 2.4GHz, and 5Ghz 802.11b/g/n</p> <ul style="list-style-type: none"> • Dual MIMO (Multiple In, Multiple Out) @ 2.4 GHz <ul style="list-style-type: none"> – 1x Antenna is used for Wi-Fi only – 1x Antenna is used for both Wi-Fi and Bluetooth <p>2.4GHz only (can simultaneously operate as an access point and as a host)</p> <ul style="list-style-type: none"> • SISO (Single In, Single Out) @ 5 GHz <ul style="list-style-type: none"> – 1x Antenna is used for Wi-Fi only – 1x Antenna is used for Bluetooth only

21.6 Internal GNSS (GPS) receiver specification

Specification	
Almanac Update:	Automatic
Antenna:	An external passive antenna is required.
Channels:	Track up to 28 satellites simultaneously.
Cold start (Time To First Fix):	<2 minutes.
Geodetic Datum:	WGS-84 (alternatives can be selected on the display)
GNSS compatibility:	<ul style="list-style-type: none"> • GPS • GLONASS • Beidou • Galileo
Operating frequency:	1574 MHz to 1605 MHz.
Position Accuracy:	<ul style="list-style-type: none"> • Without SBAS: <= 15 metres 95% of the time. • With SBAS: <= 5 metres 95% of the time.
Receiver IC Sensitivity:	<ul style="list-style-type: none"> • 165 dBm (Tracking) • 160 dBm (Re-acquisition) • 148 dBm (Cold start)
Refresh Rate:	10 Hz (10 times per second)
SBAS compatibility:	<ul style="list-style-type: none"> • EGNOS • GAGAN • MSAS • QZSS • WAAS
Signal Acquisition:	Automatic

21.7 Conformance/approvals

This product is compliant or approved to the following standards or by the listed entities.

- Radio Equipment Directive 2014/53/EU
- EN 60945:2002 (Europe, Australia New Zealand)
- FCC Part 15C and Part 15E
- ISED ICES-003
- NMEA 2000 certified

21.8 Product markings

The product includes the following approval / compliance markings and/or IDs.

- UKCA
- CE
- FCC
- ISED
- Japan
- Australian Tick
- Brazil Anatel
- WEEE Directive

CHAPTER 22: SPARES AND ACCESSORIES

CHAPTER CONTENTS

- 22.1 Accessories — page 93
- 22.2 Spares — page 93
- 22.3 RayNet to RayNet cables and connectors — page 94
- 22.4 SeaTalkng[®] cables and accessories — page 97

22.1 Accessories

The following accessories are available for Axiom® 2 XL displays.


Description	Part
Axiom® 2 XL accessory pack including: <ul style="list-style-type: none">GA200 passive GNSS (GPS) antennaAlarm buzzerRCR-SDUSB card readerAlarm / Video cable	T70431
Axiom® 2 XL 16 Suncover	A80733
Axiom® 2 XL 19 Suncover	A80734
Axiom® 2 XL 22 Suncover	A80735
Axiom® 2 XL 24 Suncover	A80736
Alarm output and analog video input 2 m (6.56 ft) cable	A80235
Alarm buzzer	E26033
Bulkhead Mount Micro USB Socket	A80630
Actisense® NGW-1 NMEA 2000 (DeviceNet) to NMEA 0183 converter	A80721
GA200 passive GNSS (GPS) antenna	A80589
GA150 passive GNSS (GPS) antenna	A80288
HDMI cable 5 m (16.4 ft) cable	A80219
Straight power / video / audio cable - 1.5 m (4.92 ft)	A80744
RCR-1 card reader	A80585
RCR-SDUSB card reader	A80440
RMK-10 — display remote control	A80438 / T70293
USB A to USB B (touch input) 5 m (16.4 ft) cable	A80578
USB B to USB A (touch output) 5 m (16.4 ft) cable	A80579

22.2 Spares

The following spares are available for Axiom® 2 XL displays.


Description	Part number
Axiom® 2 XL 16 rear mounting kit	R70668
Axiom® 2 XL 19 rear mounting kit	R70669
Axiom® 2 XL 22 rear mounting kit	R70675
Axiom® 2 XL 24 rear mounting kit	R70670
Right angled power / video / audio cable - 1.5 m (4.92 ft)	A80745

22.3 RayNet to RayNet cables and connectors

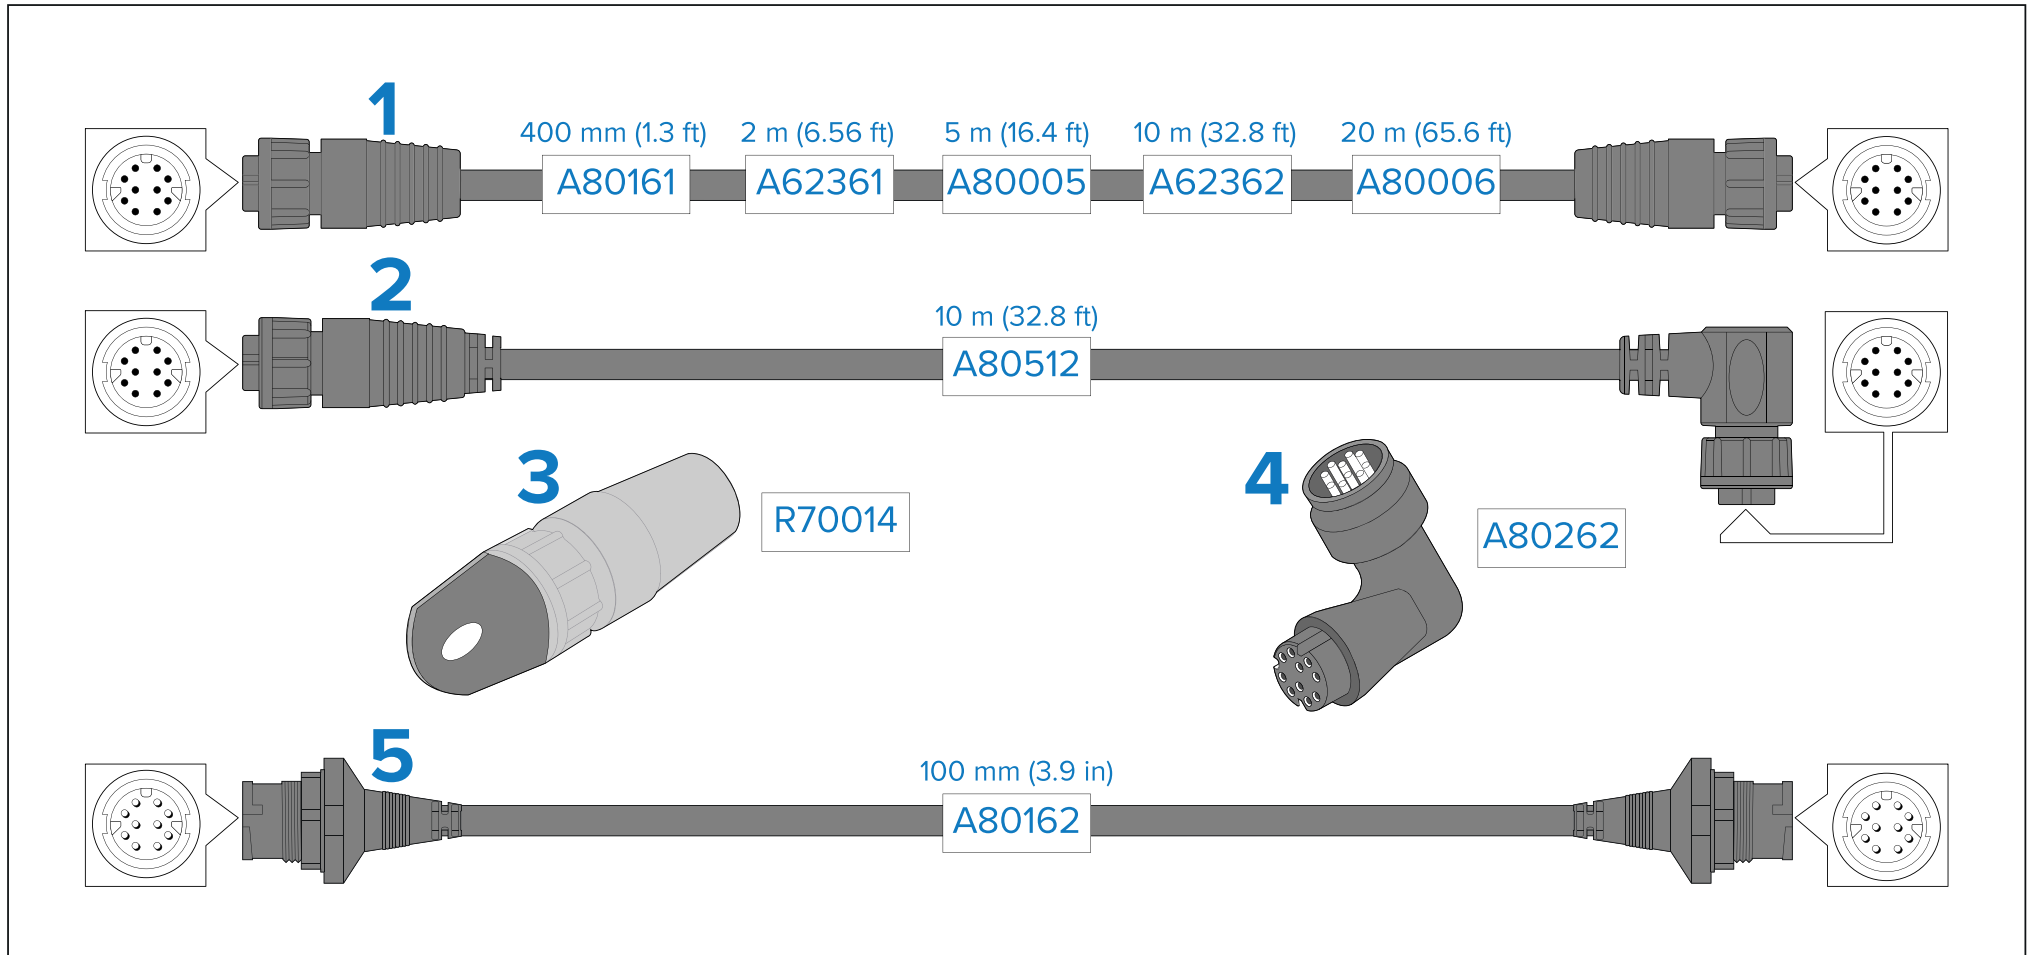

1. Standard RayNet connection cable with a RayNet (female) socket on both ends.
2. Right-angle RayNet connection cable with a straight RayNet (female) socket on one end, and a right-angle RayNet (female) socket on the other end. Suitable for connecting at 90° (right angle) to a device, for installations where space is limited.
3. RayNet cable puller (5 pack).
4. RayNet to RayNet right-angle coupler / adapter. Suitable for connecting RayNet cables at 90° (right angle) to devices, for installations where space is limited.
5. Adapter cable with a RayNet (male) plug on both ends. Suitable for joining (female) RayNet cables together for longer cable runs.

RayNet to RJ45, and RJ45 (SeaTalkhs) adapter cables

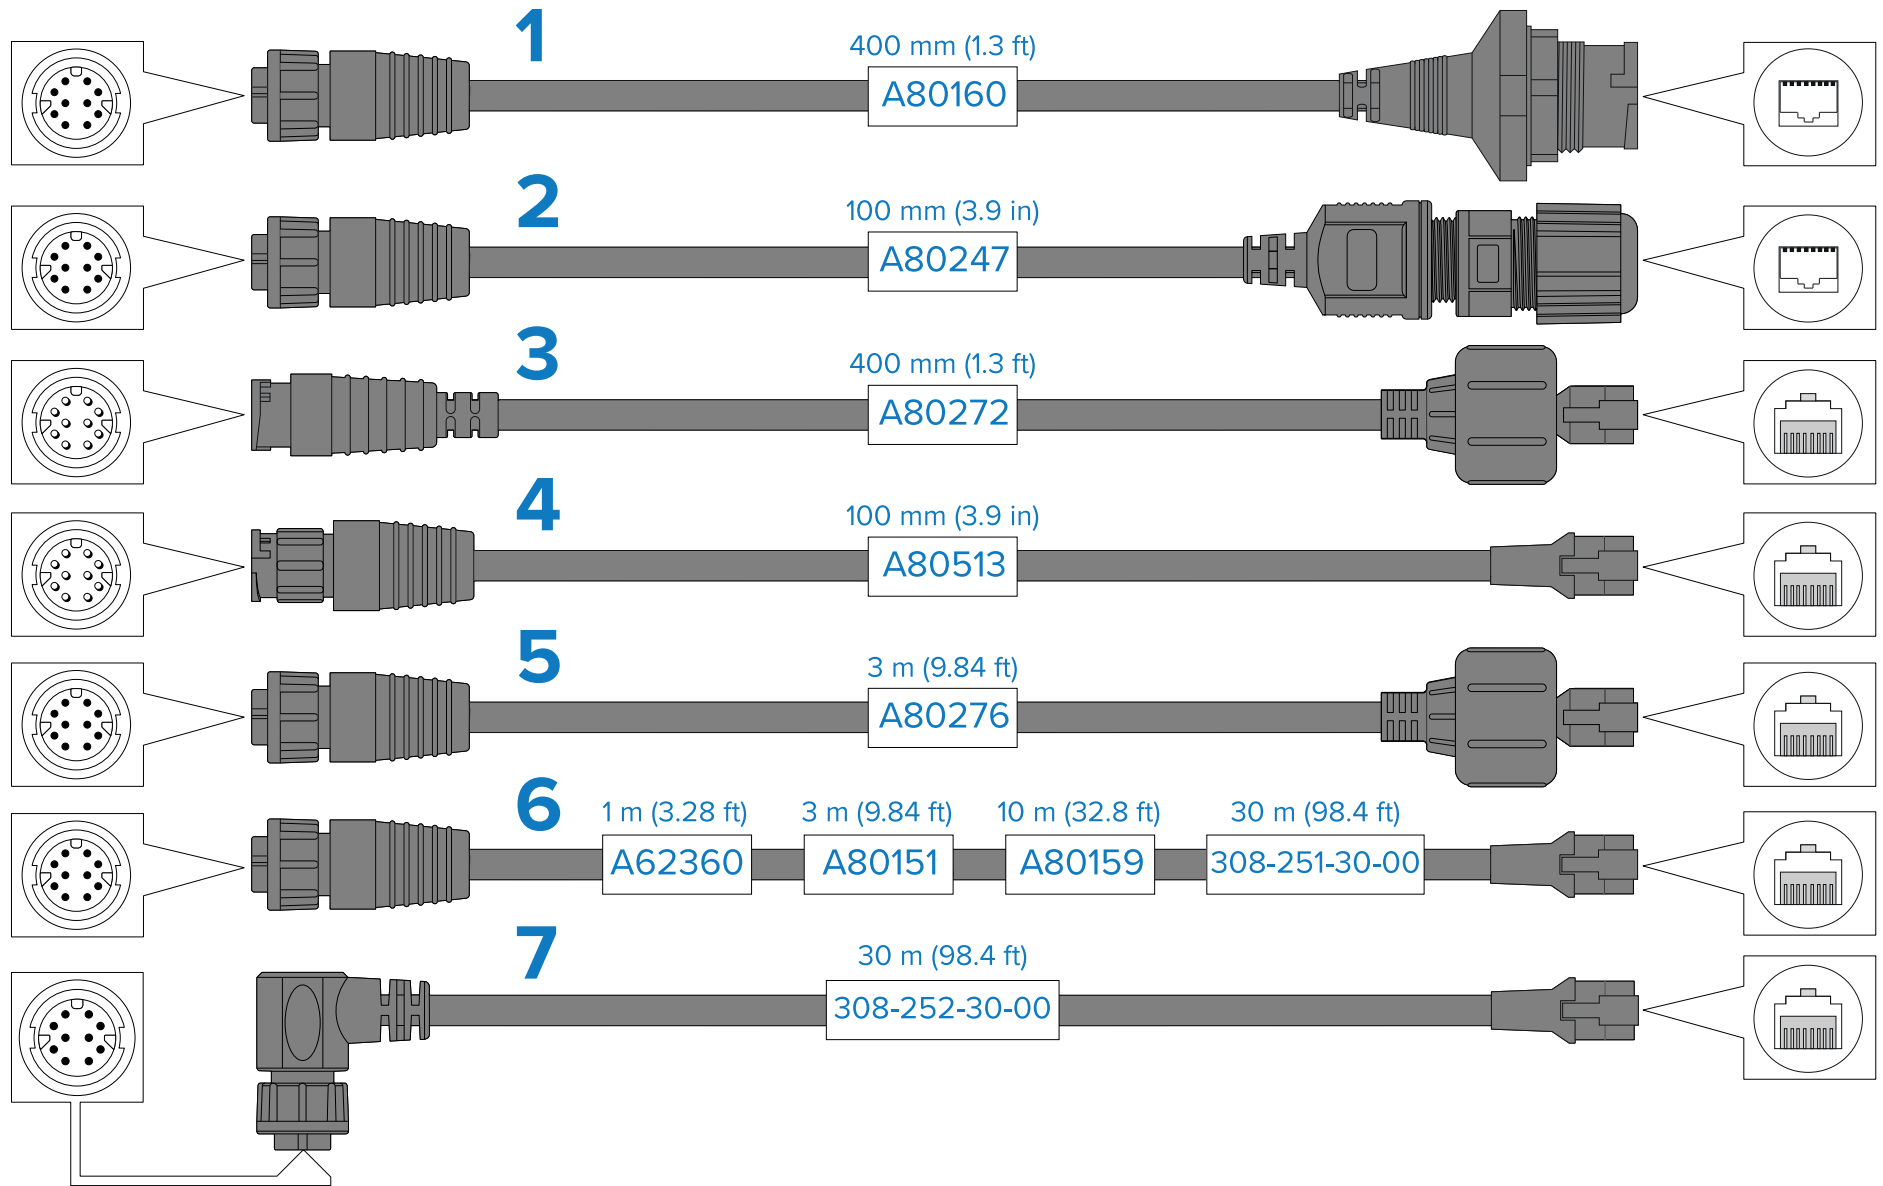

1. Adapter cable with a RayNet (female) socket on one end, and a waterproof (female) RJ45 (SeaTalkhs[®]) socket on the other end, accepting the following cables with an RJ45 (SeaTalkhs[®]) waterproof locking (male) plug:
 - A62245 (1.5 m).
 - A62246 (15 m).
2. Adapter cable with a RayNet (female) socket on one end, and a waterproof (female) RJ45 (SeaTalkhs[®]) socket on the other end, along with a locking gland for a watertight fit.
3. Adapter cable with a RayNet (male) plug on one end, and an RJ45 (SeaTalkhs[®]) waterproof (male) plug on the other end.
4. Adapter cable with a RayNet (male) plug on one end, and an RJ45 (male) plug on the other end.
5. Adapter cable with a RayNet (female) socket on one end, and an RJ45 (SeaTalkhs[®]) waterproof (male) plug on the other end.
6. Adapter cable with a RayNet (female) socket on one end, and an RJ45 (male) plug on the other end.
7. Adapter cable with a right-angled RayNet (female) socket on one end, and an RJ45 (male) plug on the other end.


22.4 SeaTalkng® cables and accessories

SeaTalkng® cables and accessories for use with compatible products.

SeaTalkng® kits


SeaTalkng kits enable you to create a simple SeaTalkng backbone.

Starter kit (part number: T70134) consists of:

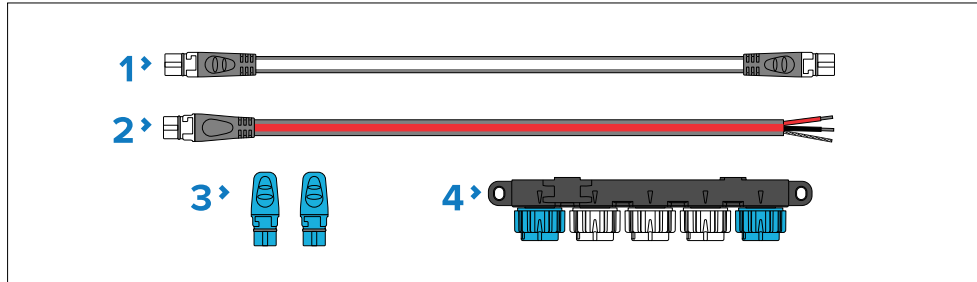


- 1 x Spur cable 3 m (9.8 ft) (part number: **A06040**). Used to connect device to the SeaTalkng backbone.
- 1 x Power cable 2 m (6.6 ft) (part number: **A06049**). Used to provide 12 V dc power to the SeaTalkng backbone.
- 2 x Backbone terminators (part number: **A06031**). Terminators must be fitted to both ends of the SeaTalkng backbone.
- 1 x 5-Way connector (part number: **A06064**). Each connector block allows connection of up to 3 SeaTalkng devices. Multiple connector blocks can be 'daisy chained' together.

Backbone kit (part number: A25062) consists of:

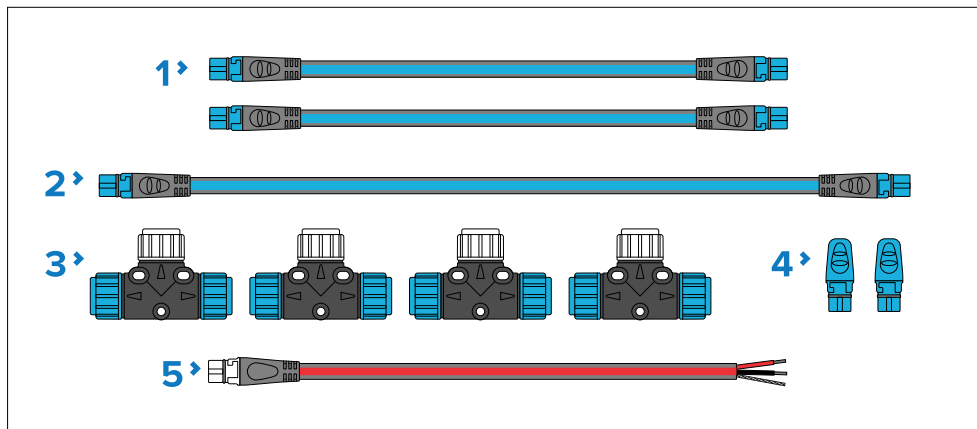


- 2 x Backbone cables 5 m (16.4 ft) (part number: **A06036**). Used to create and extend the SeaTalkng backbone.
- 1 x Backbone cable 20 m (65.6 ft) (part number: **A06037**). Used to create and extend the SeaTalkng backbone.
- 4 x T-piece (part number: **A06028**). Each T-piece allows connection of one SeaTalkng device. Multiple T-pieces can be 'daisy chained' together.
- 2 x Backbone terminators (part number: **A06031**). Terminators must be fitted to both ends of the SeaTalkng backbone.
- 1 x Power cable 2 m (6.6 ft) (part number: **A06049**). Used to provide 12 V dc power to the SeaTalkng backbone.

Evolution autopilot cable kit (part number: R70160) consists of:

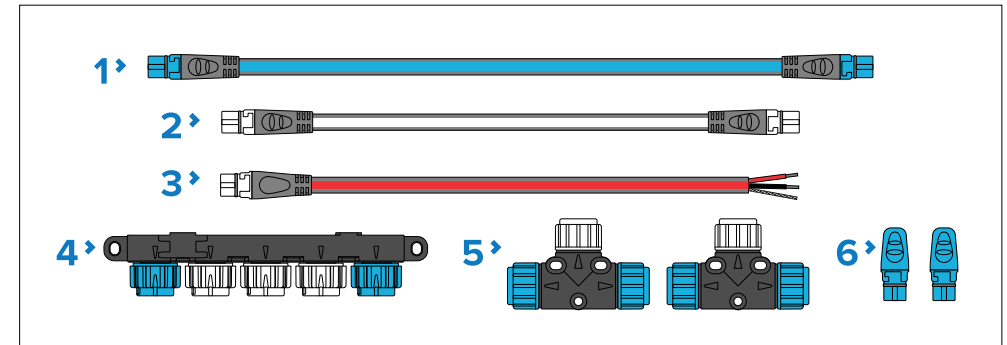


- 1 x Backbone cable 5 m (16.4 ft) (part number: **A06036**). Used to create and extend the SeaTalkng backbone.
- 1 x Spur cable 1 m (3.3 ft) (part number: **A06040**). Used to connect device to the SeaTalkng backbone.
- 1 x Power cable 2 m (6.6 ft) (part number: **A06049**). Used to provide 12 V dc power to the SeaTalkng backbone.
- 1 x 5-Way connector (part number: **A06064**). Each connector block allows connection of up to 3 SeaTalkng devices. Multiple connector blocks can be 'daisy chained' together.
- 2 x T-pieces (part number: **A06028**). Each T-piece allows connection of one SeaTalkng device. Multiple T-pieces can be 'daisy chained' together.
- 2 x Backbone terminators (part number: **A06031**). Terminators must be fitted to both ends of the SeaTalkng backbone.

SeaTalk to SeaTalkng converter kit (part number: E22158) consists of:

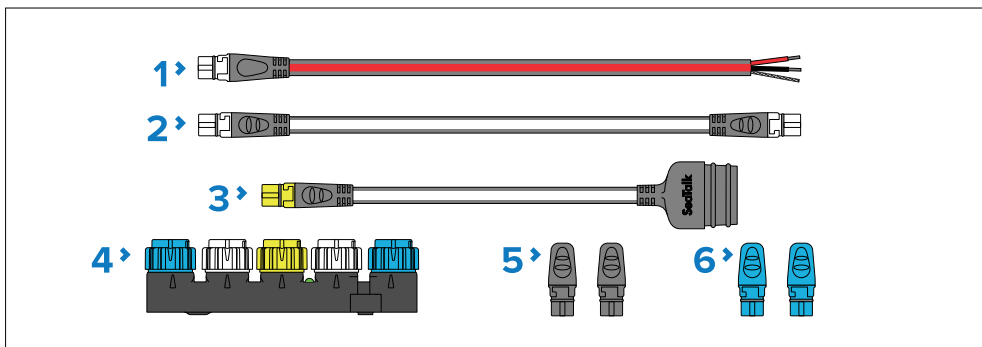

1. 1 x Power cable 2 m (6.6 ft) (part number: **A06049**). Used to provide 12 V dc power to the SeaTalkng backbone.
2. 1 x Spur cable 1 m (3.3 ft) (part number: **A06039**). Used to connect a device to the SeaTalkng backbone.
3. 1 x SeaTalk (3 pin) to SeaTalkng adapter cable 0.4 m (1.3 ft) (part number: **A22164**). Used to connect SeaTalk devices to the SeaTalkng backbone via the SeaTalk to SeaTalkng converter.
4. 1 x SeaTalk to SeaTalkng converter (part number: **E22158**). Each converter allows connection of one SeaTalk device and up to 2 SeaTalkng devices.
5. 2 x Spur blanking plugs (part number: **A06032**). Used to cover unused spur connections in 5-way blocks, T-piece connectors and SeaTalk to SeaTalkng converter.
6. 2 x Backbone terminators (part number: **A06031**). Terminators must be fitted to both ends of the SeaTalkng backbone.


NMEA 0183 VHF 2 wire to SeaTalkng converter kit (part number: E70196) consists of:

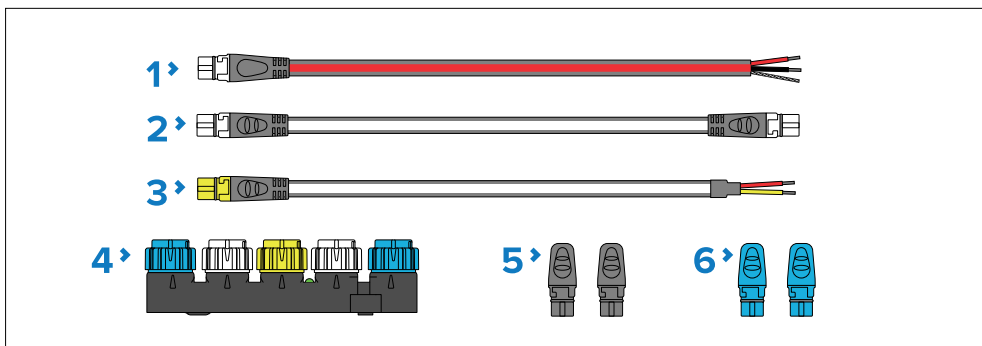

1. 1 x Power cable 2 m (6.6 ft) (part number: **A06049**). Used to provide 12 V dc power to the SeaTalkng backbone.
2. 1 x Spur cable 1 m (3.3 ft) (part number: **A06039**). Used to connect a device to the SeaTalkng backbone.
3. 1 x NMEA 0183 VHF stripped-end (2 wire) to SeaTalkng adapter cable 1 m (3.3 ft) (part number: **A06071**). Used to connect an NMEA 0183 VHF radio to the SeaTalkng backbone via the NMEA 0183 VHF to SeaTalkng converter.
4. 1 x SeaTalk to SeaTalkng converter (part number: **E22158**). Each converter allows connection of 1 SeaTalk device and up to 2 SeaTalkng devices.
5. 2 x Spur blanking plugs (part number: **A06032**). Used to cover unused spur connections in 5-way blocks, T-piece connectors and SeaTalk to SeaTalkng converter.
6. 2 x Backbone terminators (part number: **A06031**). Terminators must be fitted to both ends of the SeaTalkng backbone.

SeaTalkng® spur cables

SeaTalkng spur cables are required to connect devices to the SeaTalkng backbone.

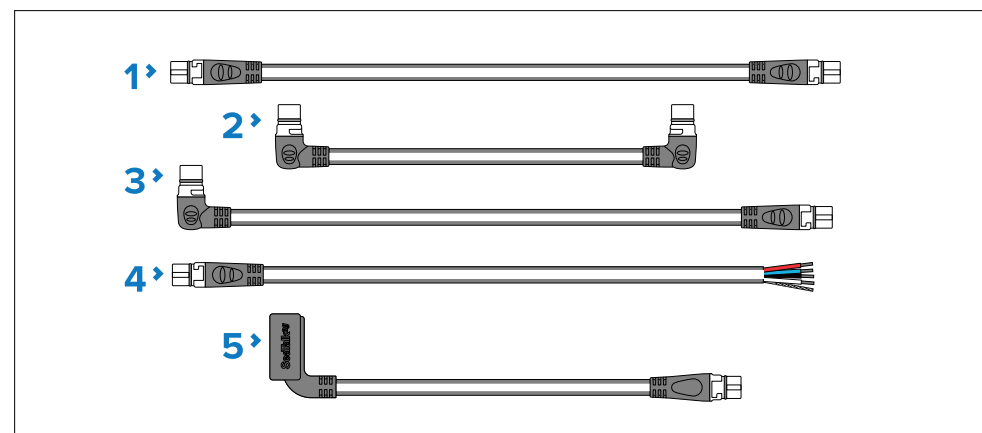

1. SeaTalkng spur cables:
 - Spur cable 0.4 m (1.3 ft) (part number: **A06038**).
 - Spur cable 1 m (3.3 ft)(part number: **A06039**).
 - Spur cable 3 m (9.8 ft) (part number: **A06040**).

- Spur cable 5 m (16.4 ft) (part number: **A06041**).
2. Elbow (right angled) to elbow (right angled) spur cable 0.4 m (1.3 ft) (part number: **A06042**). Used in confined spaces where a straight spur cable will not fit.
 3. Elbow (right angled) to straight spur cable 1 m (3.3 ft) (part number: **A06081**). Used in confined spaces where a straight spur cable will not fit.
 4. SeaTalkng to stripped-end spur cables (Connects compatible product that do not have a SeaTalkng connector such as transducer pods):
 - SeaTalkng to stripped-end spur cable 1 m (3.3 ft) (part number: **A06043**)
 - SeaTalkng to stripped-end spur cable 3 m (9.8 ft) (part number: **A06044**)
 5. ACU / SPX autopilot to SeaTalkng spur cable 0.3 m (1.0 ft) (part number **R12112**). Connects the course computer to the SeaTalkng backbone. This connection can also be used to provide 12 V dc power to the SeaTalkng backbone.

SeaTalkng® backbone cables


SeaTalkng backbone cables are used to create or extend a SeaTalkng backbone.



- Backbone cable 0.4 m (1.3 ft) (part number: **A06033**).
- Backbone cable 1 m (3.3 ft) (part number: **A06034**).
- Backbone cable 3 m (9.8 ft) (part number: **A06035**).
- Backbone cable 5 m (16.4 ft) (part number: **A06036**).
- Backbone cable 9 m (29.5 ft) (part number: **A06068**).
- Backbone cable 20 m (65.6 ft) (part number: **A06037**).

SeaTalkng® power cables


SeaTalkng power cables are used to provide the SeaTalkng backbone with a single 12 V dc power source. The power connection must include a 5 amp inline fuse (not supplied).

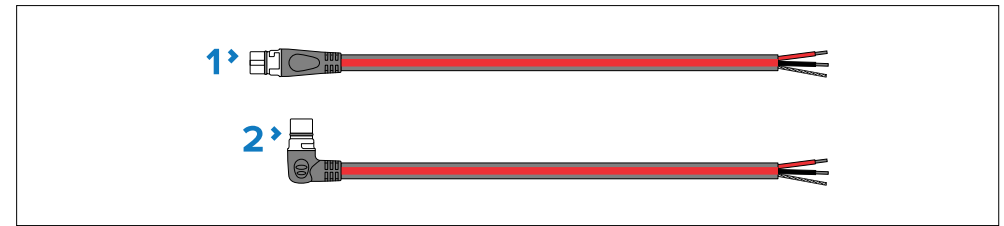

1. Power cable (straight) 2 m (6.6 ft) (part number: **A06049**).
2. Elbow (right angled) power cable 2 m (6.6 ft) (part number: **A06070**).

SeaTalkng® connectors


SeaTalkng connectors are used to connect SeaTalkng devices to the SeaTalkng backbone and to create and extend the backbone.

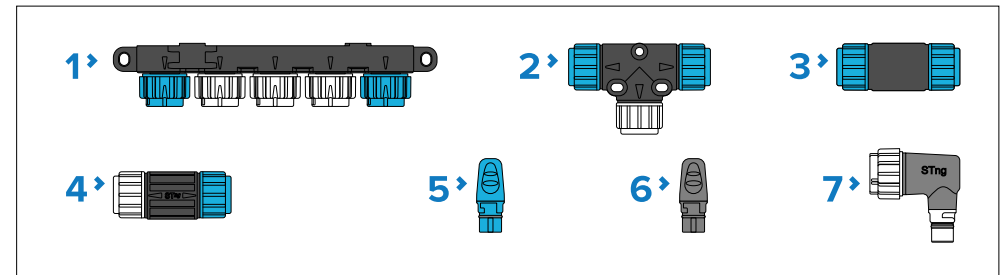

1. 5-Way connector (part number: **A06064**). Each connector block allows connection of up to 3 SeaTalkng devices. Multiple connector blocks can be 'daisy chained' together.
2. T-piece (part number: **A06028**). Each T-piece allows connection of one SeaTalkng device. Multiple T-pieces can be 'daisy chained' together.
3. Backbone extender (part number: **A06030**). Used to connect 2 backbone cables together.
4. Inline terminator (part number: **A80001**). Used to connect a spur cable and SeaTalkng device at the end of a backbone instead of a backbone terminator.
5. Backbone terminator (part number: **A06031**). Terminators must be fitted to both ends of the SeaTalkng backbone.
6. Spur blanking plug (part number: **A06032**). Used to cover unused spur connections in 5-way blocks, T-piece connectors, or the SeaTalk to SeaTalkng converter.
7. Elbow (right angled) spur connector (part number: **A06077**). Used in confined spaces where a straight spur cable will not fit.

SeaTalkng® adaptors and adaptor cables

SeaTalkng adaptor cables are used to connect devices designed for different CAN bus backbones (e.g.: SeaTalk or DeviceNet) to the SeaTalkng backbone.

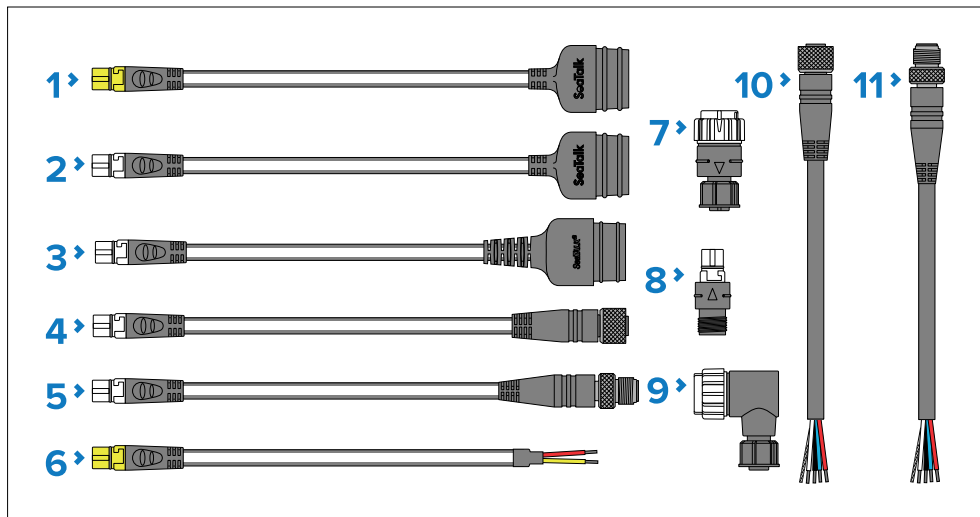

1. SeaTalk (3 pin) to SeaTalkng converter cable 1 m (3.3 ft) (part number: **A22164 / A06073**). Can be used to connect a SeaTalk device to a SeaTalkng backbone via the SeaTalk to SeaTalkng converter, or to connect a SeaTalkng product directly to a SeaTalk network.
2. SeaTalk (3 pin) to SeaTalkng adaptor cable 0.4 m (1.3 ft) (part number: **A06047**). Can be used to connect a SeaTalk device to a SeaTalkng backbone via the SeaTalk to SeaTalkng converter, or to connect a SeaTalkng product directly to a SeaTalk network.
3. SeaTalk2 (5 pin) to SeaTalkng adaptor cable 0.4 m (1.3 ft) (part number: **A06048**). Used to connect SeaTalk2 devices or networks to a SeaTalkng backbone.
4. SeaTalkng to DeviceNet (female) adaptor cables connect NMEA 2000 devices that use a DeviceNet connector to the SeaTalkng backbone, or connects SeaTalkng devices to an NMEA 2000 network. The following cables are available:
 - SeaTalkng to DeviceNet (female) adaptor cable 0.4 m (1.3 ft) (part number: **A06045**).
 - SeaTalkng to DeviceNet (female) adaptor cable 1 m (3.3 ft) (part number: **A06075**).
5. SeaTalkng to DeviceNet (male) adaptor cables. Connect NMEA 2000 devices that use a DeviceNet connector to the SeaTalkng backbone, or connect SeaTalkng devices to an NMEA 2000 network. The following cables are available:
 - SeaTalkng to DeviceNet (male) adaptor cable 0.1 m (0.33 ft) (part number: **A06078**).
 - SeaTalkng to DeviceNet (male) adaptor cable 0.4 m (1.3 ft) (part number: **A06074**).
 - SeaTalkng to DeviceNet (male) adaptor cable 1 m (3.3 ft) (part number: **A06076**).
 - SeaTalkng to DeviceNet (male) adaptor cable 1.5 m (4.92 ft) (part number: **A06046**).
6. NMEA 0183 VHF stripped-end (2 wire) to SeaTalkng adapter cable 1 m (3.3 ft) (part number: **A06071**). Used to connect an NMEA 0183 VHF radio to the SeaTalkng backbone via the NMEA 0183 VHF to SeaTalkng converter.
7. SeaTalkng (male) to DeviceNet (female) adaptor (**A06082**).
8. SeaTalkng (female) to DeviceNet (male) adaptor (**A06083**).
9. SeaTalkng (male) to DeviceNet (female) elbow (right angled) adaptor (**A06084**).
10. DeviceNet (female) to stripped-end adaptor cable (0.4 m (1.3 ft) (part number: **E05026**).
11. DeviceNet (male) to stripped-end adaptor cable (0.4 m (1.3 ft) (part number: **E05027**).

Appendix A NMEA 2000 PGNs

For a list of supported NMEA 2000 PGNs, please refer to the relevant Operations manual for your display.

LightHouse version	Operations manual
LightHouse 3	81370
LightHouse 4	81406

To obtain the latest version of the manual, visit: www.raymarine.com/manuals

Index

A

Accessories	17, 93
Network adapter cables	95
Network cables	94
RayNet cables	94
SeaTalkng adaptor cables	100
SeaTalkng backbone cables	99
SeaTalkng cables	97
SeaTalkng connectors	99
SeaTalkng kits	97
SeaTalkng Power cables	99
SeaTalkng spur cables	98
Accessory connection	55
Additional components	17
Alarm buzzer	17
Alarm buzzer connection	59
Applicable documents	13
Audio	
Connections (RCA)	57

B

Box contents	21
--------------------	----

C

Cable	
Bend radius	36
Protection	36
Routing	36
Security	36
Strain relief	36
Cleaning	61
Screen	61
Compass safe distance	28
Connecting cables	37
Connections	
Accessory	37, 55
Alarm	37

Alarm buzzer	59
Analog camera	50
Analog video	50
Audio	57
Bare wires	38
Battery	42
Card reader	55
DeviceNet	45
Distribution panel	41
Ethernet	46
External storage	55
General cabling guidance	36
GPS antenna	59
GPS Antenna	37
Ground	37
HDMI	37
HDMI IN	50, 54
HDMI out	54
HDMI OUT	51
Network	46
Network connections	47
NMEA 2000	37, 45
Optional grounding	43
Overview	37
PoE	47
Power	37, 40
Power over Ethernet (PoE)	47
RayNet	37, 46–47
Rear connectors	37
SeaTalkng	45
Touch	37
Touch control in	54
Touch control out	54
USB	37
USB (via RCR-SDUSB)	55
Video	37
Video 1	50
Video 2	50
Wire	38
Contact details	73

D

Declaration of Conformity.....	9
Dedicated grounding	43
Diagnostics.....	74
Dimensions.....	23
Documentation.....	13

E

e-Label.....	9
Electromagnetic Compatibility.....	28
EMC, See Electromagnetic Compatibility	
Ethernet connection	46
External storage	55

F

Factory reset	64
Flush mount.....	30
Flush mounting.....	32
Fuse rating.....	40

G

Gasket tape	32
GNSS antenna	17
GNSS antenna connection	59
GPS antenna connection.....	59

H

HDMI	16
HDMI IN	50
Resolution	50
HDMI IN connection	54
HDMI OUT	
Resolutions	51
HDMI out connection.....	54

I

Installation	30–32
--------------------	-------

Best practice.....	42
Flush mount	33
Mounting options.....	30
Surface mount	30, 33
Interference	28
See <i>also</i> Compass safe distance	
RF.....	28
IP address.....	74

L

Location requirements	25
General	25
GNSS	26
GPS.....	26
Touchscreen	26
Viewing angle	27
Wireless	26–27
Wireless interference.....	27

M

Maintenance.....	61
MFD kit	17

N

Network	
cables	95
Network connection	46
NMEA 0183 convertor	17
NMEA 2000.....	101
PGN list	101
NMEA 2000 connection.....	45

O

Operation instructions	
LightHouse 4	14

P

Parts supplied.....	21
PoE connection	47
PoE device class.....	47
Power	
Battery connection.....	42
Distribution	40
Distribution panel.....	41
Grounding.....	42
Sharing a breaker	41
Power connection	40
Power over Ethernet (PoE)	16, 47
Power troubleshooting.....	64
Product dimensions.....	23
Product documentation.....	13
Product information.....	74
Product overview.....	16
Product recycling (WEEE)	11
Product support.....	73

R

Radio Frequency (RF) interference.....	28
RayNet	
cables	94–95
RayNet cable	47
RayNet connection	46
RCR-SD/USB.....	17
Recovery mode	64
Regulatory standards	9
RJ45	
cables	95
Routine checks.....	61

S

SeaTalkhs	
cables	95
SeaTalkng	
Adaptor cables	100
Backbone cables	99
Connectors	99

Kits	97
Power cables	99
Spur cables.....	98
SeaTalkng cables.....	97
SeaTalkng connection.....	45
Service Center.....	73
Servicing.....	61
Software updates	27
Spares	93
Support forum	75
Suppression ferrite	47
Surface mounting	31
Surface temperature.....	26
System examples	17

T

Technical specification	
Approvals.....	79, 83, 87, 91
Compliance.....	79, 83, 87, 91
Connections specification.....	78, 82, 86, 90
Environmental specification.....	77, 81, 85, 89
Internal GNSS receiver specification	78, 82, 86, 90
LCD specification.....	77, 81, 85, 89
Physical specification.....	77, 81, 85, 89
Power specification.....	77, 81, 85, 89
Product markings.....	9
Technical support.....	73, 75
Tools	30
Tools required	30
Touch control	16
Touch in connection.....	54
Touch out connection.....	54
Training courses.....	75
Troubleshooting	63
GNSS	65
GPS.....	65
Typical system.....	17

V

Ventilation	25
-------------------	----

Video app	
HDMI IN	50
Video connection	50

W

Warranty	11, 73
WEEE Directive	11
What's in the box.....	21



Raymarine (UK / EU)

Marine House, Cartwright Drive,
Fareham, Hampshire.
PO15 5RJ.
United Kingdom.

Tel: (+44) (0)1329 246 700

www.raymarine.co.uk

Raymarine (US)

110 Lowell Road,
Hudson, NH 03051.
United States of America.

Tel: (+1) 603-324-7900

www.raymarine.com



Raymarine®